



20/26 HP 4WD (MITSUBISHI ENGINE)
9F+3R TRANSMISSION (WITH PC/DC LEVER)

SPARE PARTS CATALOGUE



SPARE PARTS CATALOGUE

FOR AVENGER TRACTOR MODELS
20/26 HP 4WD (MITSUBISHI ENGINE)
9F+3R TRANSMISSION (WITH PC/DC LEVER)

For more information, write to:
PREET TRACTORS PVT. LTD.
P.O. Box-28, Patiala Road, Nabha – 147 201 Punjab (INDIA)
Tel.: 01765-220400, 222649
Email: preettractors@sancharnet.in | Visit us: www.preet.co

BOOKLET NO. 007/12/22

INTRODUCTION

We are pleased to present this December, 2022 edition `Preet Tractors Avenger Series' Spare Part Catalogue for models 20/26 HP 4WD (MITSUBISHI ENGINE) 9F+3R TRANSMISSION (WITH PC/DC LEVER) updated as per current production.

This part catalogue has been prepared to help the customer in ordering parts & also give an idea of assembly sequence through exploded views in the respective layouts.

Use only genuine spare parts available from 'Preet Tractors' works or any of the authorized dealers of the company.

We have taken utmost care to make this catalogue easy to understand all the details of the components / sub-assemblies of the tractor.

We hope all the users of this catalogue will find it useful & your suggestion for improving this catalogue shall be most welcome.

PREET TRACTORS PVT. LTD.

HOW TO USE THIS SPARE PARTS CATALOGUE

Each assembly has been given a Group No. such as P-1, P-2, P-3 etc. The same are illustrated in the index page.

The information in each group is added in a tabular form having 6 columns

- Column (1): Represents **Sr. No.** of the part as shown in the exploded assembly drawing
- Column (2): Represents the **Model** in which particular part is used, in this manual A20-26 MHI (2WD & 4WD) Models are covered
- Column (3): Represents the **Part No.** to be used for ordering.
- Column (4): Represents **Part Name** i.e. name of the part.
- Column (5): Represents **Qty.** of the part used in that assembly.
- Column (6): Represents **Remarks** any special comment for that part.

Note: Where – (dash) is mentioned under Column 5 (Qty.), it means that particular part is not being used for that particular Model.
Where (AR) (As required) is mentioned, it means that quantity of that particular part depends on our assembly conditions.

DIRECTION FOR ORDERING SPARE PARTS

To avoid delay, please quote the following information clearly:-

1. Model of tractor
2. Part No., Part Name and Quantity required
3. Mode of transport
4. Complete address of the ordering party

CAUTION

Exploded Assembly Diagrams, Spare Parts and Specifications are not binding in detail and are subject to alteration/modification and improvements without notice.

INDEX			
GROUP	DESCRIPTION	GROUP	DESCRIPTION
P-1	CYLINDER HEAD	P-29	FUEL PUMP
P-2	VALVE DRIVE	P-30	NOZZLE
P-3	ROCKERCOVER, NAMEPLATE& BREATHER	P-31	FUEL PIPE
P-4	CAMSHAFT	P-32	FUEL FILTER
P-5	CRANK CASE	P-33	FUEL FILTER: D
P-6	CRANK SHAFT BEARING	P-34	GOVERNER
P-7	GEAR OR CHAIN CASE	P-35	INJECTION PUMP
P-8	GEAR OR CHAIN CASE-D	P-36	FUEL INJECTION PUMP DRIVE
P-9	FLYWHEEL HOUSING	P-37	STARTER
P-10	OIL PAIN	P-38	GENERATOR
P-11	ENGINE SUPPORT	P-39	REGULATOR
P-12	PISTON	P-40	SPEED CONTROL
P-13	CONNECTING ROD	P-41	OVERHAUL GASKET KIT
P-14	CRANKSHAFT	P-42	CYLINDER HEAD & LIFTING EYE
P-15	FLYWHEEL :D	P-43	VALVE MECHANISM
P-16	FRONT PTO	P-44	ROCKER COVER
P-17	INLET SYSTEM	P-45	CAMSHAFT & TAPPET
P-18	EXHAUST SYSTEM	P-46	CRANKCASE (ASSY)
P-19	EXHAUST PIPE : D	P-47	CRANKCASE (OIL SEAL CASE) & DRAIN COCK & PIPE
P-20	OIL SCREEN	P-48	MAIN BEARING
P-21	OIL FILTER	P-49	PISTON
P-22	BREATHER	P-50	CONNECTING ROD
P-23	WATER PUMP	P-51	CRANKSHAFT & CRANK PULLEY
P-24	THERMOSTAT	P-52	TIMING GEAR
P-25	WATER HOSE & PIPE	P-53	TIMING GEAR CASE
P-26	WATER TEMPERATURE GAUGE UNIT	P-54	FUEL SYSTEM
P-27	FAN	P-55	FUEL SYSTEM (NOZZLE ASSY)
P-28	DRIVE BELT	P-56	FUEL FILTER



INDEX			
GROUP	GROUP	GROUP	GROUP
P-57	GOVERNER	P-86	DIFFERENTIAL LOCK ARRANGEMENT
P-58	GOVERNER	P-87	4WD IDLER GEAR ASSY
P-59	INJECTION PUMP	P-88	INTERMEDIATE TRANSMISSION PLATE
P-60	FUEL INJECTION PUMP DRIVE	P-89	GEAR TRAIN PTO & SHIFTER ARRANGEMENT
P-61	WATER PUMP & WATER PUMP PULLEY	P-90	DIFFERENTIAL LOCK CONTROL ASSEMBLY
P-62	COOLING SYSTEM	P-91	HITCH REAR SWINGING DRAWBAR SUBASSEMBLY
P-63	FAN, FAN SPACER & V-BELT	P-92	TRANSMISSION ASSEMBLY DRESSED UP
P-64	OIL PAN & RELEATED PARTS	P-93	GEARBOX & DIFF. HOUSING MTG.
P-65	OIL PUMP	P-94	REAR AXLE HSG RH
P-66	INLET & EXHAUST SYSTEM	P-95	REAR AXLE HSG LH
P-67	FLYWHEEL HOUSING	P-96	HARDWARE CLUTCH HSG. TO GB HSG SPEED
P-68	STARTER (12V – 1.7KW)	P-97	CLUTCH HOUSING NPT
P-69	GLOW PLUG & WIRE	P-98	CLUTCH HSG MONTING
P-70	ALTERNATOR (12V – 65A)	P-99	CLUTCH RELEASE MECHANISM
P-71	ENGINE CONTROL (STOP)	P-100	TOP COVER GBH SPEED
P-72	ENGINE CONTROL (STOP)	P-101	GEARBOX HOUSING SPEED
P-73	INSTRUMENT	P-102	IDLER GEAR REVERSE SPEED
P-74	OVERHAUL GASKET KIT	P-103	DRIVE TRAIN ASSY. 4WD
P-75	RADIATOR & RELATED PARTS	P-104	GEAR TRAIN SPEED
P-76	SINGLE CLUTCH ASSY. WITH ENGINE	P-105	INPUT DRIVE ASSEMBLY
P-77	DRY AIR CLEANER & RELATED PARTS	P-106	GEAR SHIFTER SPEED
P-78	SILENCER ASSY. & RELATED PARTS	P-107	SHIFTER ROD ASSY. SPEED
P-79	DIFFERENTIAL HOUSING	P-108	STEERING WHEEL AND RELATED PARTS
P-80	BOTTOM COVER PLATE MID PTO	P-109	LEVER CONTROL 2WD 4WD SUB ASSEMBLY
P-81	DIFFERENTIAL CAGE ASSEMBLY	P-110	LEVER SPEED GEAR SHIFT SUBASSEMBLY
P-82	DIFFERENTIAL SUB ASSY. LH	P-111	LINKAGE CLUTCH CONTROL SUBASSEMBLY
P-83	DIFFERENTIAL SUB ASSY. RH	P-112	LINKAGE ASSEMBLY BRAKE CONTROL
P-84	GEAR TRAIN RANGE	P-113	HYDRAULIC LIFT ASSY.
P-85	GEAR SHIFTER RANGE	P-114	CYLINDER ASSEMBLY

INDEX			
GROUP	DESCRIPTION	GROUP	DESCRIPTION
P-115	INTERNAL LEVER ASSY.	P-133	FENDERS SUB ASSEMBLY
P-116	INTERNAL LEVER ASSY.	P-134	REAR TYRE ASSY. & RELATED PARTS
P-117	TOP LINK BRACKET ASSY.	P-135	FUEL TANK ASSY & RELATED PARTS
P-118	CONTROL LEVER ASSY.	P-136	BONNET ASSY. & RELATED PARTS
P-119	CONTROL LEVER ASSY.	P-137	DRIVER SEAT & RELATED PARTS
P-120	THREE POINT LINKAGE SUBASSEMBLY	P-138	HARNESS ASSY. & RELATED PARTS
P-121	LEVER POSITION AND DRFAT CONTROL SUBASSEMBLY	P-139	LIGHT , SWITCHES & RELATED PARTS
P-122	LEVER PTO GEAR SHIFT SUBASSEMBLY	P-140	DECAL MODEL IDENTIFICATION
P-123	LEVER RANGE HIGH LOW MEDIUM GEAR SHIFT SUBASSEMBLY	P-141	PROPELLER SHAFT ASSEMBLY
P-124	PLATFORM SUBASSEMBLY	P-142	GUARD ASSEMBLY PROPELLER SHAFT
P-125	THROTTLE LINKAGE & RELATED PARTS	P-143	BUMPER ASSY. & RELATED PARTS
P-126	TUBING AUXILLIARY VALVE SUBASSEMBLY	P-144	ACCESSORIES
P-127	TUBING POWER STEERING SUBASSEMBLY		
P-128	TUBING HYDRAULIC SUCTION SUBASSEMBLY		
P-129	FRONT AXLE BRACKET & RELATED PARTS(4WD)		
P-130	HOUSING SWIVEL FRONT AXLE LH / RH)		
P-130 A	HOUSING SWIVEL FRONT AXLE LH / RH)		
P-130 B	RETAINER AND BEVEL PINION SHAFT ASSY.		
P-130 C	PILLOW BLOCK SUB-ASSEMBLY FRONT & REAR		
P-130 D	DIFFERENTIAL ASSEMBLY FRONT AXLE		
P-130 E	INDICATOR FRONT AXLE OIL LEVEL P – 130 E		
P-130 F	AXLE CYLINDER AND LINK ASSEMBLY		
P-130 G	GUARD STEERING CYLINDER		
P-131	ROPS FOLDABLE SUBASSEMBLY COMPACT		
P-132	FENDERS SUB ASSEMBLY		




CYLINDER HEAD

P-1

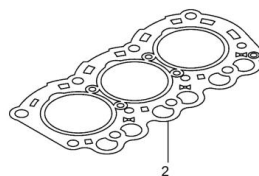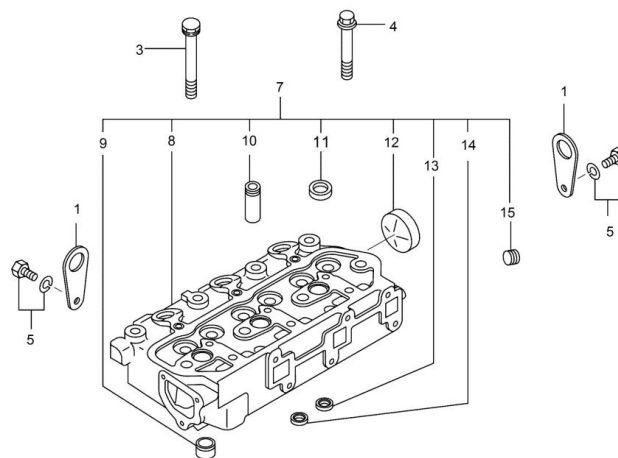


SUPPLY PARTS

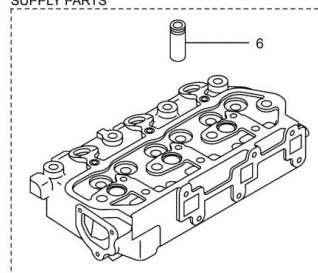



P-1

[illegible]

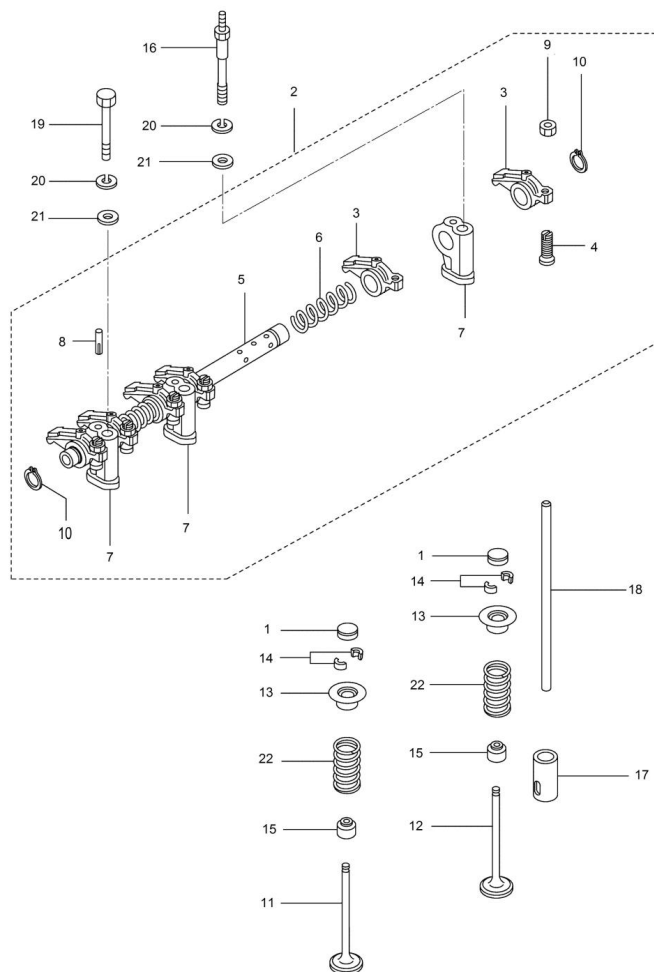




P-2

[illegible]



ROCKERCOVER, NAMEPLATE& BREATHER


P-3

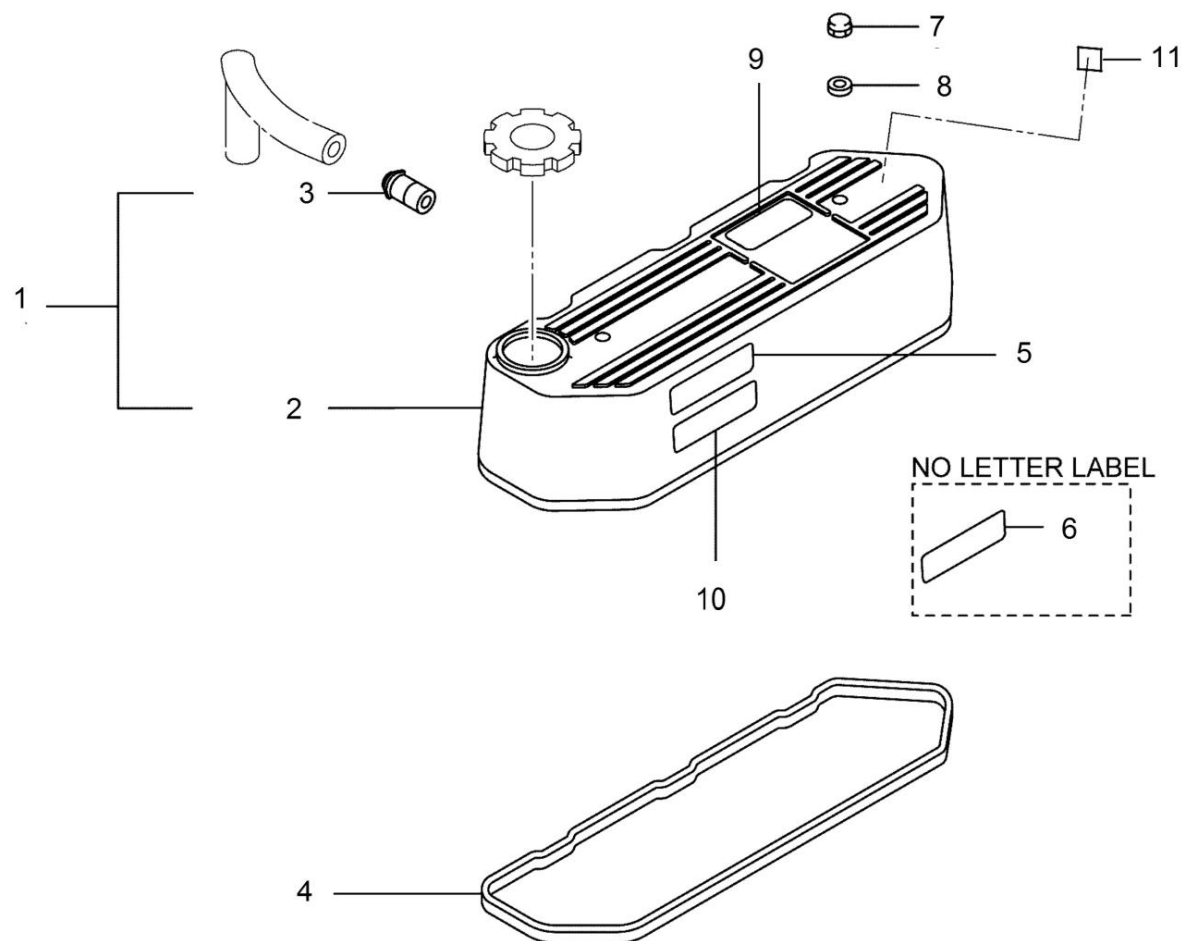



P-3


[illegible]

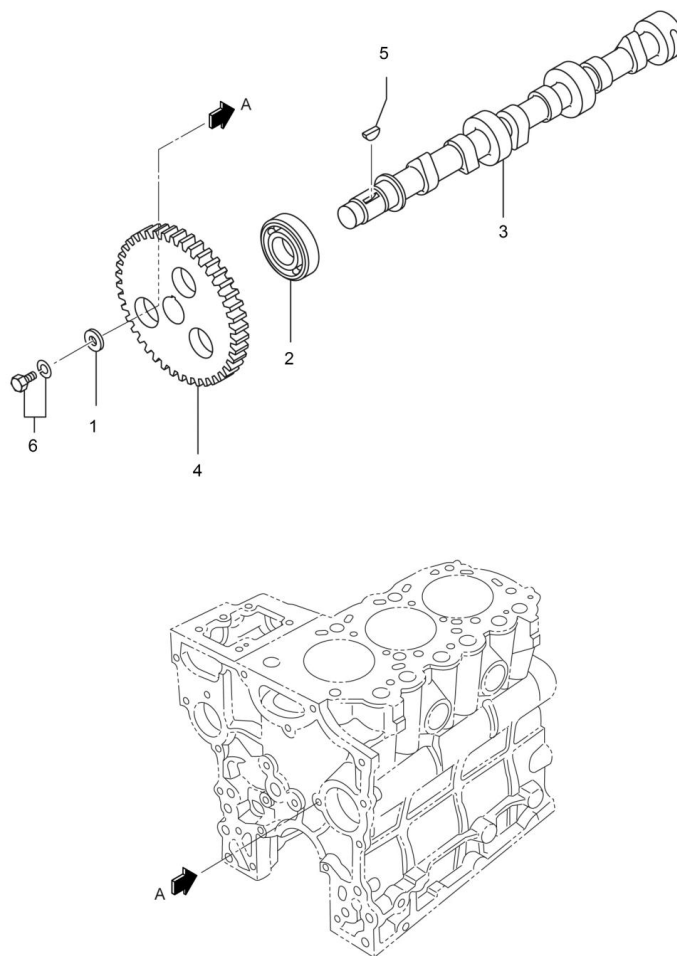



P-4

[illegible]

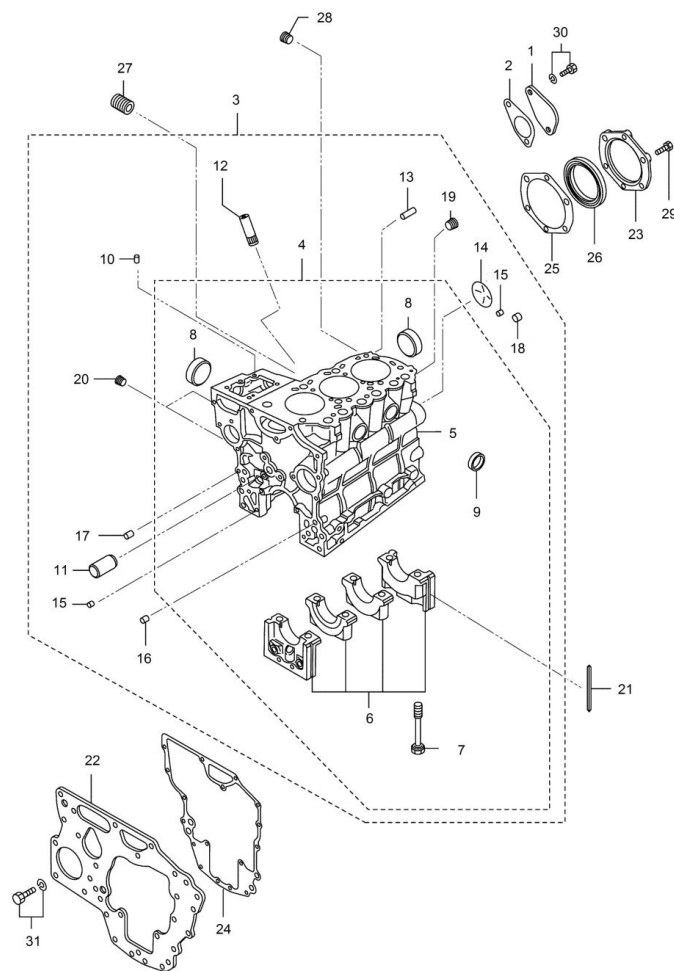



CRANK CASE


P-5

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	AVENGER20	Pm0101047	COVER	1	
2	AVENGER20	PM0101048	GASKET	1	
3	AVENGER20	PM0101571	BLOCK ASSY CYLINDER	1	
4	AVENGER20	*	BLOCK SUB ASSY CYLINDER	1	
5	AVENGER20	*	BLOCK CYLINDER	1	
6	AVENGER20	*	CAP ASSY , BEARING	1	
7		PM0101054	BOLT,BEARING CAP	8	
8	AVENGER20	PM0105038	CAP,SEALING	3	
9	AVENGER20	PM0101051	CAP,SEALING	2	
10	AVENGER20	PM0101572	PIN DOWEL	2	
11	AVENGER20	PM0101057	SHAFT,IDLER	1	
12	AVENGER20	PM0101058	GUIDE,OIL LEVEL GAGE	1	
13	AVENGER20	PM0101573	PIN DOWEL	1	
14	AVENGER20	PM0101060	PLUG,EXPANSION	1	
15	AVENGER20	PM0101574	BUSHING KNOCK	1	
16	AVENGER20	PM0101575	BUSHING KNOCK	1	
17	AVENGER20	PM0101576	BUSHING KNOCK	2	
18	AVENGER20	PM0101577	BUSHING KNOCK	3	
19	AVENGER20	PM0101065	PLUG,TAPERED	1	
20	AVENGER20	PM0102031	PLUG,TAPERED	3	
21	AVENGER20	PM0101066	SEAL,SIDE	4	
22	AVENGER20	PM0101578	PLATE FRONT	1	
23	AVENGER20	PM0101068	CASE,OIL SEAL	1	
24	AVENGER20	PM0101069	GASKET,FRONT PLATE	1	
25	AVENGER20	PM0101070	GASKET,OIL SEAL CASE	1	
26	AVENGER20	PM0101071	SEAL,OIL REAR	1	
27	AVENGER20	PM0101072	SHAFT,OIL FILTER	1	
28	AVENGER20	PM0101073	PLUG,TAPERED	1	
29	AVENGER20	PM0101579	BOLT	6	
30	AVENGER20	*	BOLT, W-WASHER	2	
31	AVENGER20	PM1304007	BOLT, W-WASHER	7	



CRANK SHAFT BEARING

P-6

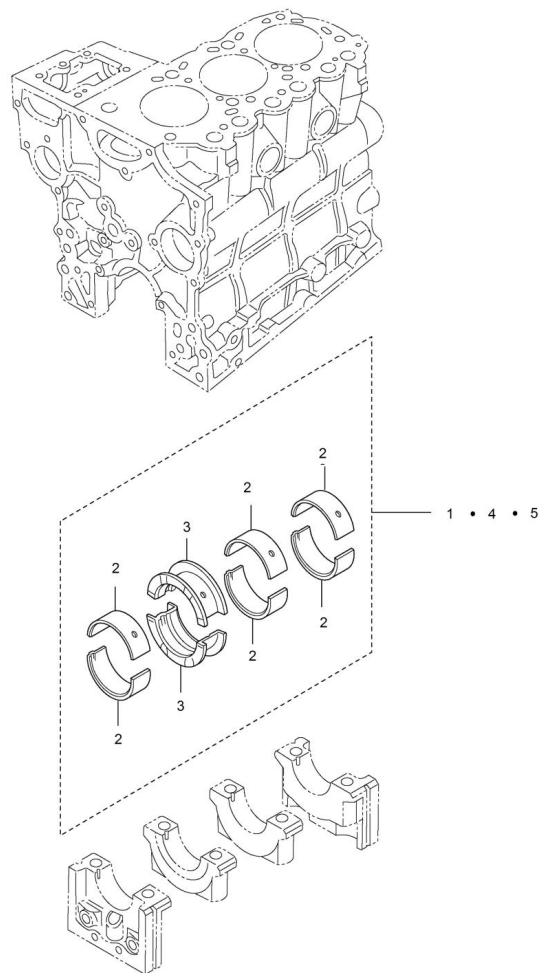




P-6

[illegible]



GEAR OR CHAIN CASE

P-7

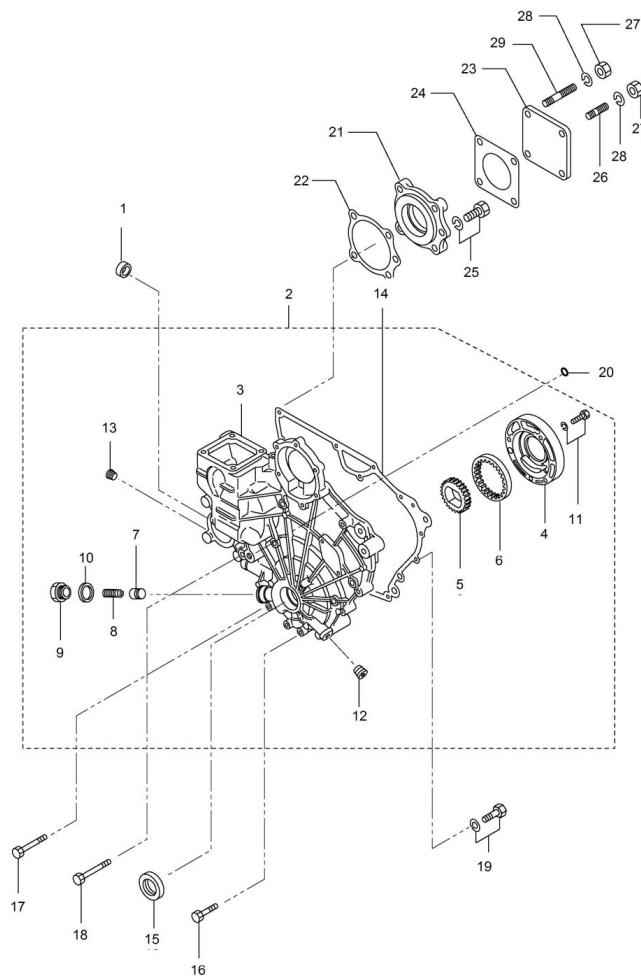




GEAR OR CHAIN CASE

P-7


S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	AVENGER20	Pm0102020	CAP,SEALING	1	
2	AVENGER20	PM0102104	CASE ASSY,GEAR	1	
3	AVENGER20	*	CASE SUB ASSY,GEAR	1	
4	AVENGER20	PM0102029	HOUSING,OILPUMP	1	
5	AVENGER20	PM0102105	GEAR,OILPUMP INNER(Z=24)	1	
6	AVENGER20	PM0102106	GEAR,OILPUMP	1	
7	AVENGER20	PM0102023	PLUNGER	1	
8	AVENGER20	PM0102026	SPRING,RELIEF	1	
9	AVENGER20	PM0102024	PLUG	1	
10	AVENGER20	PM0102022	GASKET	1	
11	AVENGER20	PM0102025	BOLT,W/WASHER	3	
12	AVENGER20	PM0102030	PLUG,TAPERED	1	
13	AVENGER20	PM0102031	PLUG,TAPERED	1	
14	AVENGER20	PM0102033	GASKET,GEAR CASE	1	
15	AVENGER20	PM0102034	SEAL,OIL	1	
16	AVENGER20	PM0102035	BOLT	3	
17	AVENGER20	PM0102037	BOLT	4	
18	AVENGER20	PM0102036	BOLT	1	
19	AVENGER20	PM1304007	BOLT,W/WASHER	4	
20	AVENGER20	PM0108324	O-RING	2	
21	AVENGER20	PM0102107	HOUSING,GEAR PUMP	1	
22	AVENGER20	PM0102108	GASKET,HOUSING	1	
23	AVENGER20	PM0102040	COVER,OIL PUMP SHAFT	1	
24	AVENGER20	PM0102070	GASKET,OIL PUMP COVER	1	
25	AVENGER20	*	BOLT,W/WASHER	1	
26	AVENGER20	PM0102074	STUD	1	
27	AVENGER20	PM1304008	NUT` 1	4	
28	AVENGER20	PM0105066	WASHER,SPRING	4	
29	AVENGER20	PM0102018	STUD	3	

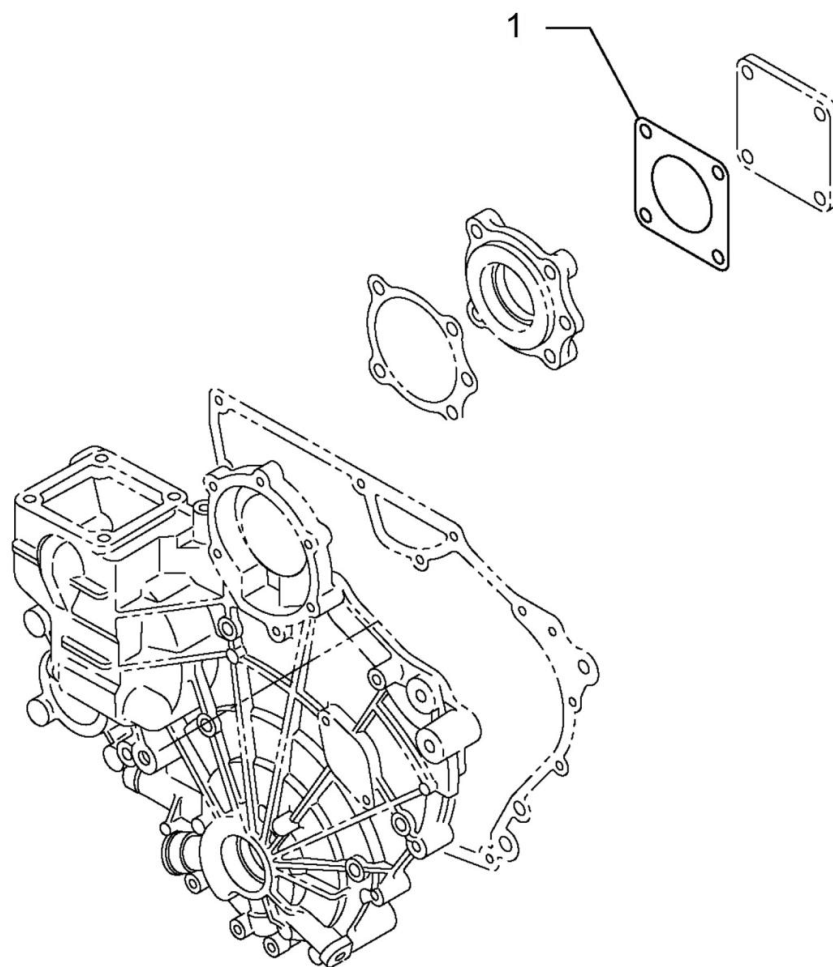



P-8


[illegible]

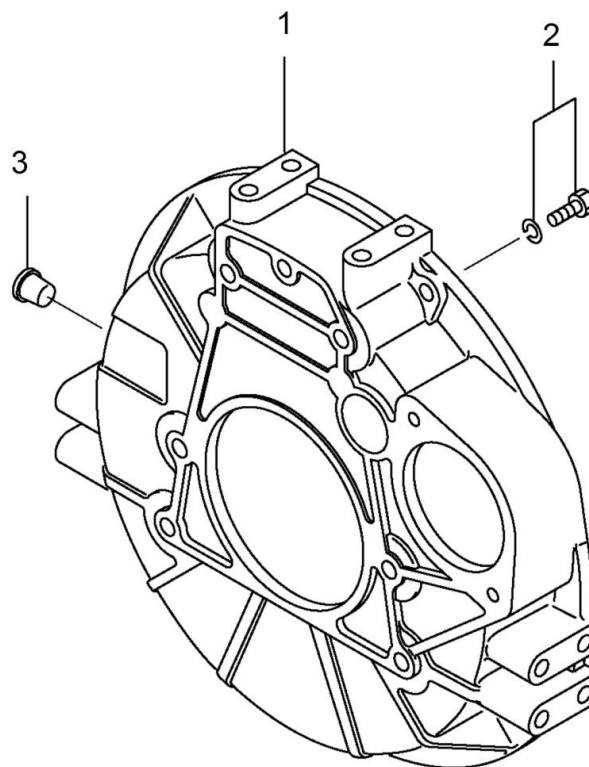



P-9


[illegible]

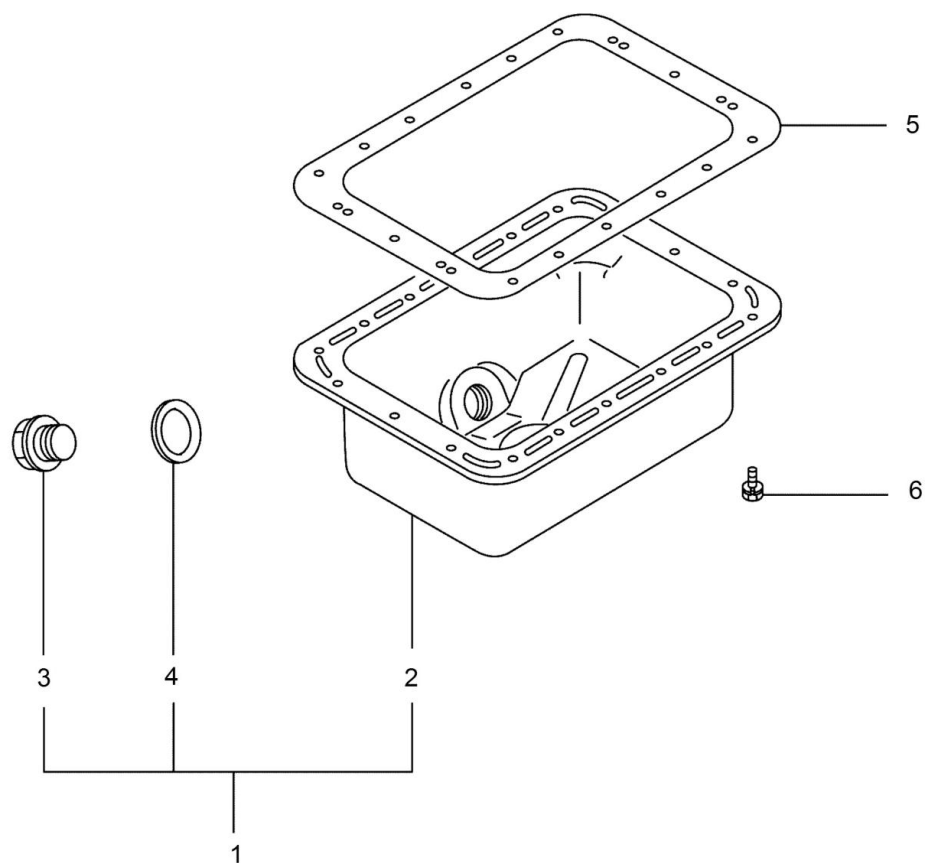



P-10


[illegible]

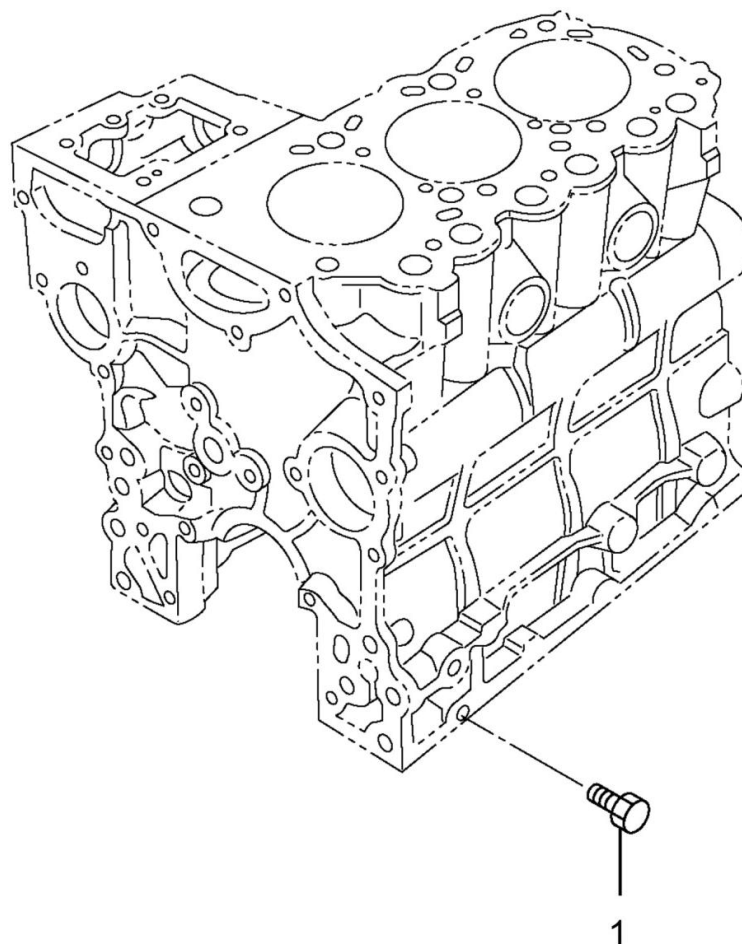



P-11


[illegible]

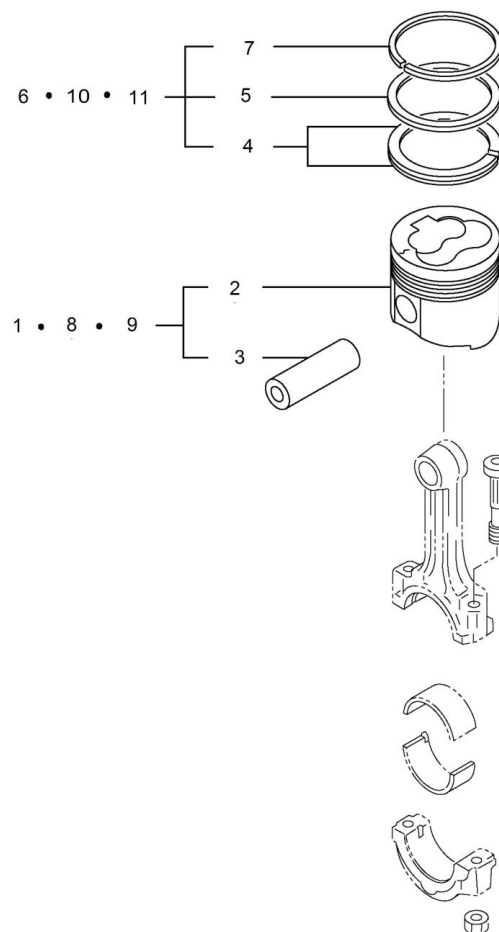



P-12


[illegible]

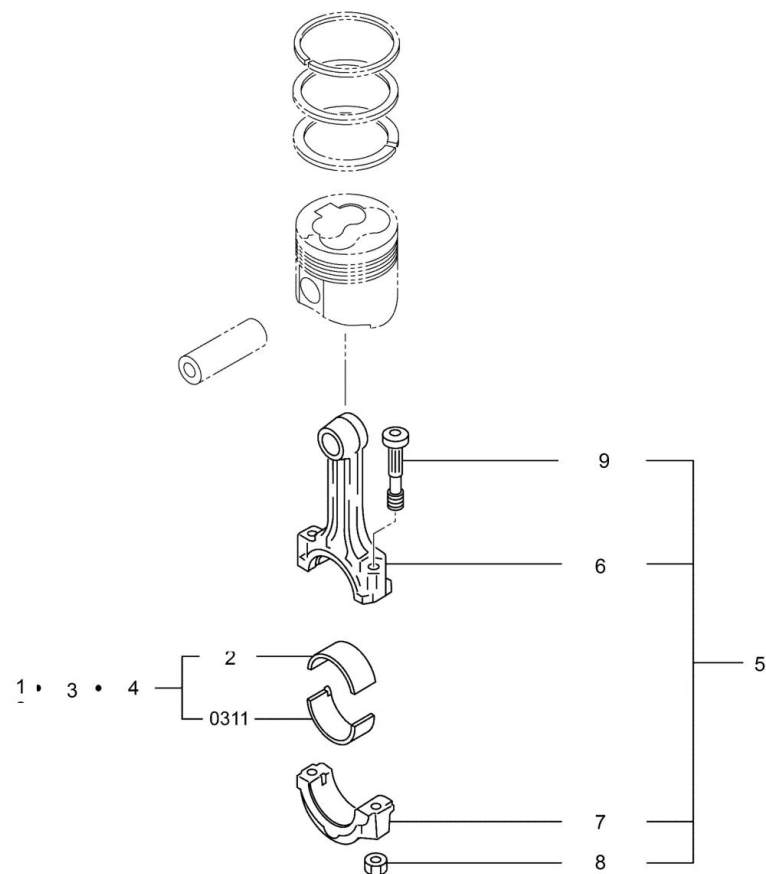



P-13


[illegible]

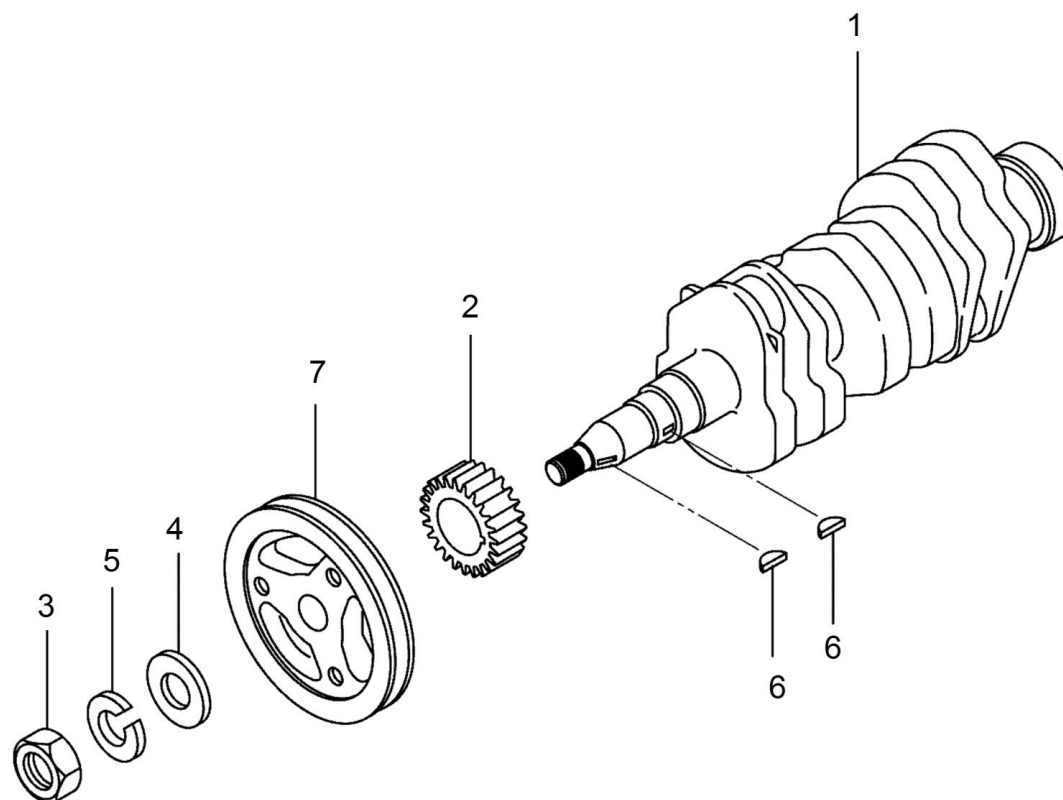



P-14


[illegible]

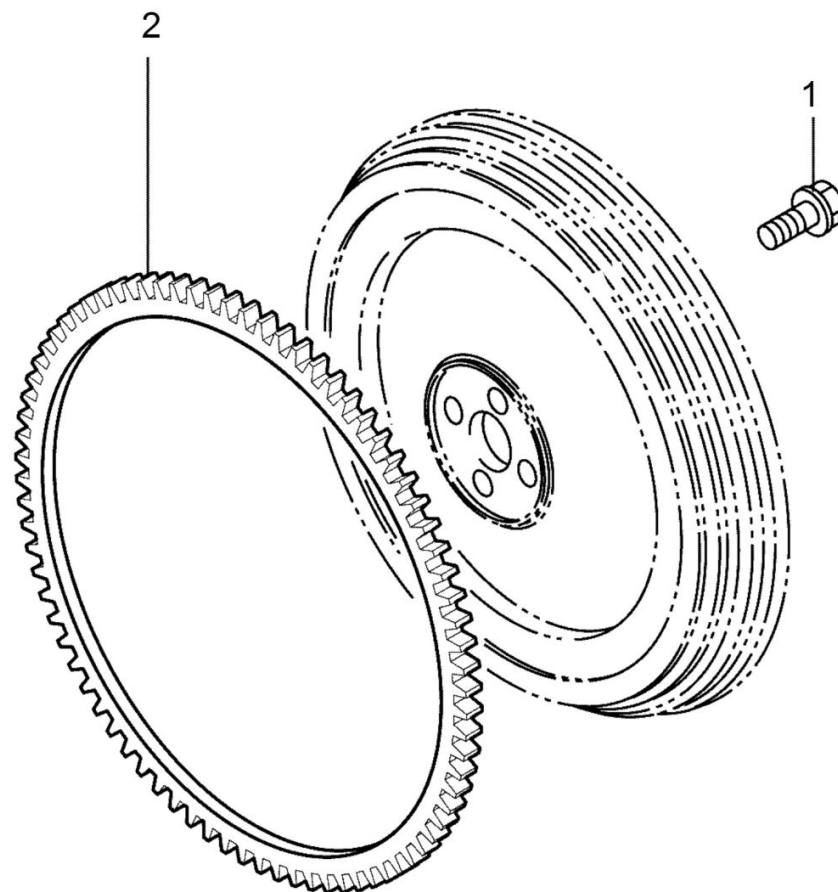



P-15


[illegible]

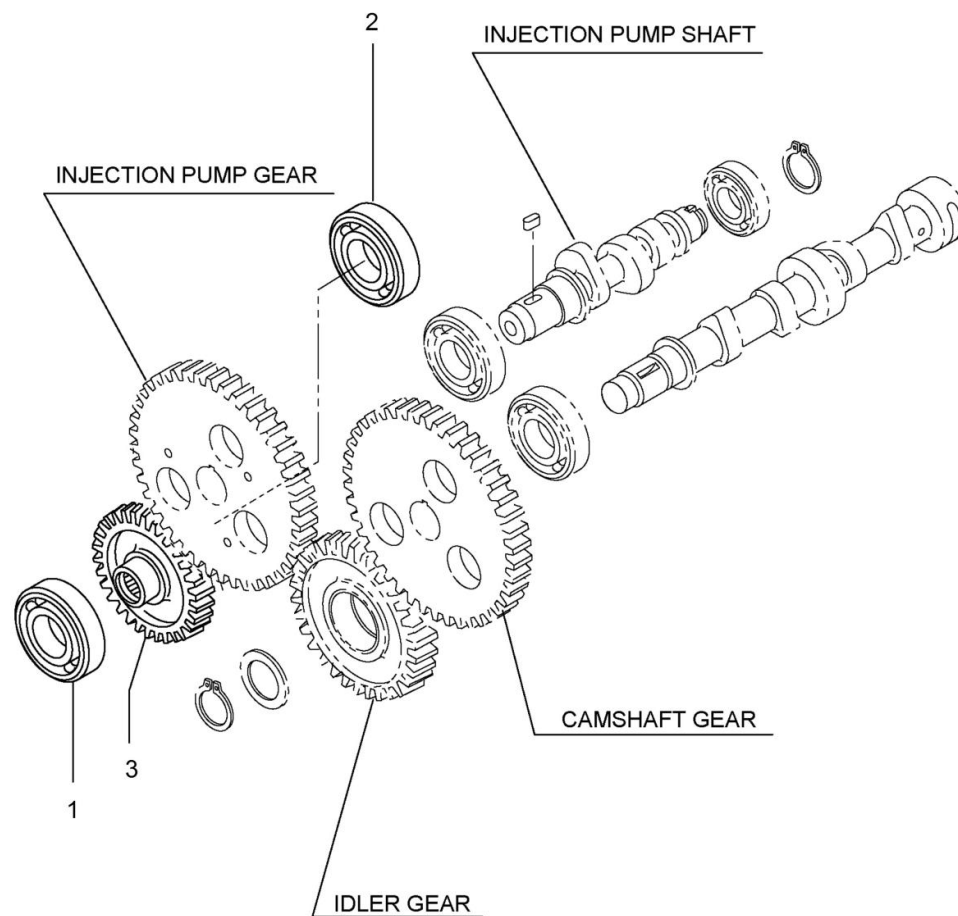



P-16

[illegible]

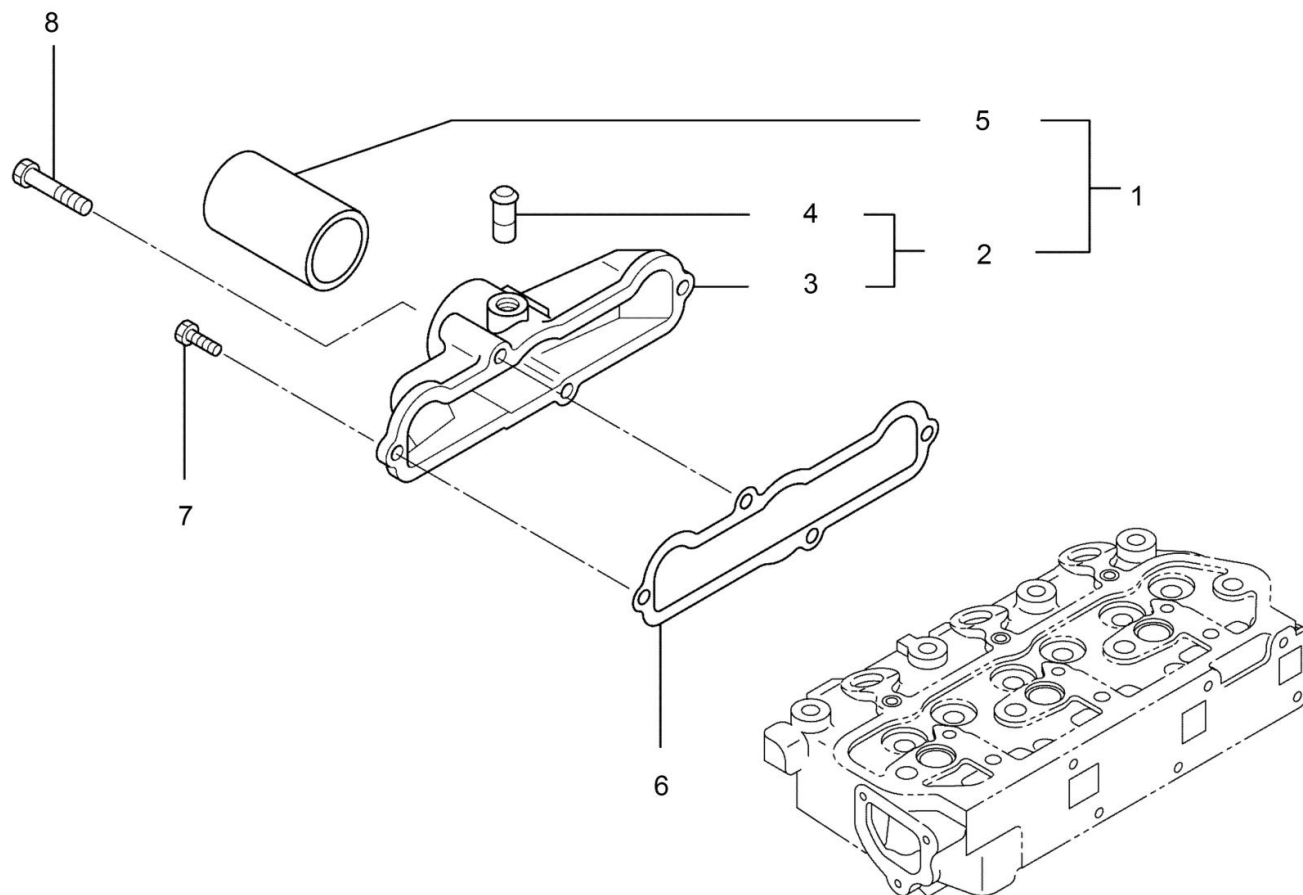




P-17

[illegible]



P-18


[illegible]

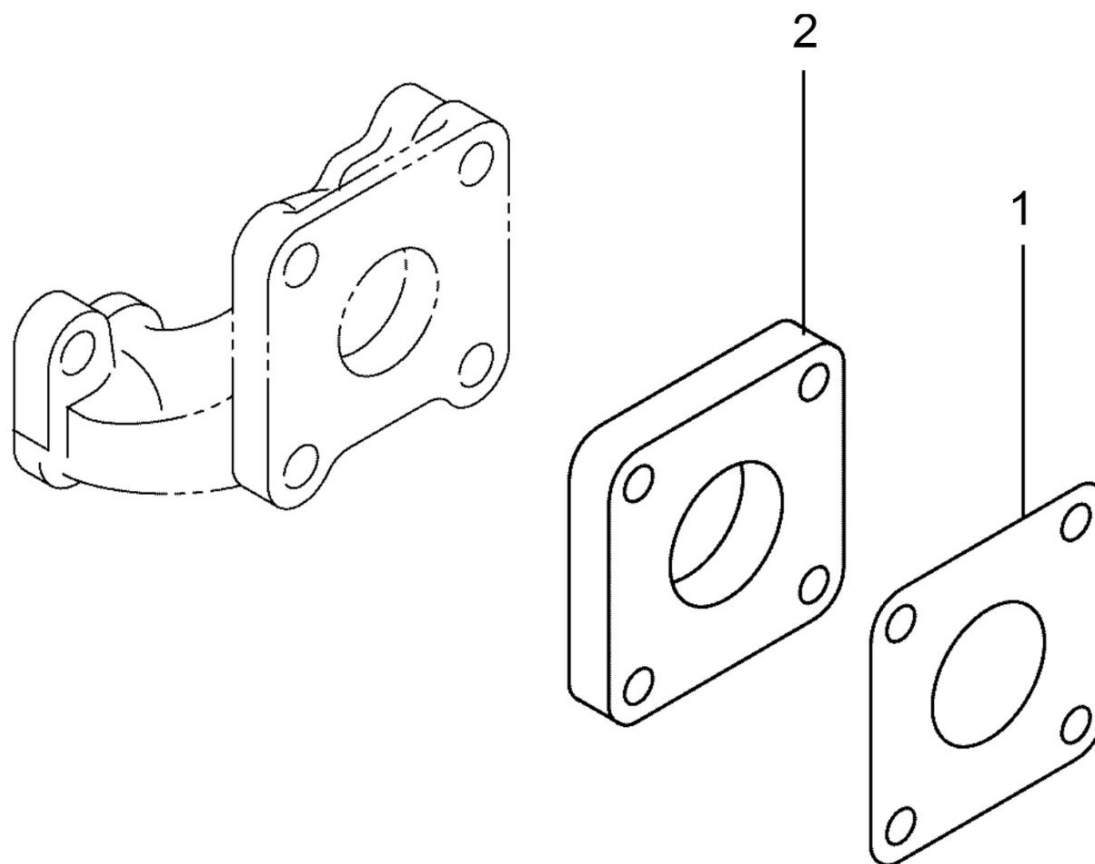



P-19


[illegible]

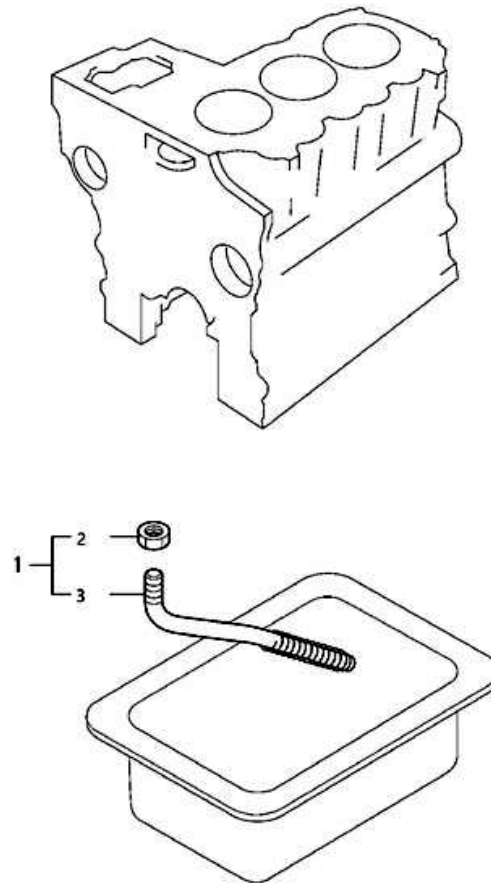



P-20


[illegible]

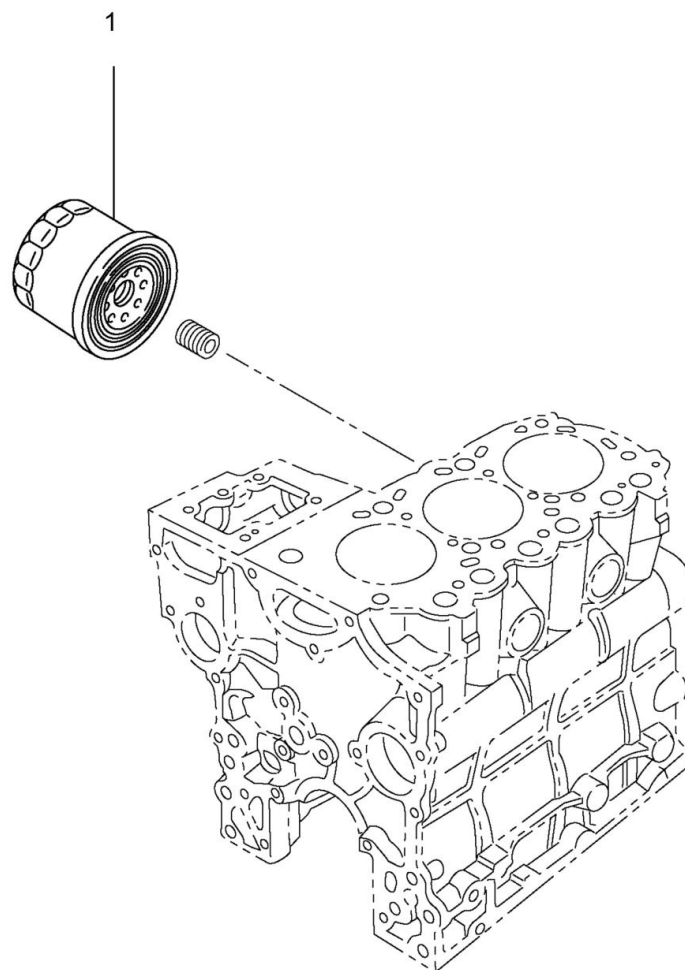



P-21


[illegible]

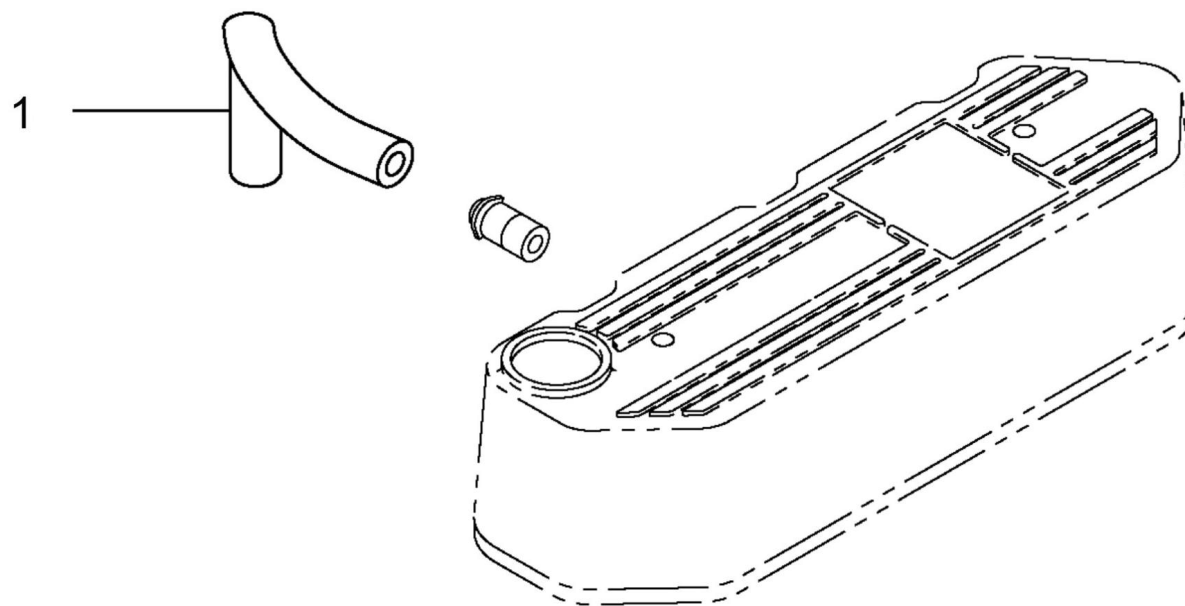



P-22


[illegible]

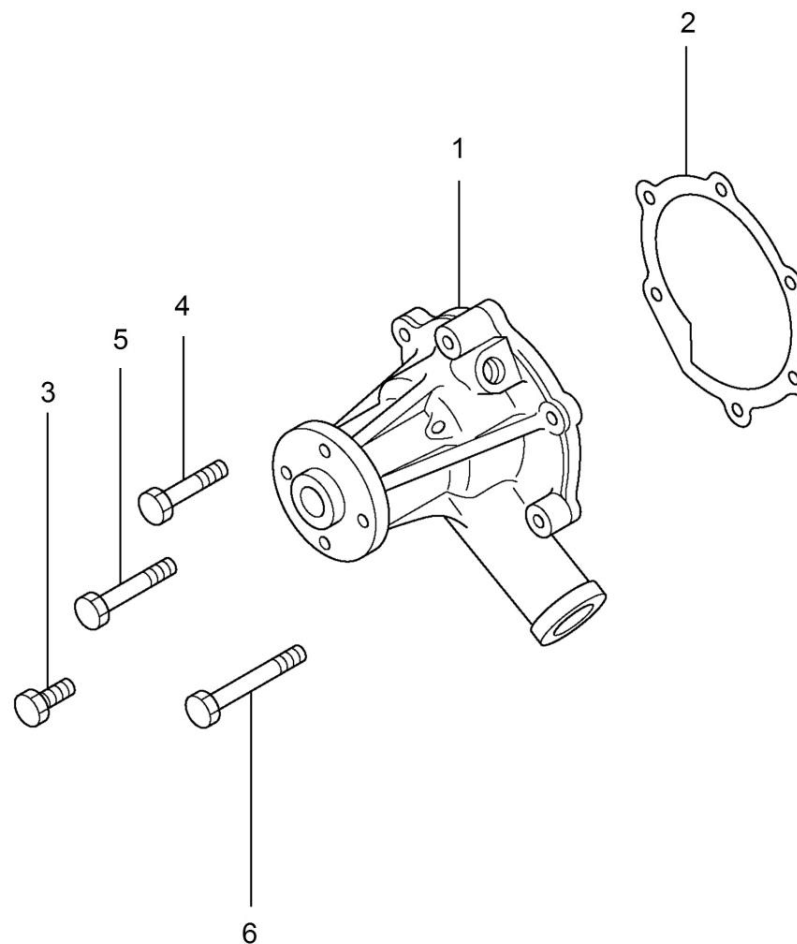



P-23


[illegible]

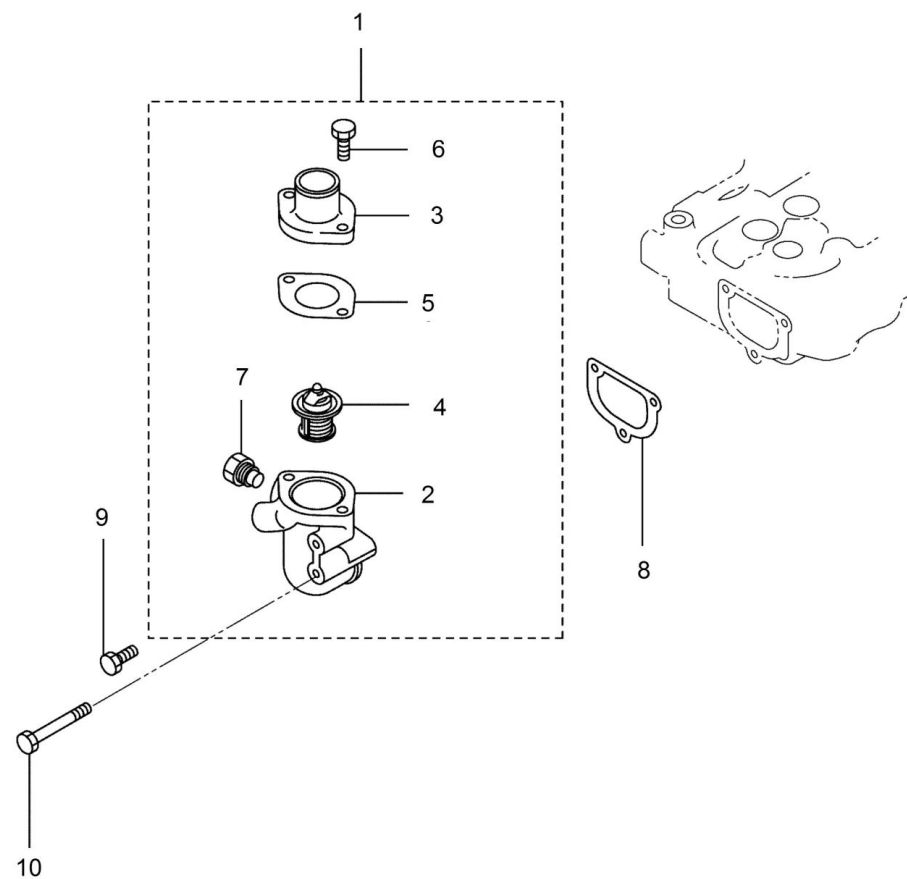



P-24


[illegible]

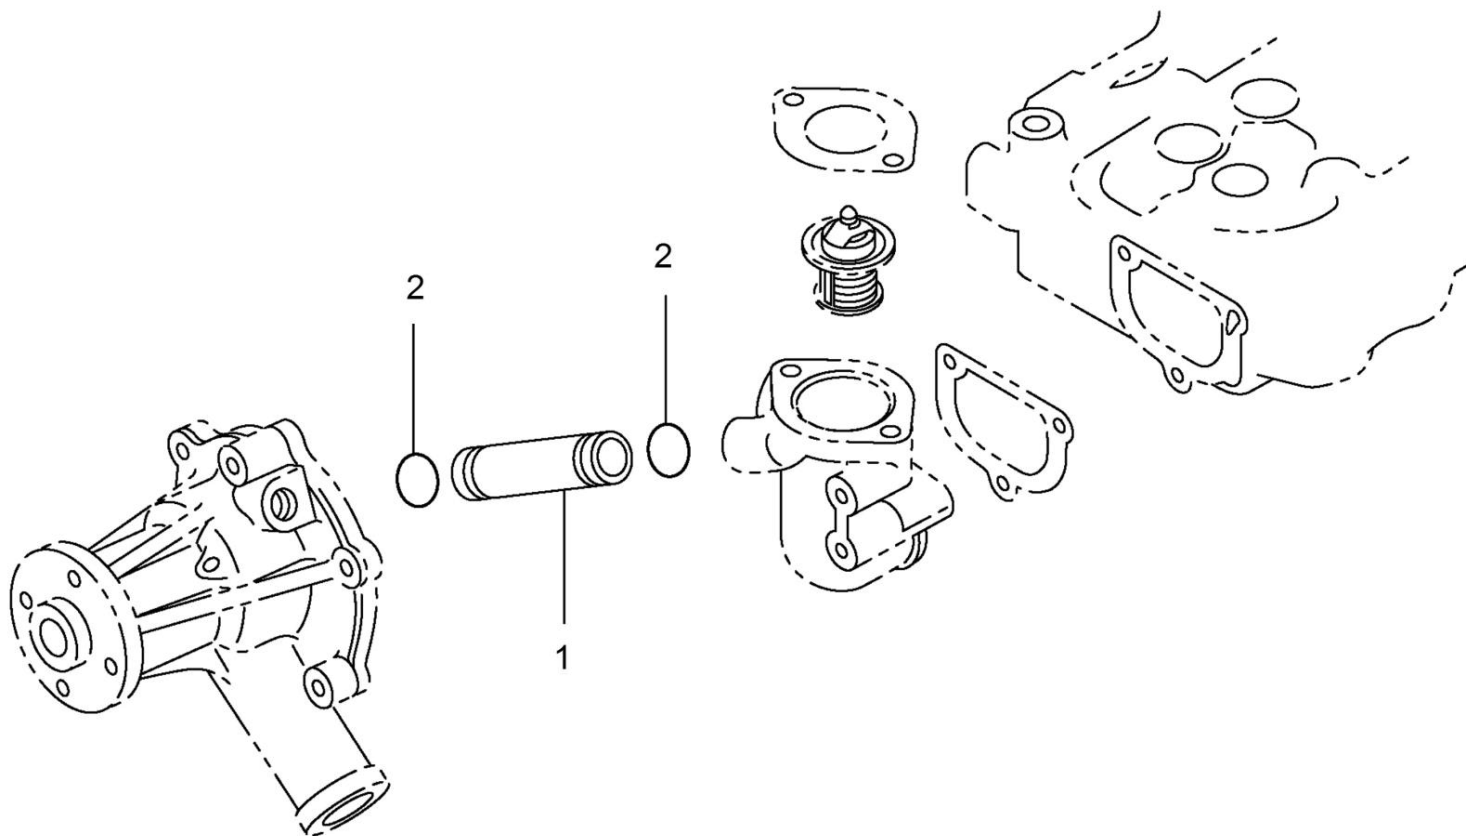



P-25


[illegible]

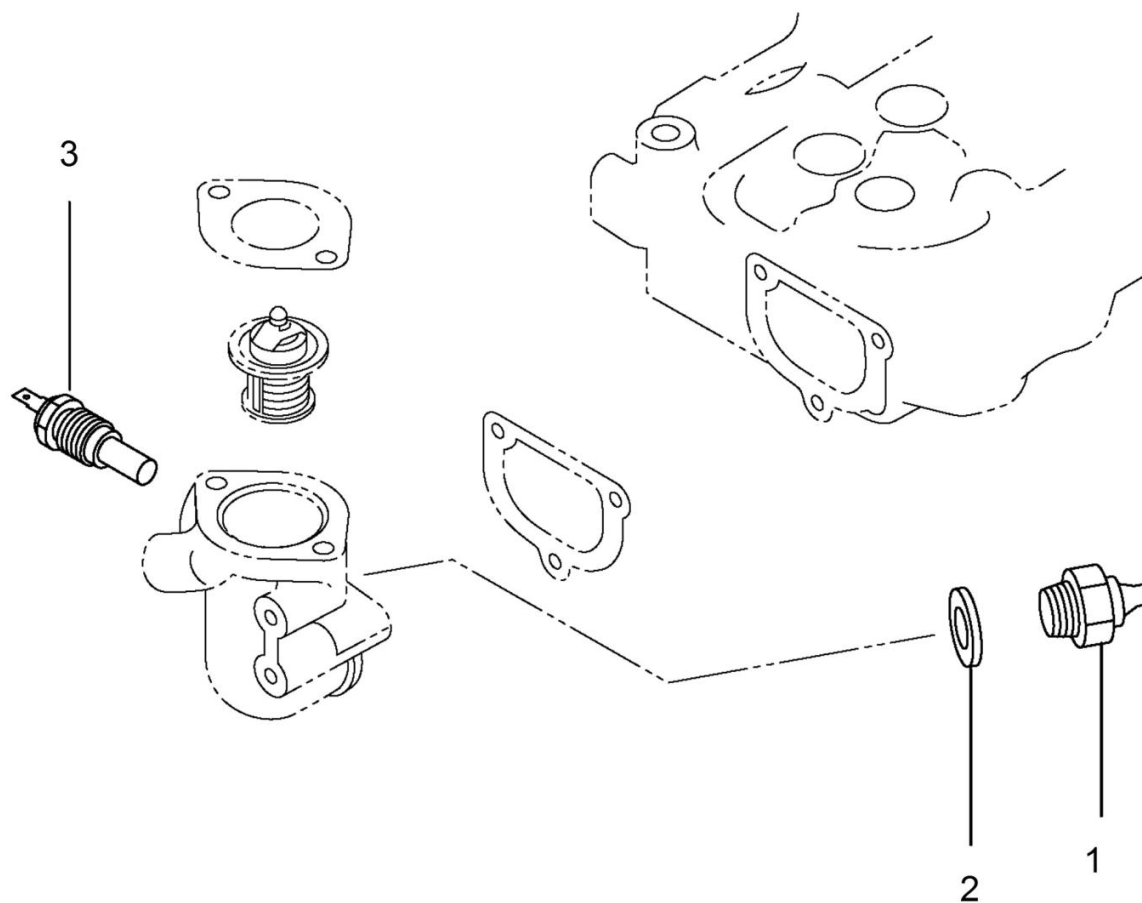



P-26

[illegible]

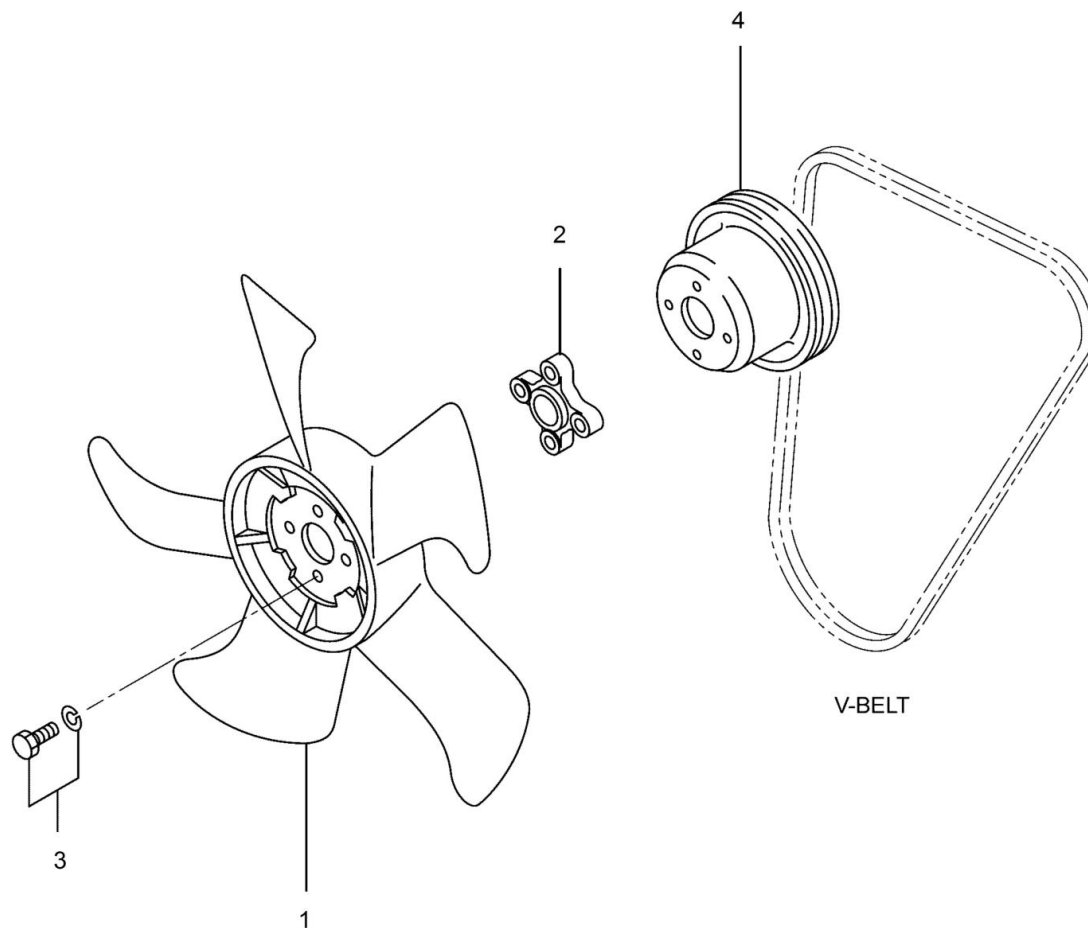




FAN

P-27


[illegible]

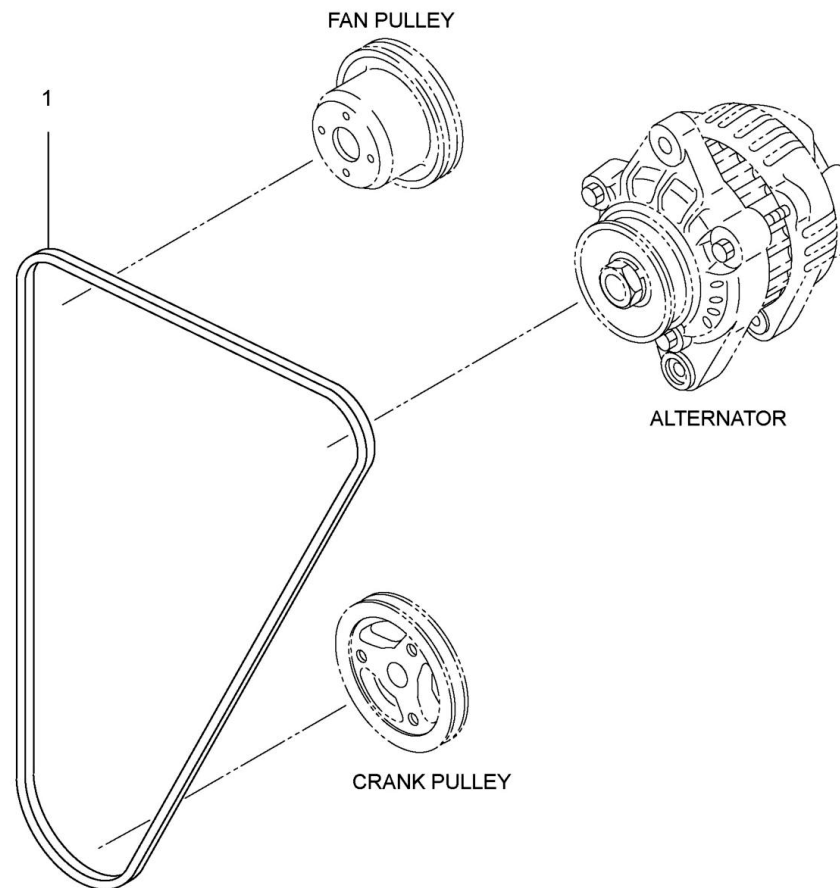



P-28


[illegible]

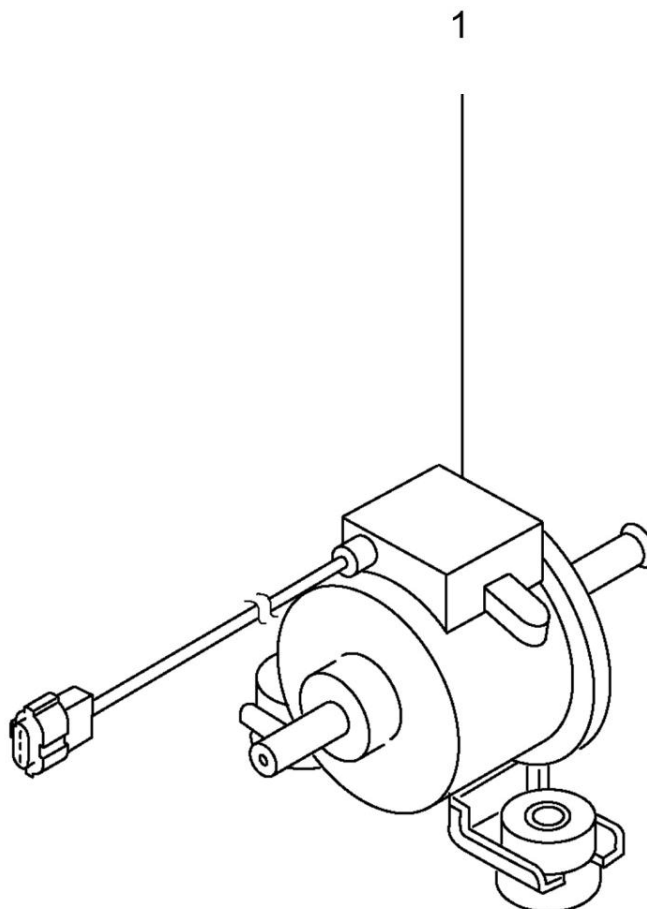



P-29


[illegible]

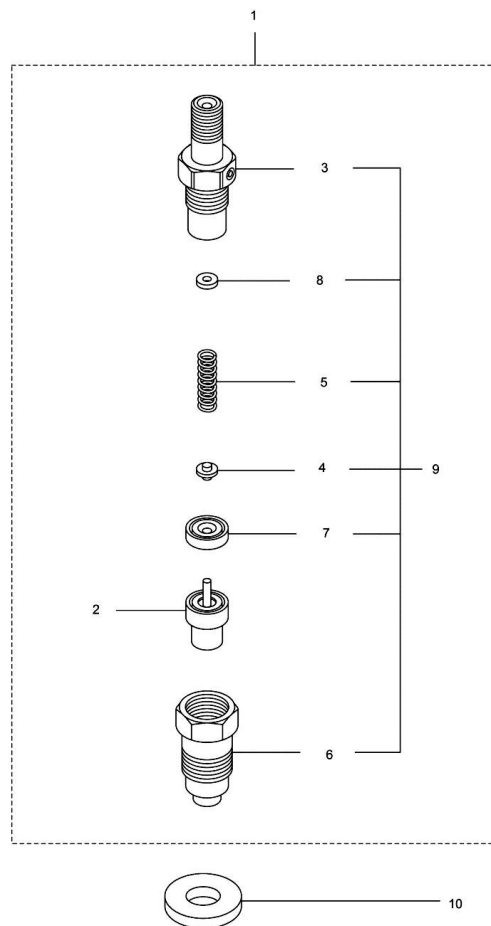



P-30


[illegible]

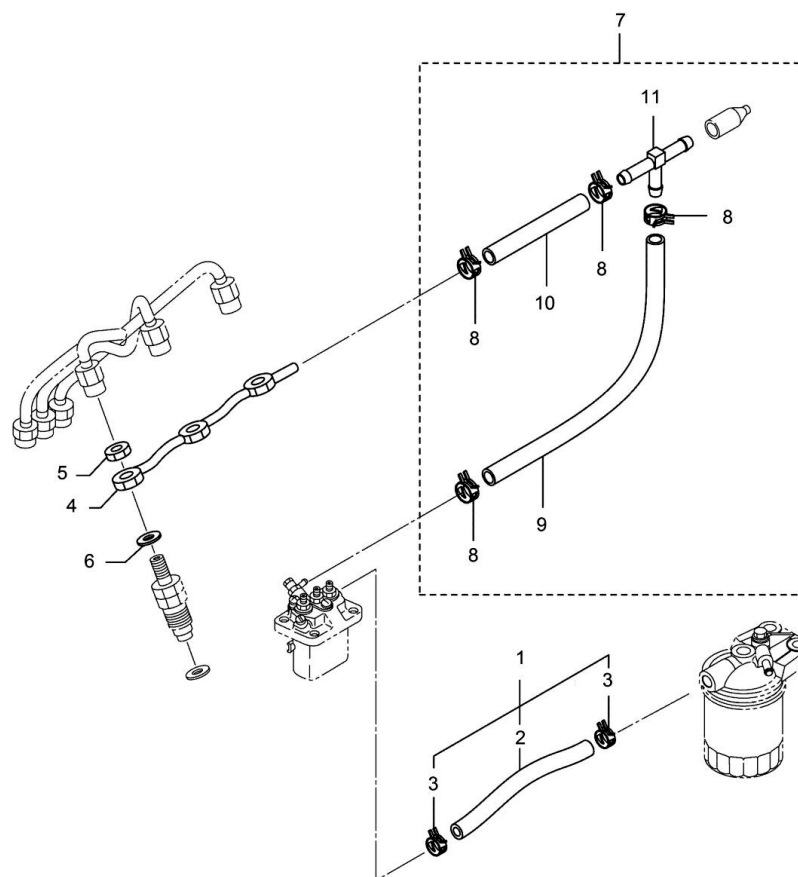



P-31


[illegible]

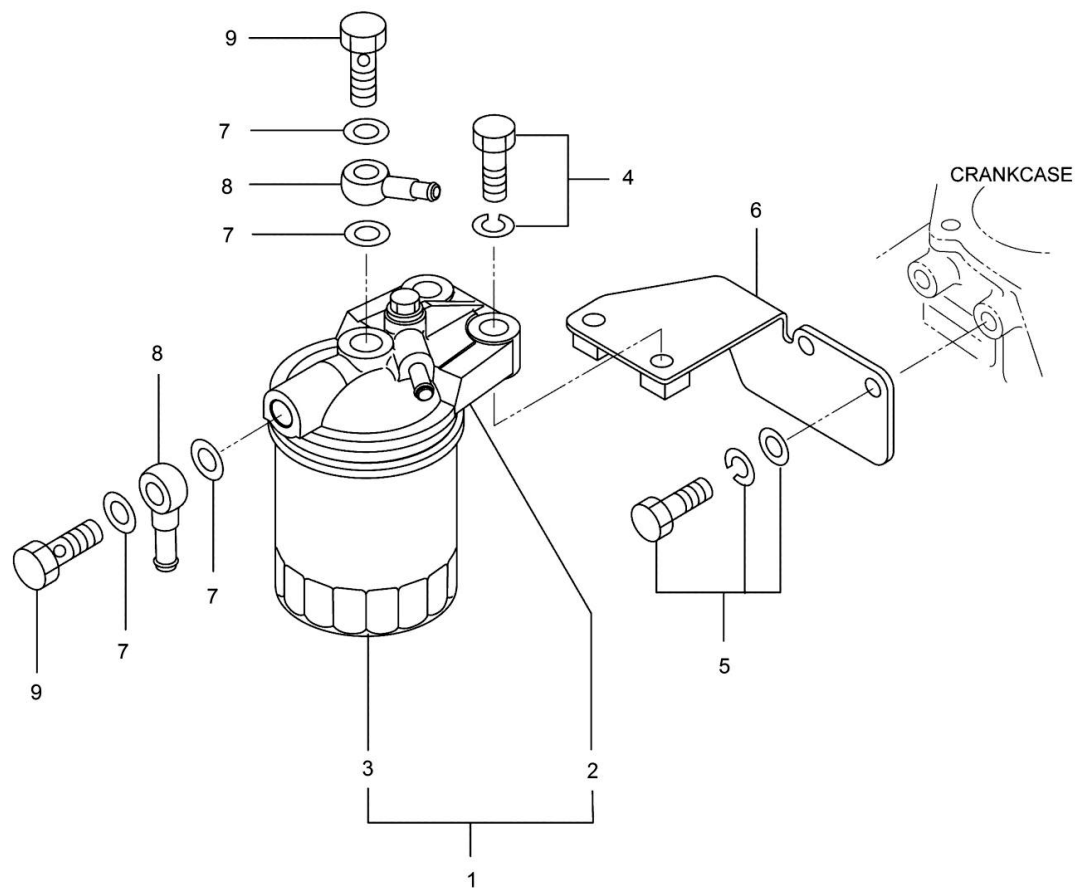



P-32


[illegible]

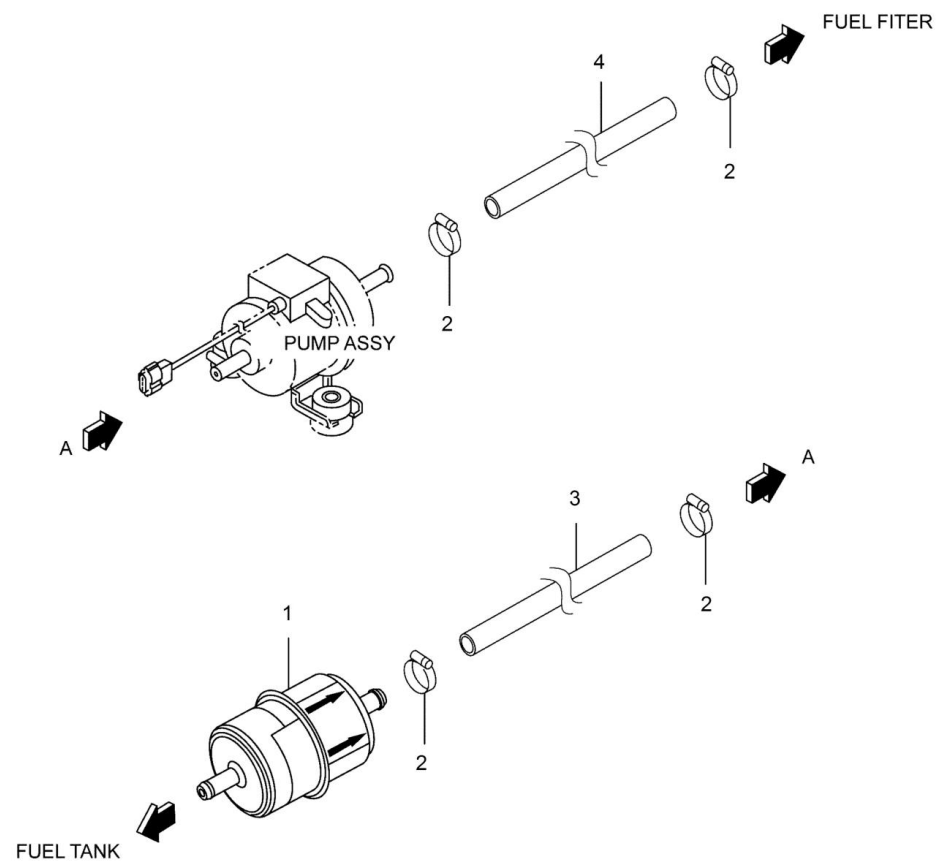



P-33

[illegible]

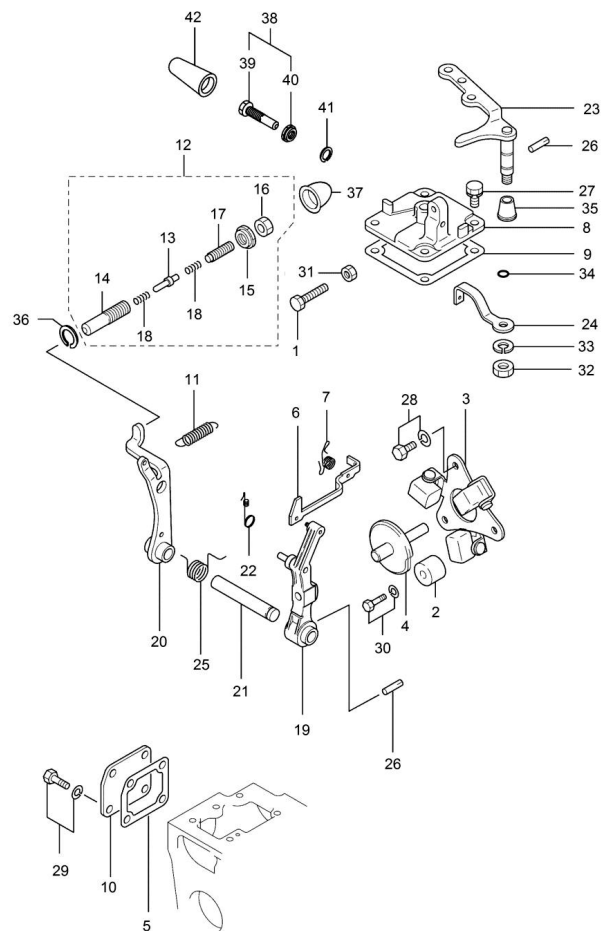




GOVERNER

P-34


S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	AVENGER20	Pm0108334	BOLT,LOW IDLE SET	1	
2	AVENGER20	PM0108106	STOPPER	1	
3	AVENGER20	PM0108335	WEIGHT ASSY,GOVERNOR	1	
4	AVENGER20	PM0108108	SHAFT ASSY,SLIDING	1	
5	AVENGER20	PM0108109	GASKET,TIE ROD COVER	1	
6	AVENGER20	PM0108336	ROD,TIE	1	
7	AVENGER20	PM0108337	SPRING,TIE ROD	1	
8	AVENGER20	PM0108059	COVER GOVERNOR	1	
9	AVENGER20	PM0108060	GASKET,GOVERNOR COVER	1	
10	AVENGER20	PM0108113	COVER,TIE ROD	1	
11	AVENGER20	PM0108338	SPRING,GOVERNOR	1	
12	AVENGER20	PM0108232	SPRING SET,TORQUE	1	
13	AVENGER20	PM0108238	STOPPER,SPRING	1	
14	AVENGER20	PM0108234	CASE,TORQUE SPRING	1	
15	AVENGER20	PM0108339	NUT,TORQUE SET	1	
16	AVENGER20	PM0108236	NUT	1	
17	AVENGER20	PM0108237	SCREW,ADJUSTING	1	
18	AVENGER20	PM0108235	SPRING,TORQUE	2	
19	AVENGER20	PM0108340	LEVER ASSY,GOVERNOR	1	
20	AVENGER20	PM0108118	LEVER ASSY,TENSION	1	
21	AVENGER20	PM0108119	SHAFT,GOVERNOR	1	
22	AVENGER20	PM0108341	SPRING,TIE ROD	1	
23	AVENGER20	PM0108121	LEVER ASSY,SPEED	1	
24	AVENGER20	PM0108342	LEVER,GOVERNOR	1	
25	AVENGER20	PM0108343	SPRING,START	1	
26	AVENGER20	PM0108124	PIN,GROOVED	2	
27	AVENGER20	PM0108125	BOLT	4	
28	AVENGER20	PM0108344	BOLT,W/WASHER	2	
29	AVENGER20	PM1304007	BOLT,W/WASHER	4	
30	AVENGER20	PM0108345	BOLT,W/WASHERS	1	

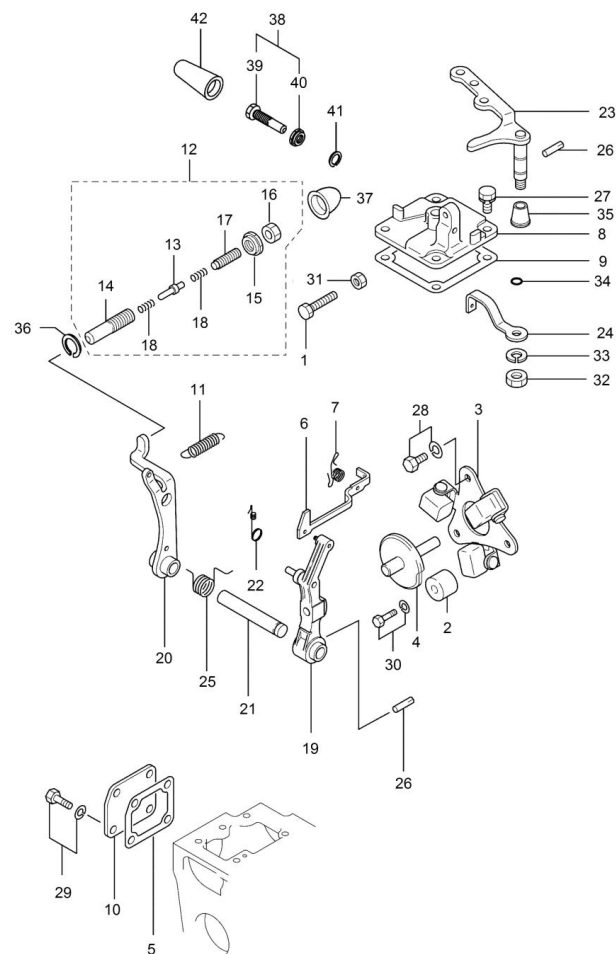



P-34


[illegible]

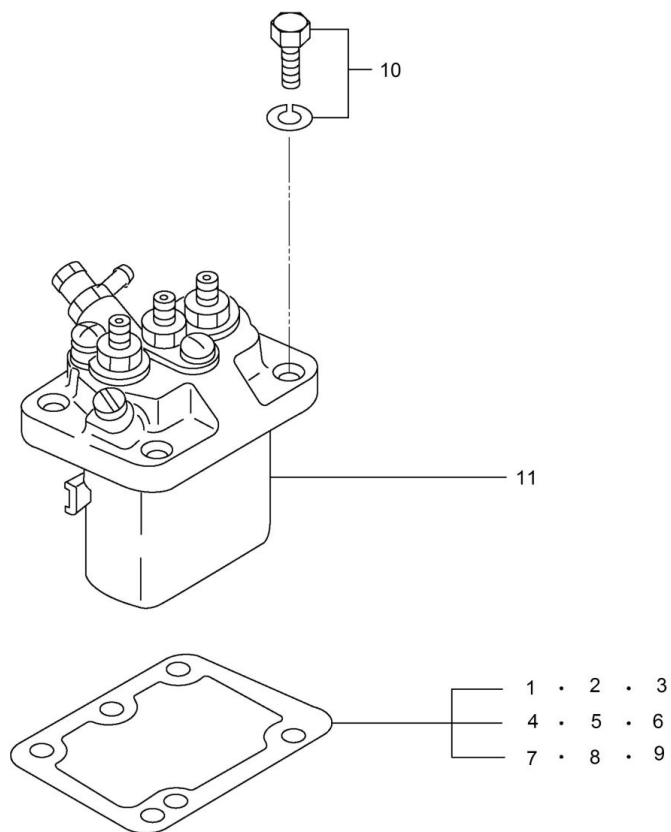



P-35


[illegible]

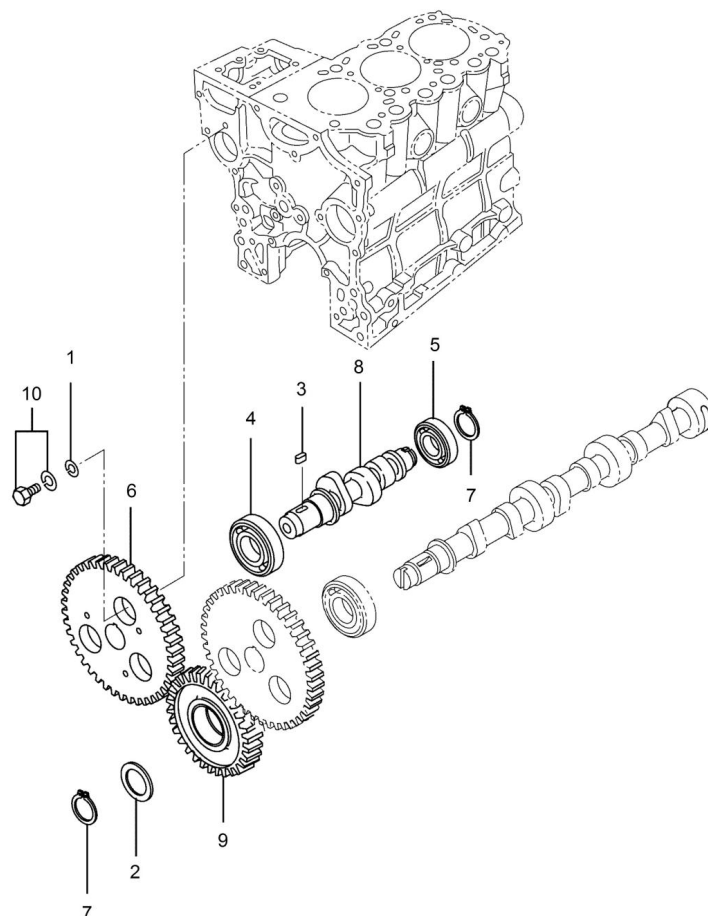



P-36


[illegible]

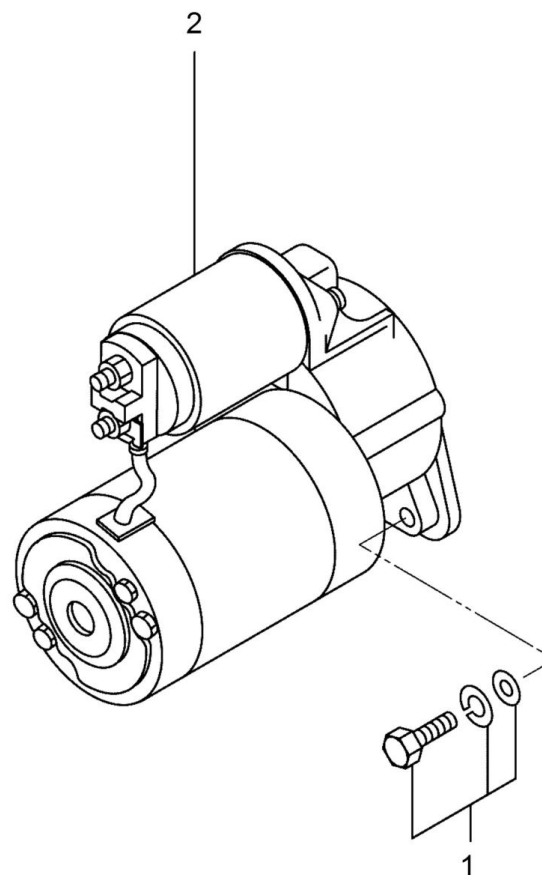



P-37

[illegible]

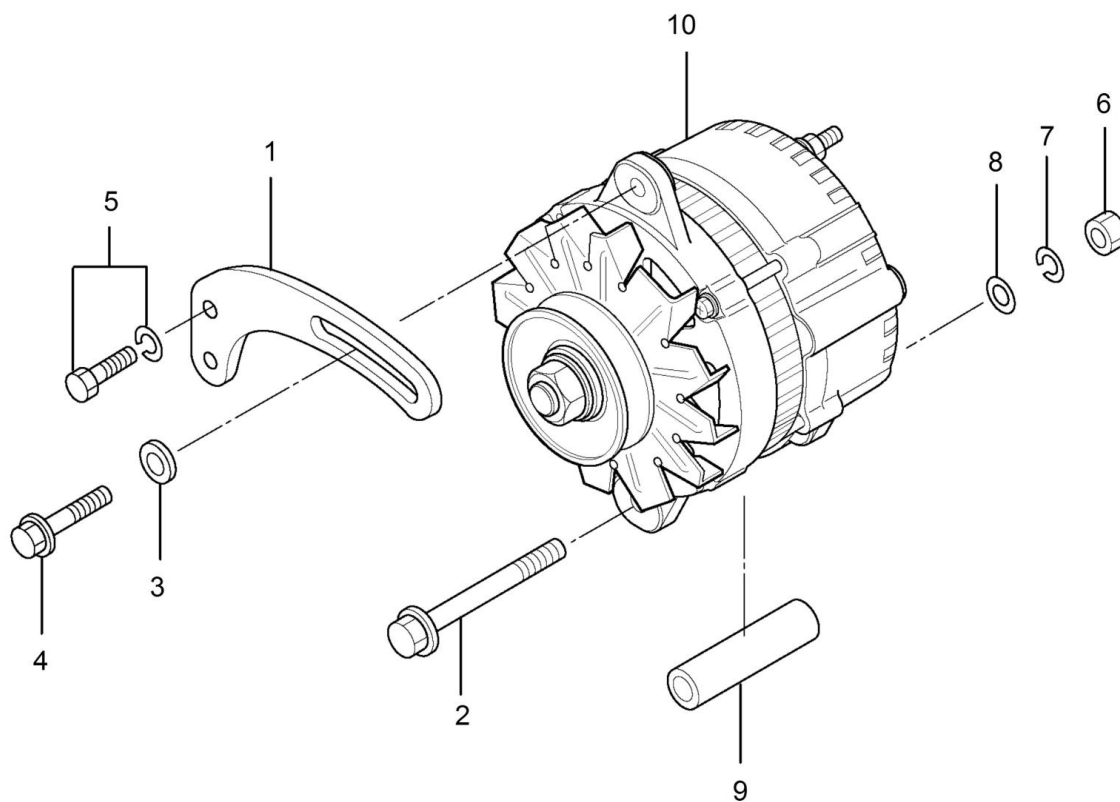



P-38


[illegible]





P-39

[illegible]

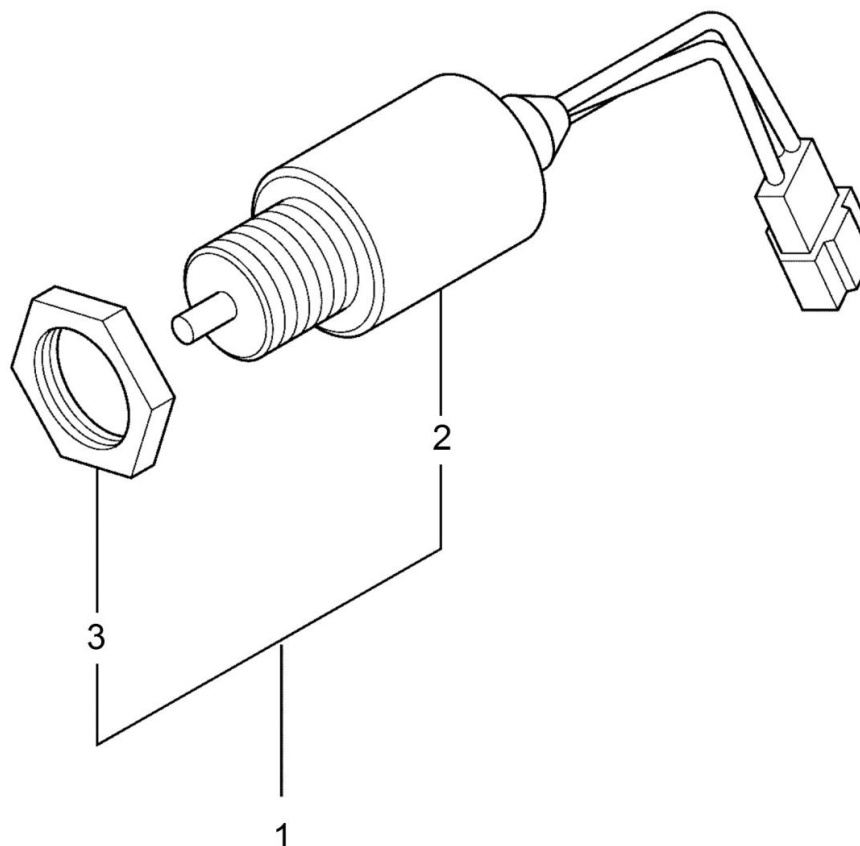




P-40

[illegible]



OVERHAUL GASKET KIT

P-41

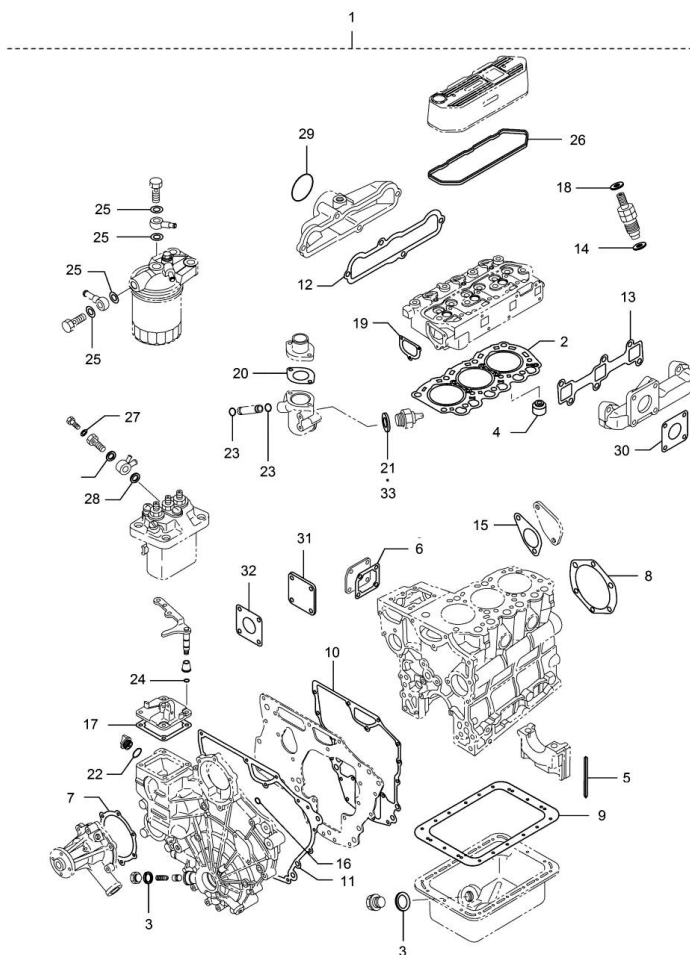



OVERHAUL GASKET KIT


P-41

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	AVENGER 20	Pm0102052	GASKET KIT	1	
2	AVENGER 20	PM0102022	GASKET,CYLINDER HEAD	1	
3	AVENGER 20	PM0108095	GASKET,OIL DRAIN	2	
4	AVENGER 20	PM0108081	SEAL,VALVE STEM	6	
5	AVENGER 20	PM0105061	SEAL,SIDE	4	
6	AVENGER 20	PM0102040	GASKET,TIE-ROD COVER	1	
7	AVENGER 20	PM0102053	GASKET,WATER PUMP	1	
8	AVENGER 20	PM0102054	GASKET,OIL SEAL CASE	1	
9	AVENGER20	PM0105085	GASKET,OIL PAN	1	
10	AVENGER 20	PM0201043	GASKET,FRONT PLATE	1	
11	AVENGER 20	PM0101066	GASKET,GEAR CASE	1	
12	AVENGER 20	PM0102055	GASKET,INTAKE	1	
13	AVENGER 20	PM0102056	GASKET,EXHAUST	1	
14	AVENGER 20	PM0105043	GASKET,HOLDER	3	
15	AVENGER 20	PM0102057	GASKET	1	
16	AVENGER 20	PM0101070	O-RING	2	
17	AVENGER 20	PM0101069	GASKET,GOVERNOR COVER	1	
18	AVENGER20	PM0102058	GASKET,FUEL RETURN	3	
19	AVENGER 20	PM0102033	GASKET,THERMOFITTING	1	
20	AVENGER 20	PM0102045	GASKET,THERMOSTAT	1	
21	AVENGER 20	PM0105083	GASKET	1	
22	AVENGER 20	PM0106017	O-RING	1	
23	AVENGER 20	PM0201024	O-RING	2	
24	AVENGER20	PM0108060	O-RING	1	
25	AVENGER 20	PM0108109	WASHER,SEAL	4	
26	AVENGER 20	PM0201028	GASKET,ROCKER COVER	1	
27	AVENGER 20	PM0201104	WASHER DRAIN UNION	2	
28	AVENGER 20	PM0201104	WASHER,DRAIN UNION	2	
29	AVENGER 20	PM0201106	O-RING	1	
30	AVENGER 20	PM0201061	GASKET,EXHAUST	1	



OVERHAUL GASKET KIT


P-41

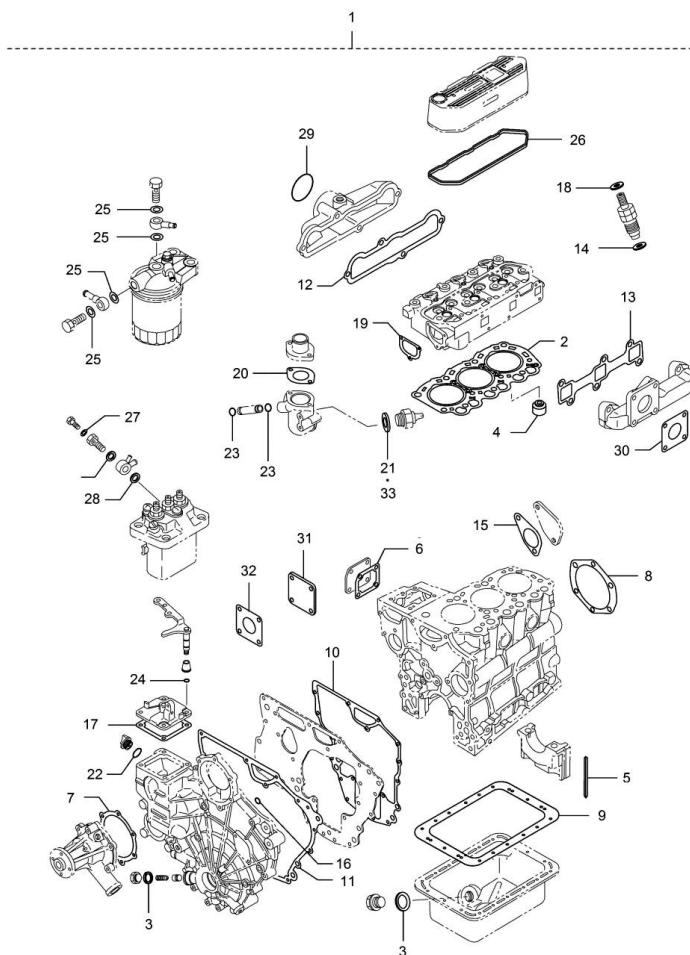



P-41


[illegible]

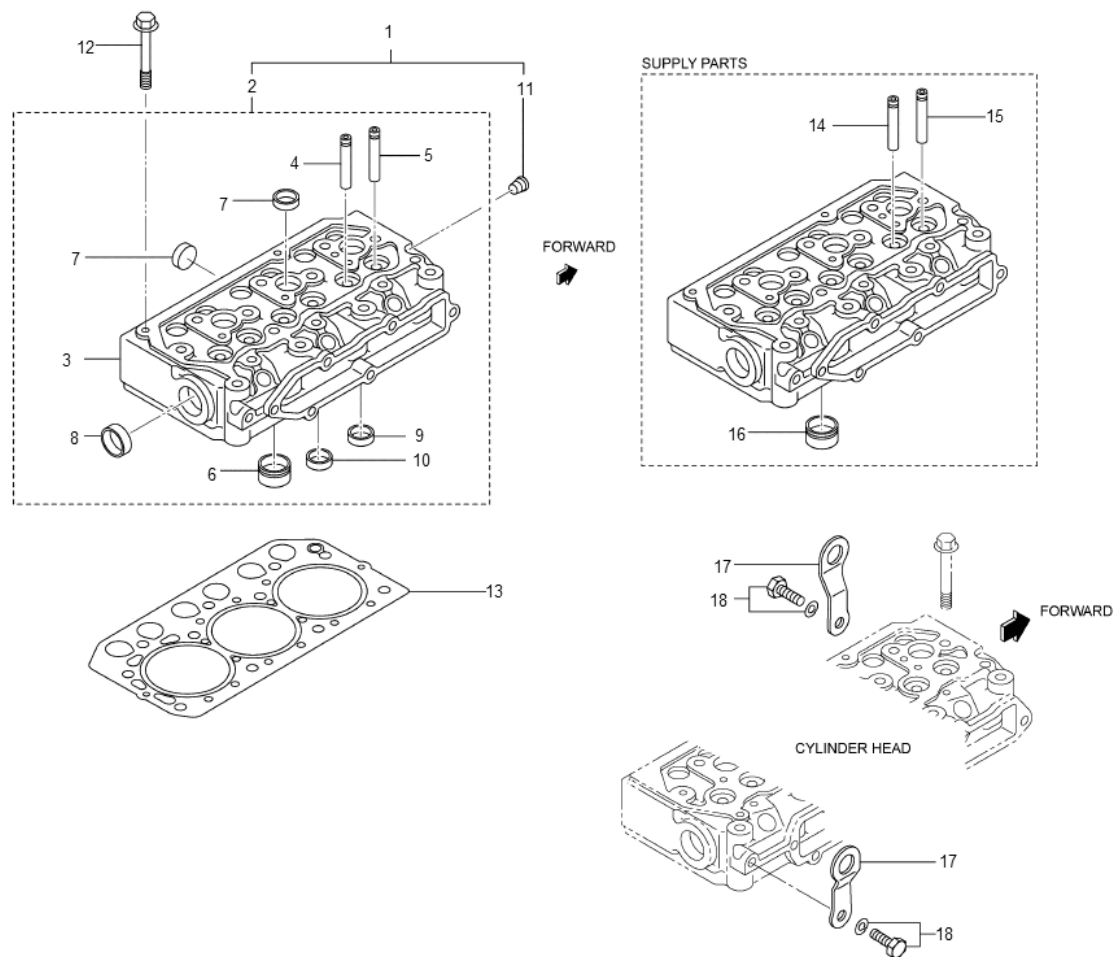



P-42


[illegible]

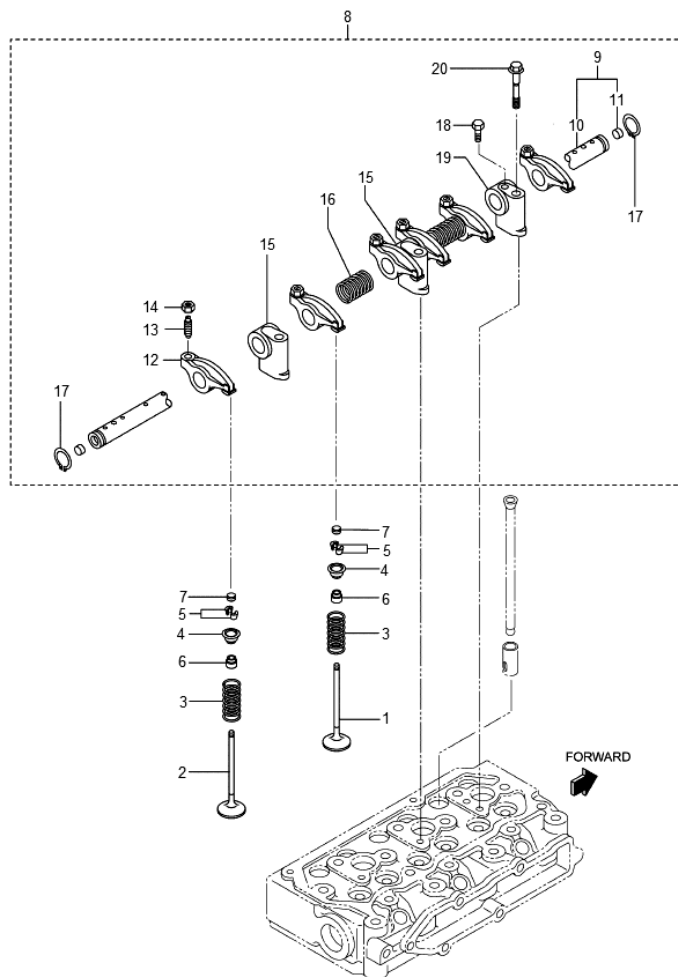



P-43


[illegible]

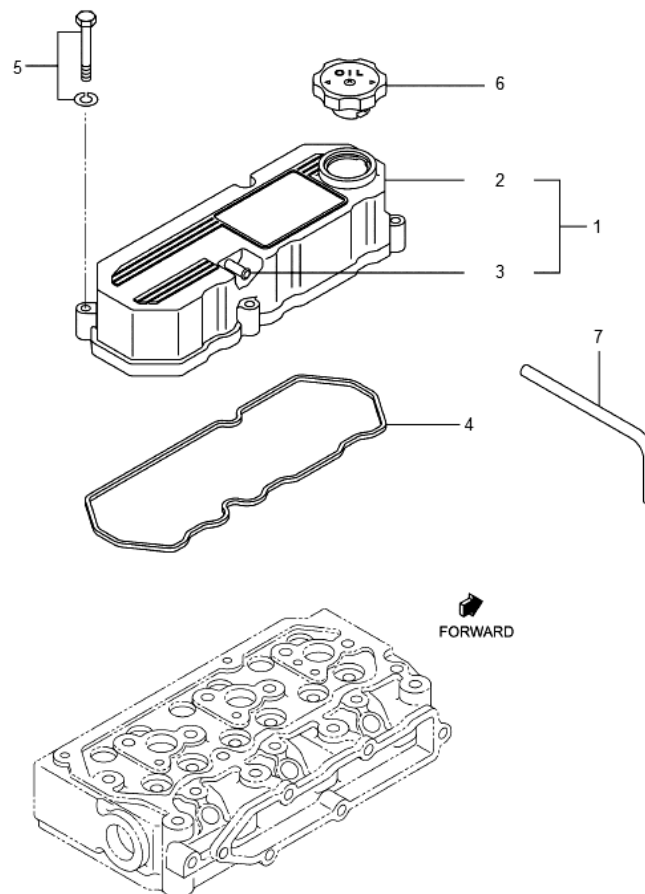



P-44


[illegible]

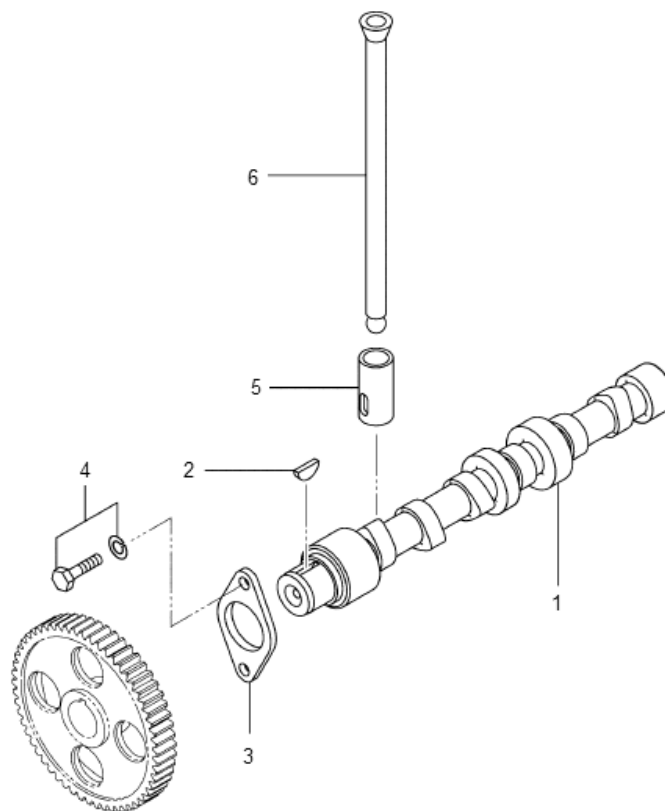



P-45

[illegible]

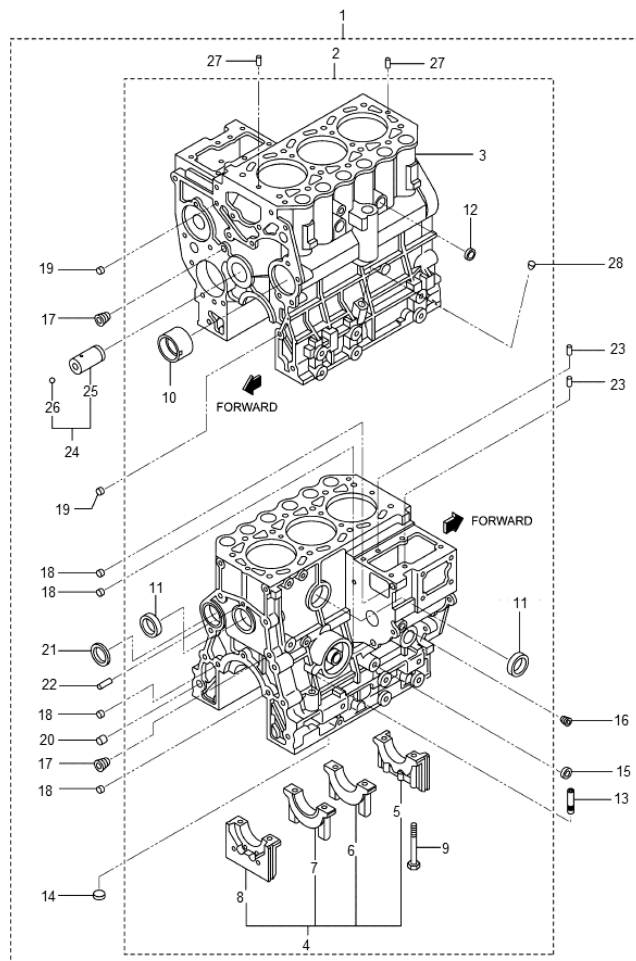



CRANKCASE (ASSY)


P-46

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	AVENGER 26	Pm0101086	BLOCK ASSY,CYLINDER	1	
2	AVENGER 26	*	BLOCK SUB ASSY,CYLINDER	1	Parts with(*) are not supplied individually
3	AVENGER 26	*	BLOCK,CYLINDER	1	Parts with(*) are not supplied individually
4	AVENGER 26	*	CAP SET,BEARING	1	Parts with(*) are not supplied individually
5	AVENGER 26	*	CAP,BEARING NO.2	1	Parts with(*) are not supplied individually
6	AVENGER 26	*	CAP,BEARING NO.3	1	Parts with(*) are not supplied individually
7	AVENGER 26	*	CAP,BEARING FRONT	1	Parts with(*) are not supplied individually
8	AVENGER 26	*	CAP,BEARING REAR	1	Parts with(*) are not supplied individually
9	AVENGER 26	PM0101088	BOLT,BEARING CAP	8	
10	AVENGER 26	PM0101089	BUSH,CAMSHAFT	1	
11	AVENGER 26	PM0105039	CAP,SEALING	2	
12	AVENGER 26	PM0101096	CAP,SEALING	2	
13	AVENGER 26	PM0101058	GUIDE,OIL LEVEL GAUGE	1	
14	AVENGER 26	PM0101099	CAP,SEALING	1	
15	AVENGER 26	PM0101100	CAP,SEALING	1	
16	AVENGER 26	PM0102031	PLUG,TAPERED (1/8)	1	
17	AVENGER 26	PM0101102	PLUG,TAPERED MEC.	2	
18	AVENGER 26	PM0101103	BUSHING,KNOCK (8X9)	4	
19	AVENGER 26	PM0101063	BUSHING,KNOCK (8X13)	2	
20	AVENGER 26	PM0101105	BUSHING,KNOCK (12X9)	1	
21	AVENGER 26	PM0101106	PLUG,EXPANSION (40)	1	
22	AVENGER 26	PM0101059	PIN,DOWEL (8)	1	
23	AVENGER 26	PM0101056	PIN,DOWEL	2	
24	AVENGER 26	PM0101109	SHAFT ASSY,IDLER	1	
25	AVENGER 26	*	SHAFT,IDLER	1	Parts with(*) are not supplied individually
26	AVENGER 26	PM0101111	STEEL BALL,BEARING	1	
27	AVENGER 26	PM0101112	PIN,DOWEL	2	
28	AVENGER 26	PM0101113	PLUG,TAPERED	1	



CRANKCASE (OIL SEAL CASE) & DRAIN COCK & PIPE


P-47

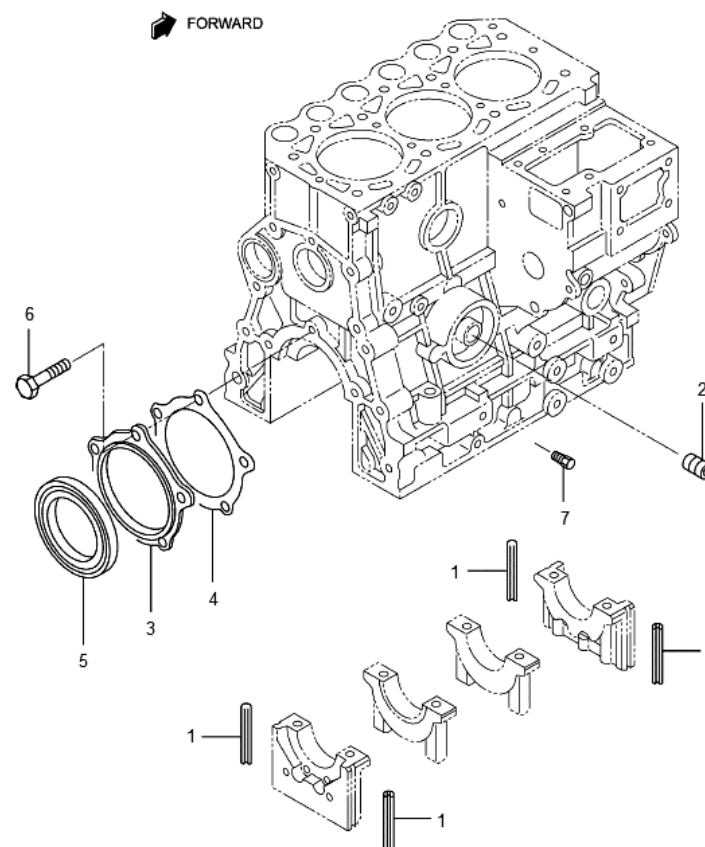



P-47


[illegible]

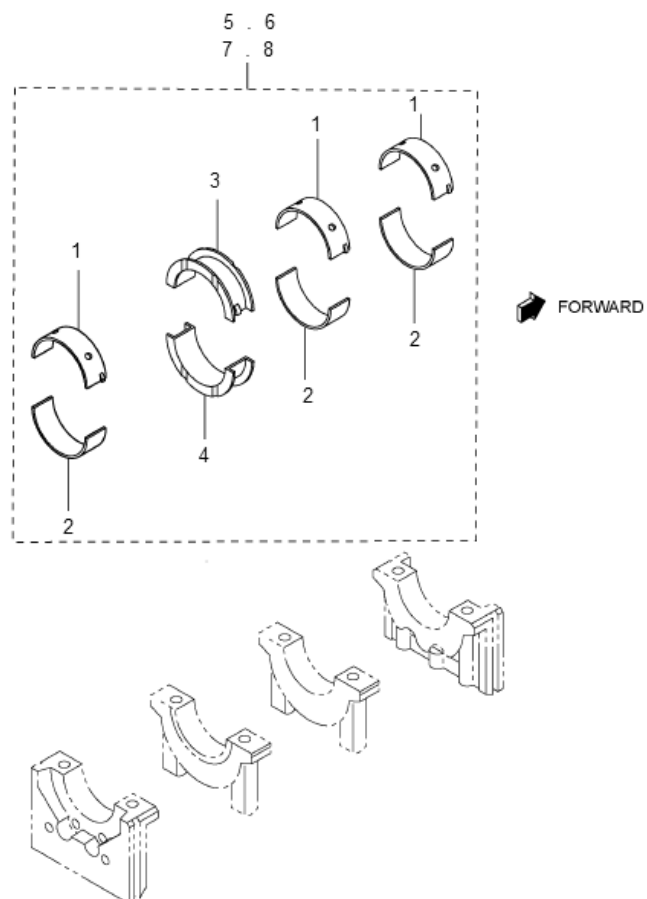



P-48


[illegible]

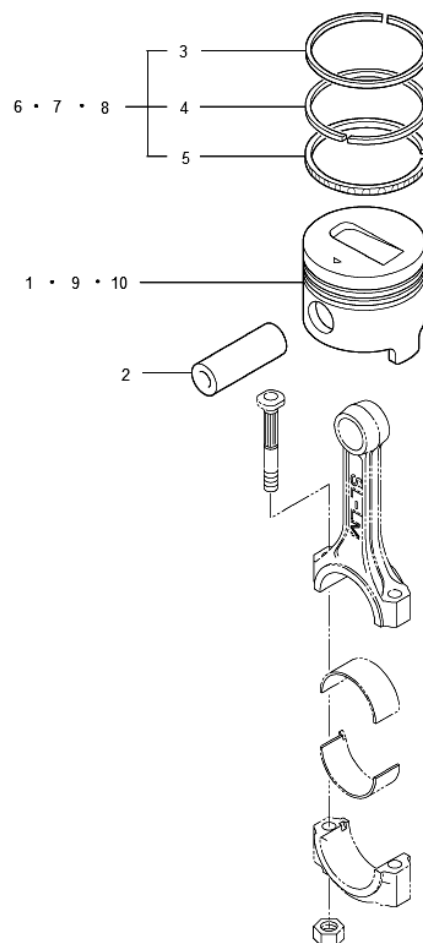



P-49


[illegible]

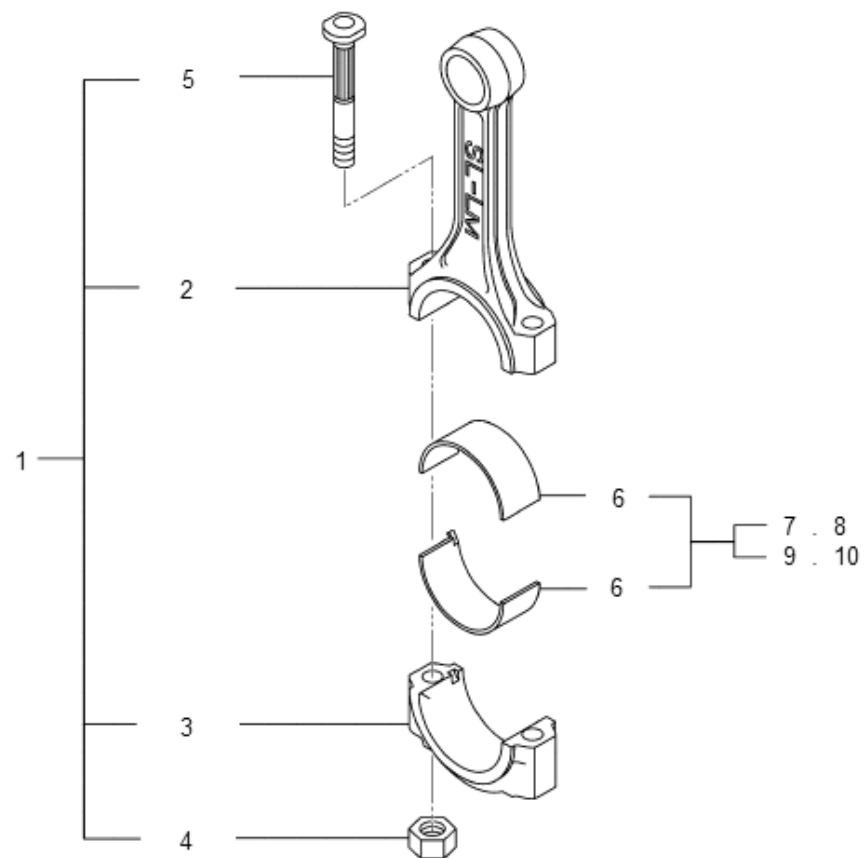



P-50


[illegible]

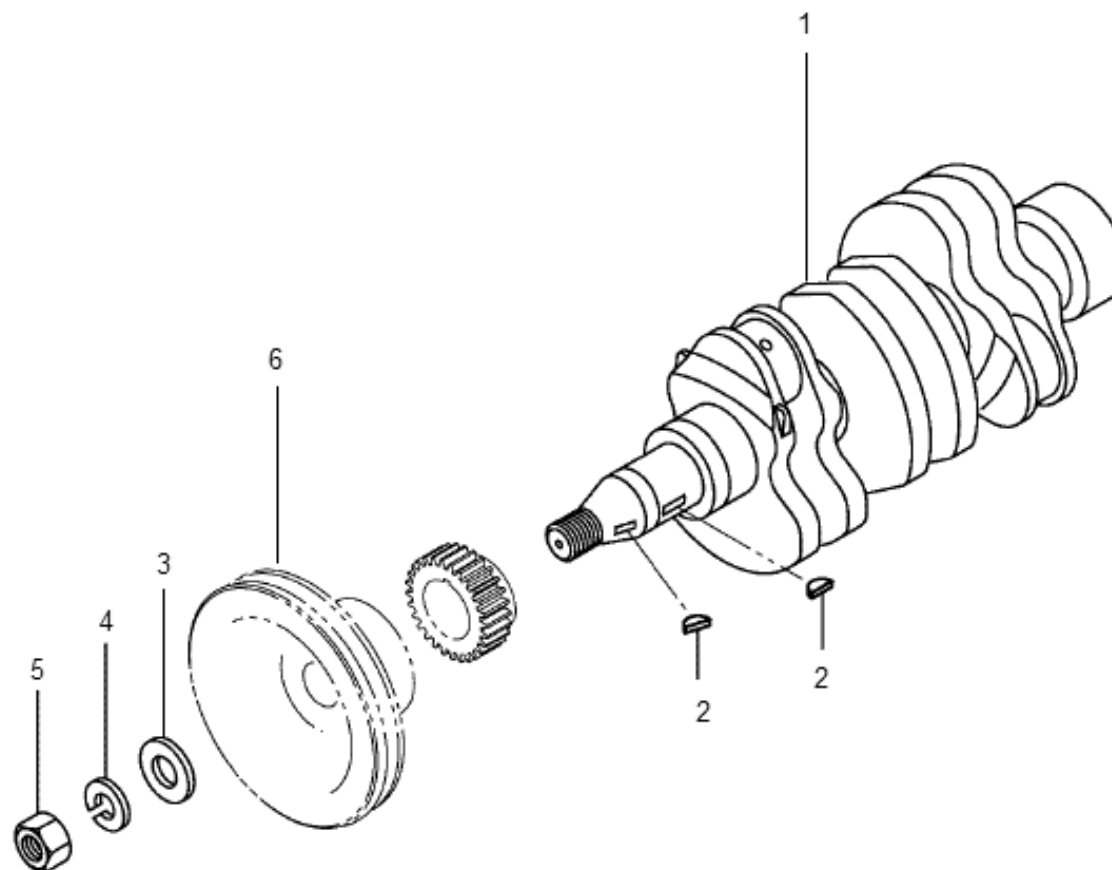



P-51


[illegible]

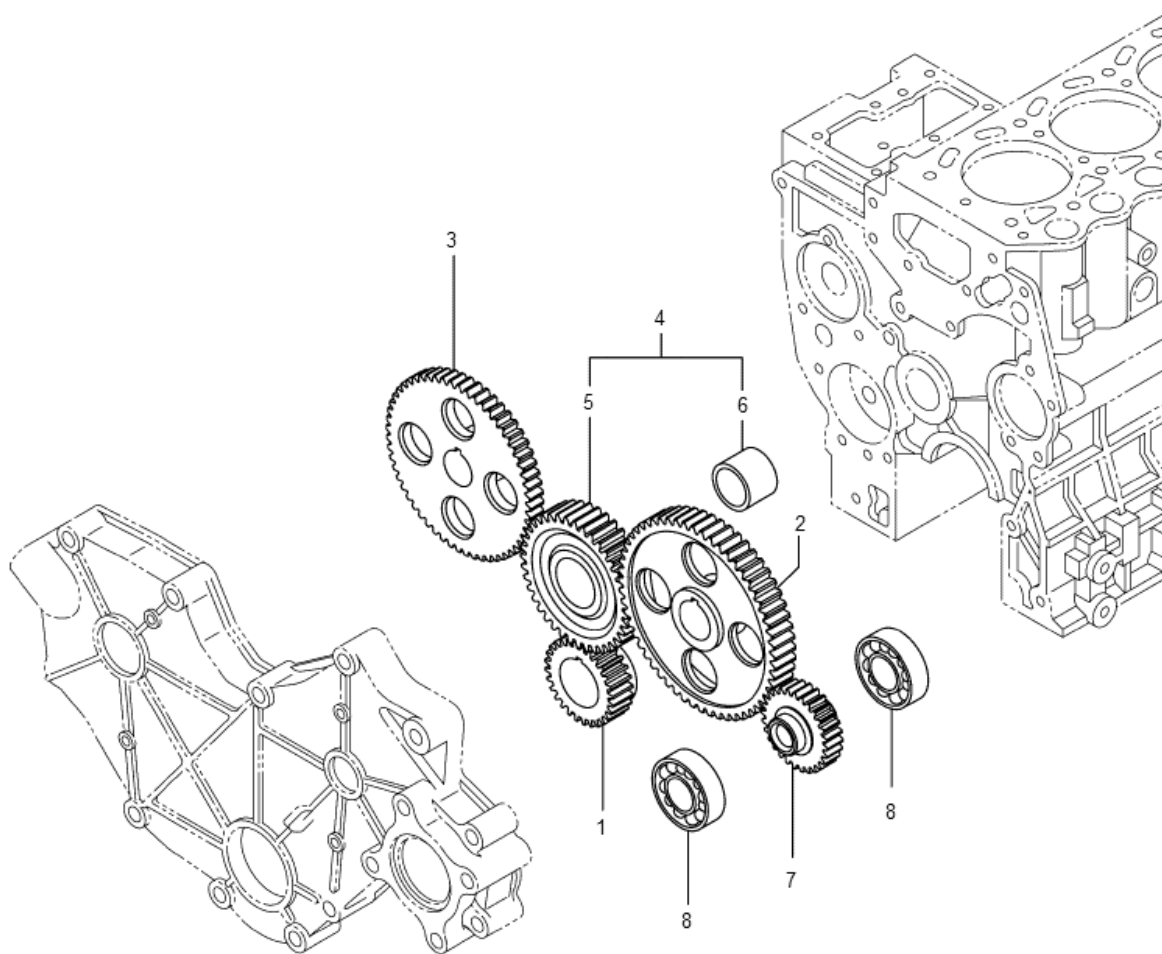




P-52

[illegible]

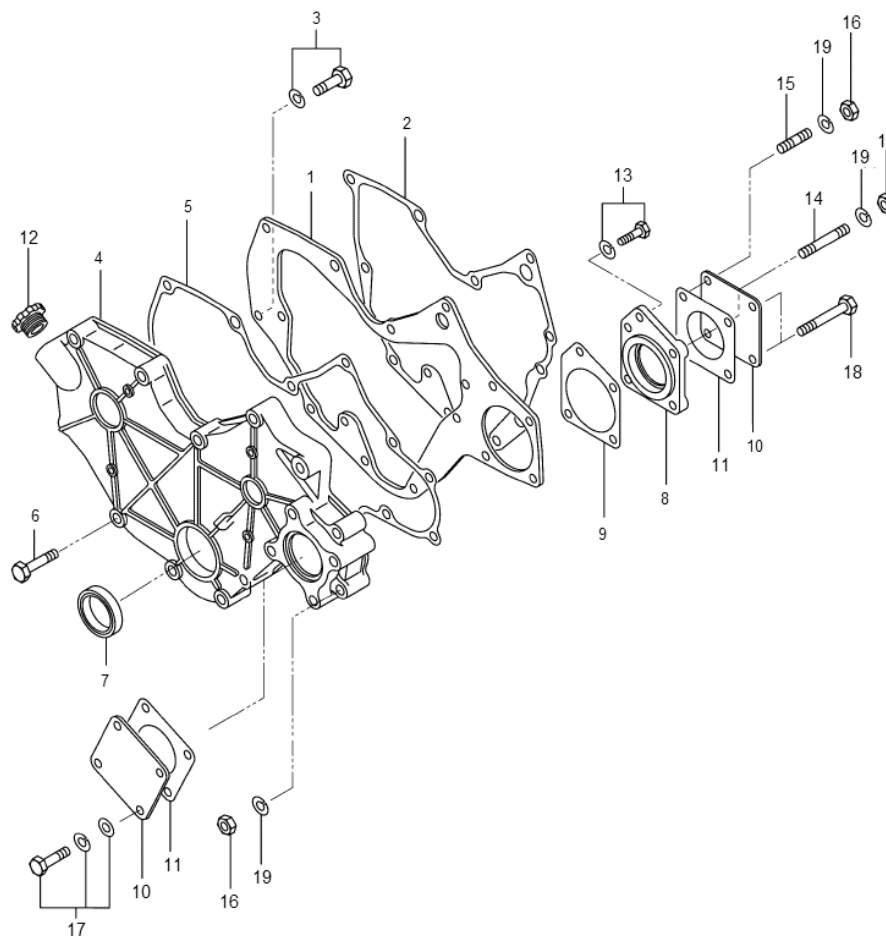



P-53

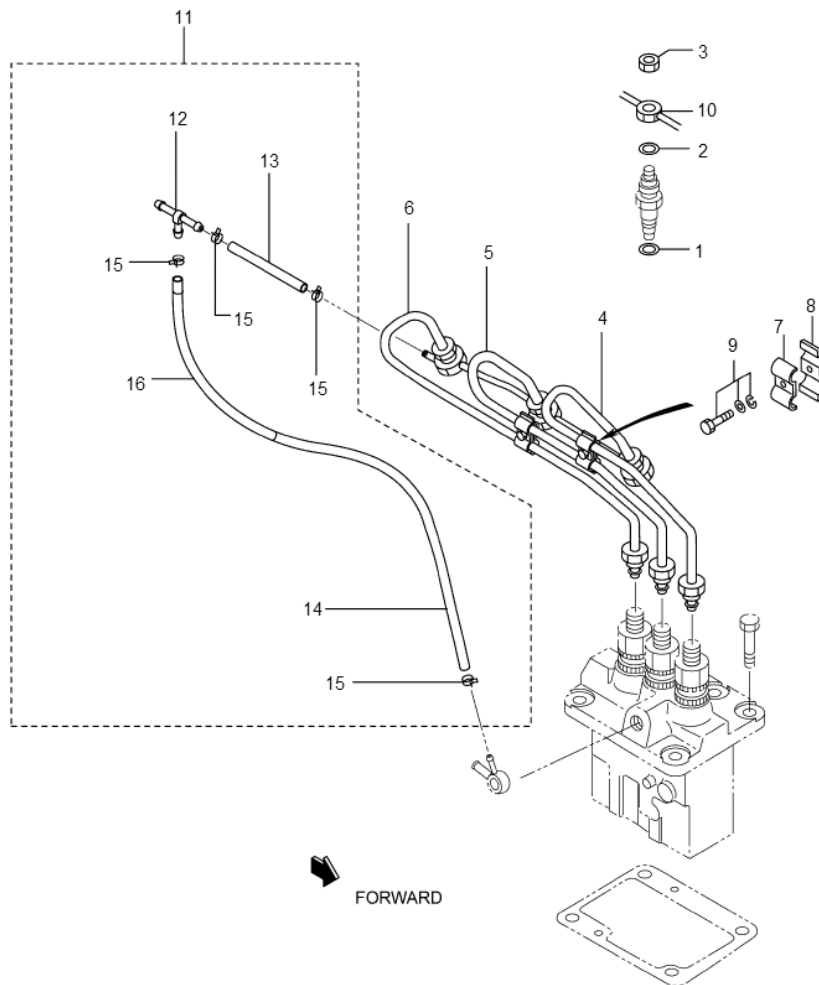




P-54



FUEL SYSTEM (NOZZLE ASSY)


P-55

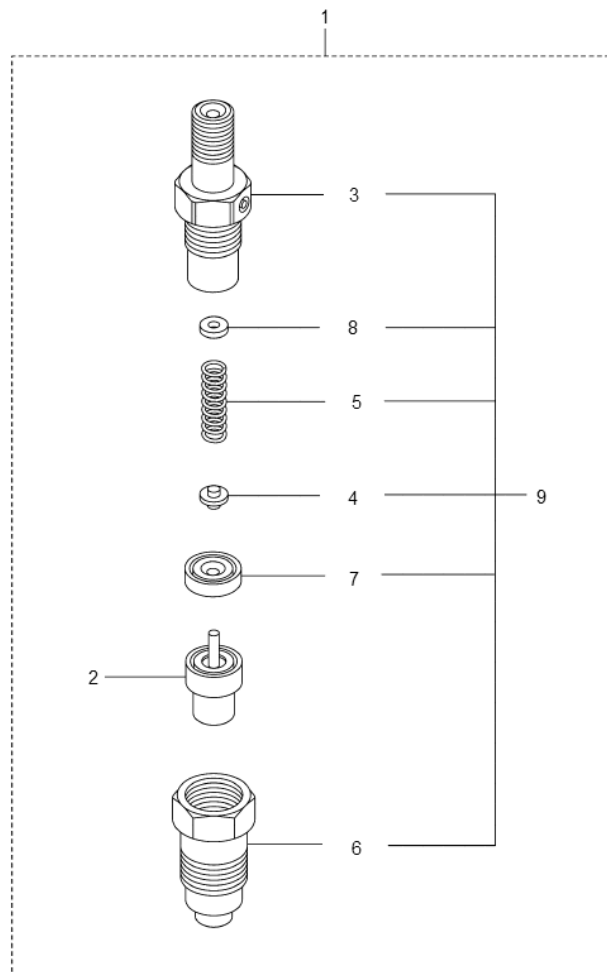



P-55


[illegible]

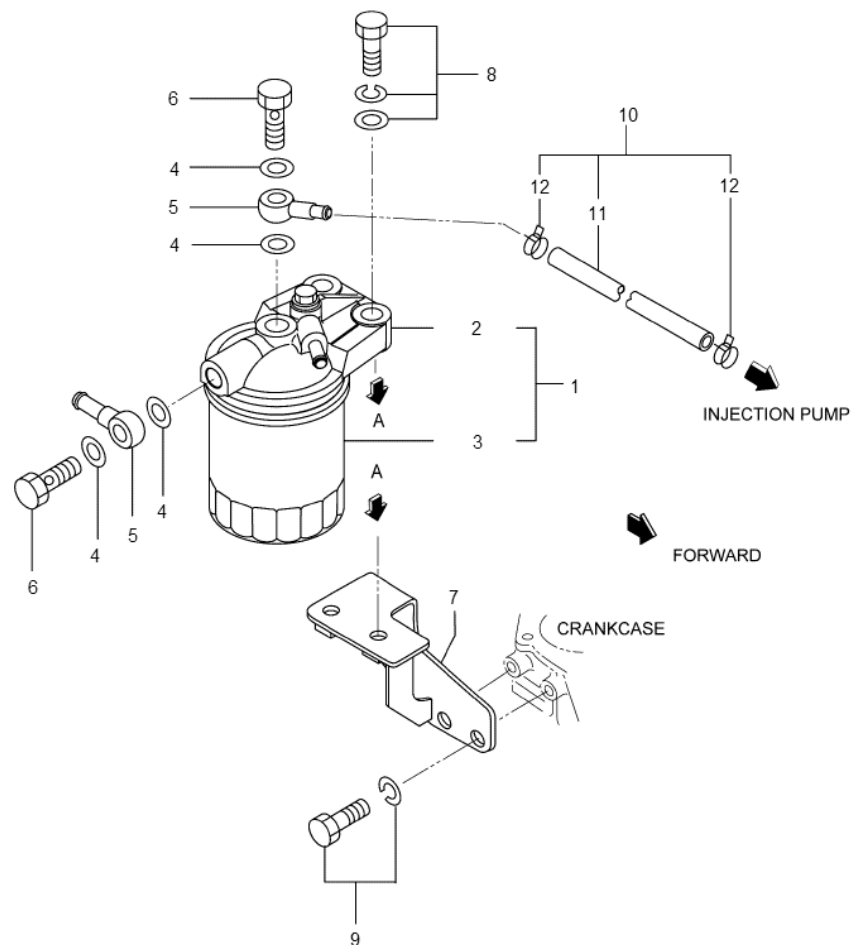



P-56

[illegible]

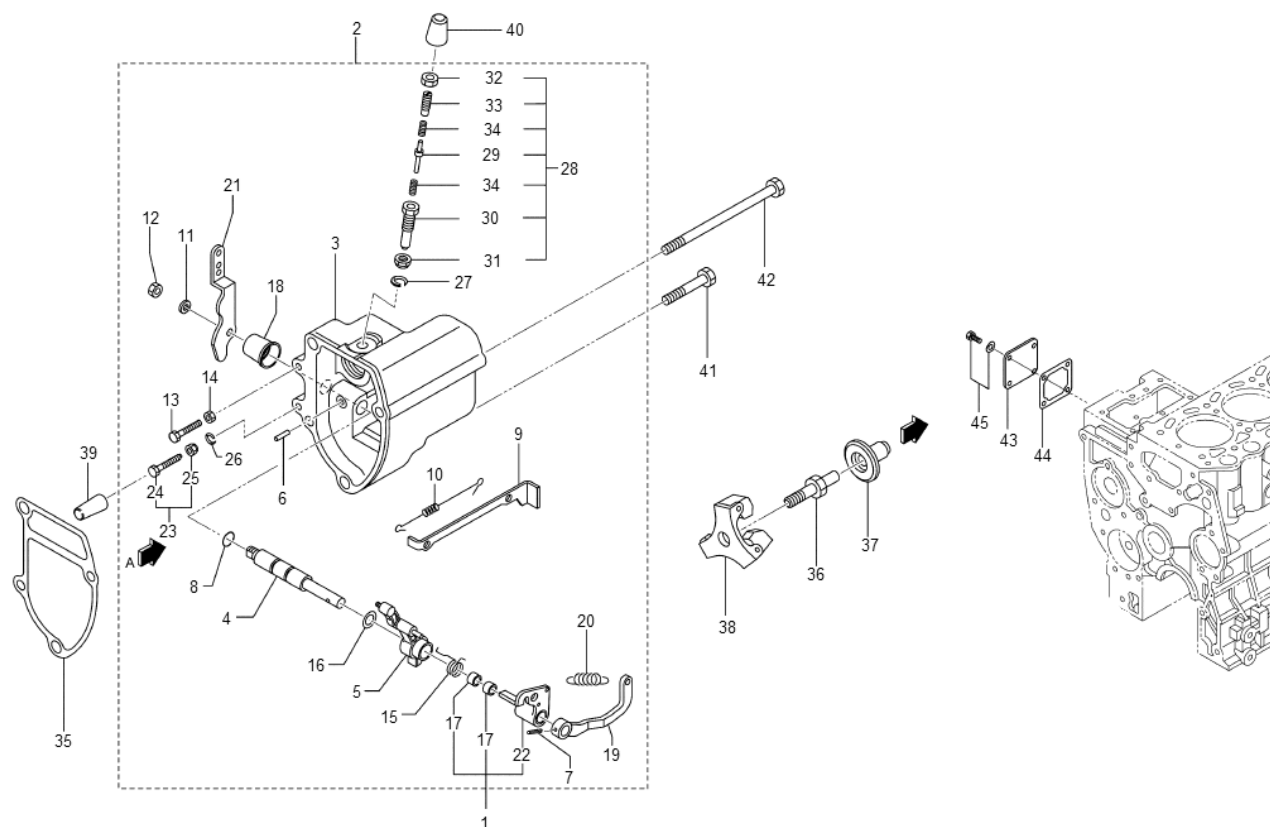




GOVERNER


P-57

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	AVENGER 26	Pm0108221	LEVER ASSY,TENSION	1	
2	AVENGER 26	PM0108222	CASE ASSY,GOVERNOR	1	
3	AVENGER 26	PM0108242	CASE,GOVERNOR	1	
4	AVENGER 26	PM0108229	SHAFT,GOVERNOR	1	
5	AVENGER 26	PM0108247	LEVER,GOVERNOR	1	
6	AVENGER 26	PM0108241	PIN,GROOVED	1	
7	AVENGER 26	PM0108251	PIN,SPRING	1	
8	AVENGER 26	PM0108252	O-RING	1	
9	AVENGER 26	PM0108245	TIE-ROD	1	
10	AVENGER 26	PM0108239	SPRING,TIE ROD	1	
11	AVENGER 26	PM0105066	WASHER,SPRING	1	
12	AVENGER 26	PM0108130	NUT,JAM	1	
13	AVENGER 26	PM0108240	BOLT,LOW IDLE SET	1	
14	AVENGER 26	PM0108129	NUT	1	
15	AVENGER 26	PM0108231	SPRING,START	1	
16	AVENGER 26	PM0108244	SHIM,GOVERNOR SHAFT	1	
17	AVENGER 26	*	BEARING,NEEDLE	2	Parts with(*) are not supplied individually
18	AVENGER 26	PM0108228	COVER,GOVERNOR SHAFT	1	
19	AVENGER 26	PM0108246	LEVER,GOVERNOR SPRING	1	
20	AVENGER 26	PM0108254	SPRING,GOVERNOR	1	
21	AVENGER 26	PM0108230	LEVER,SPEED CONTROL	1	Parts with(*) are not supplied individually
22	AVENGER 26	*	LEVER,TENSION	1	
23	AVENGER 26	PM0108105	BOLT ASSY,HIGH SPEED	1	
24	AVENGER 26	PM0108224	BOLT,HIGH SPEED SET	1	
25	AVENGER 26	PM0108225	NUT,HIGH SPEED SET	1	
26	AVENGER 26	PM0108227	C-RING,HIGH SPEED SET	1	
27	AVENGER 26	PM0108226	C-RING,TORQUE SET	1	
28	AVENGER 26	PM0108232	SPRING SET,TORQUE	1	
29	AVENGER 26	PM0108238	STOPPER,SPRING	1	
30	AVENGER 26	PM0108234	CASE,TORQUE SPRING	1	

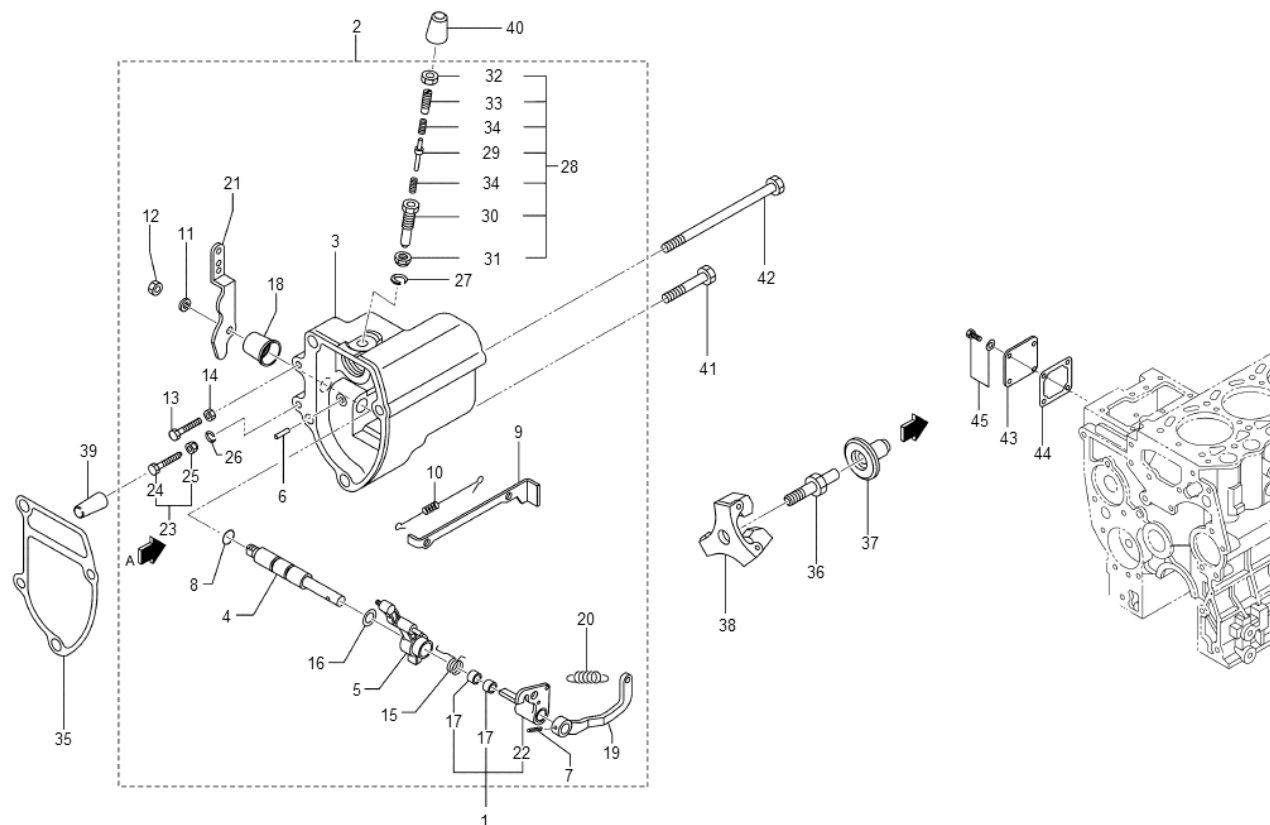




P-58

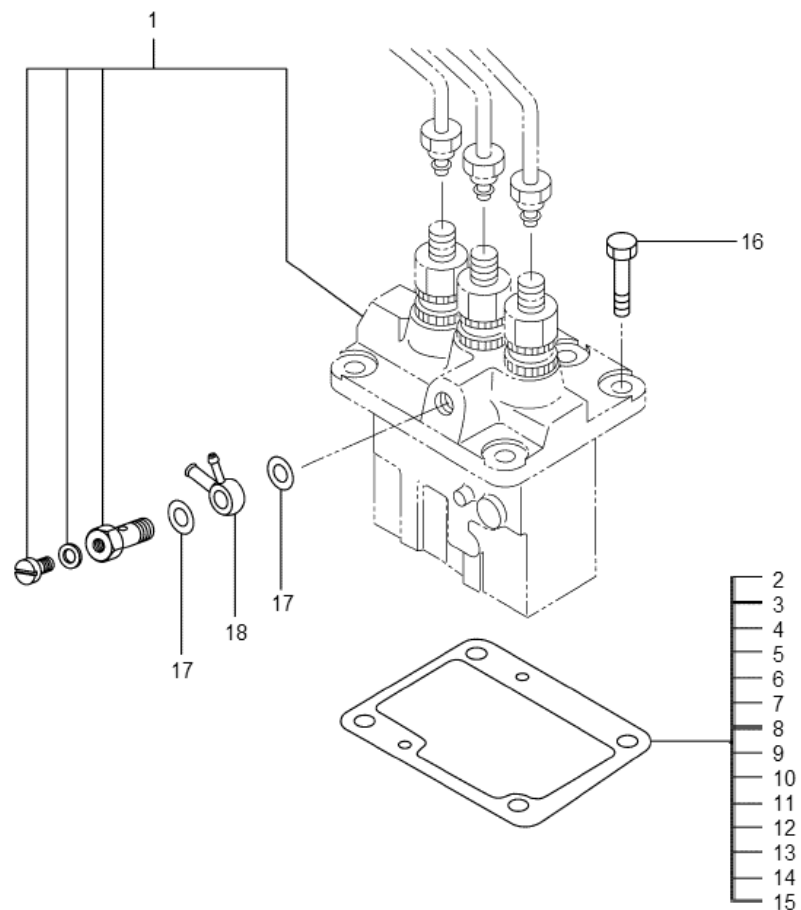



P-59

[illegible]

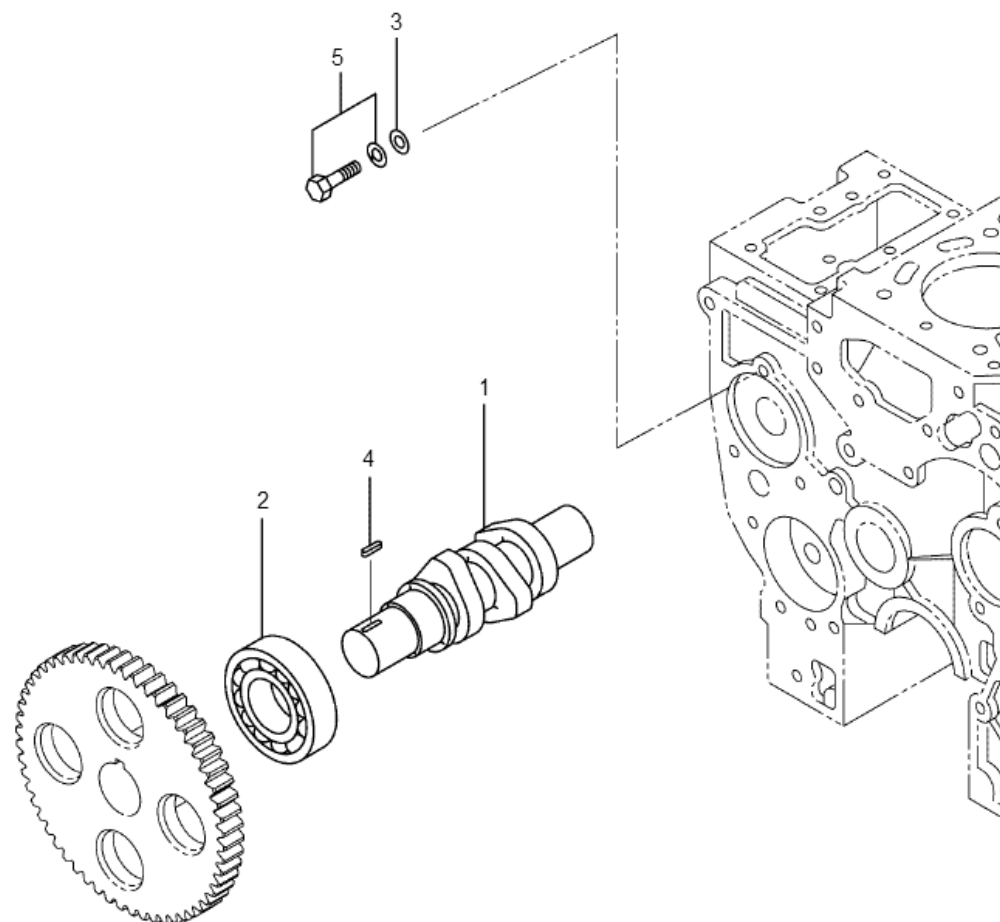




P-60

[illegible]



WATER PUMP & WATER PUMP PULLEY


P-61

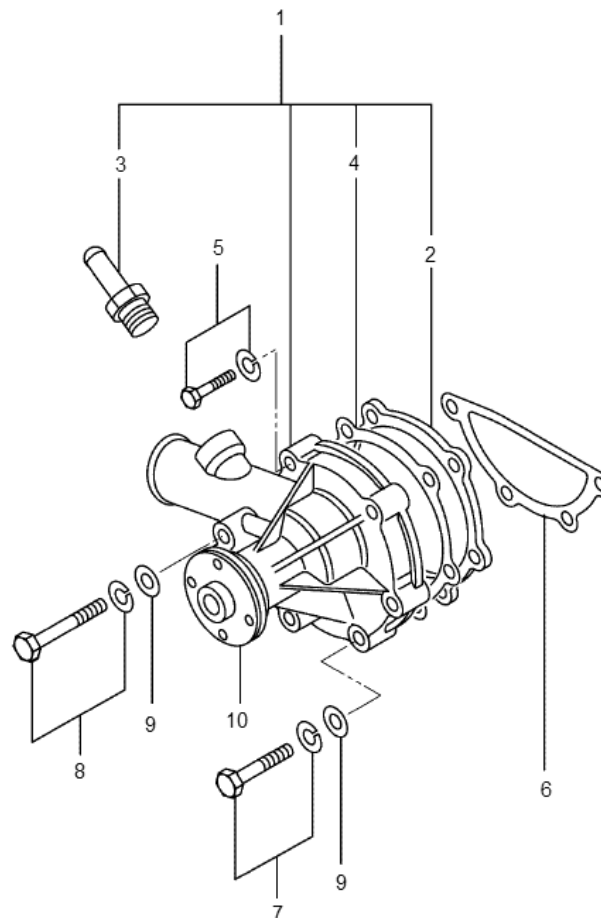



P-61

[illegible]

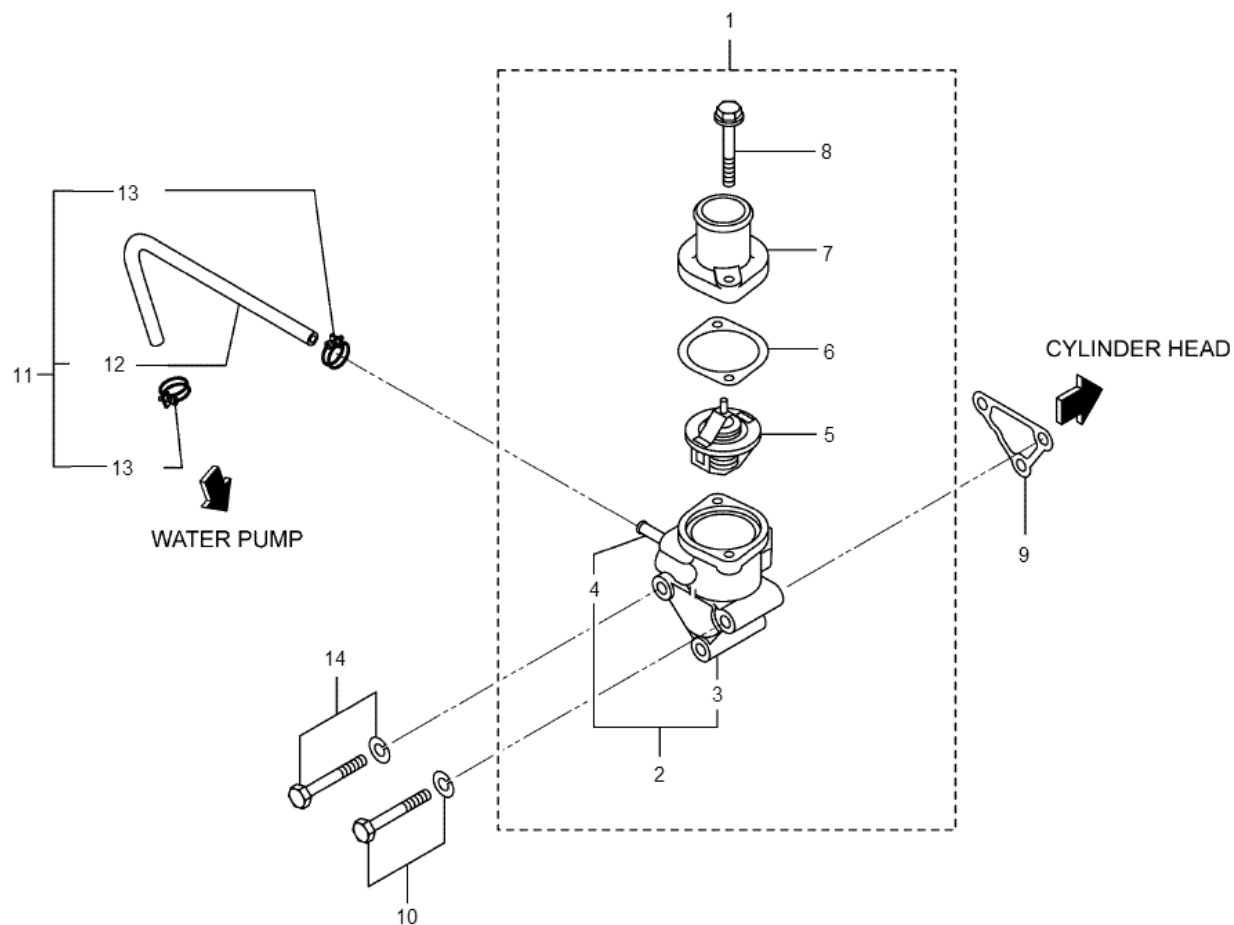




P-62

[illegible]



FAN, FAN SPACER & V-BELT


P-63

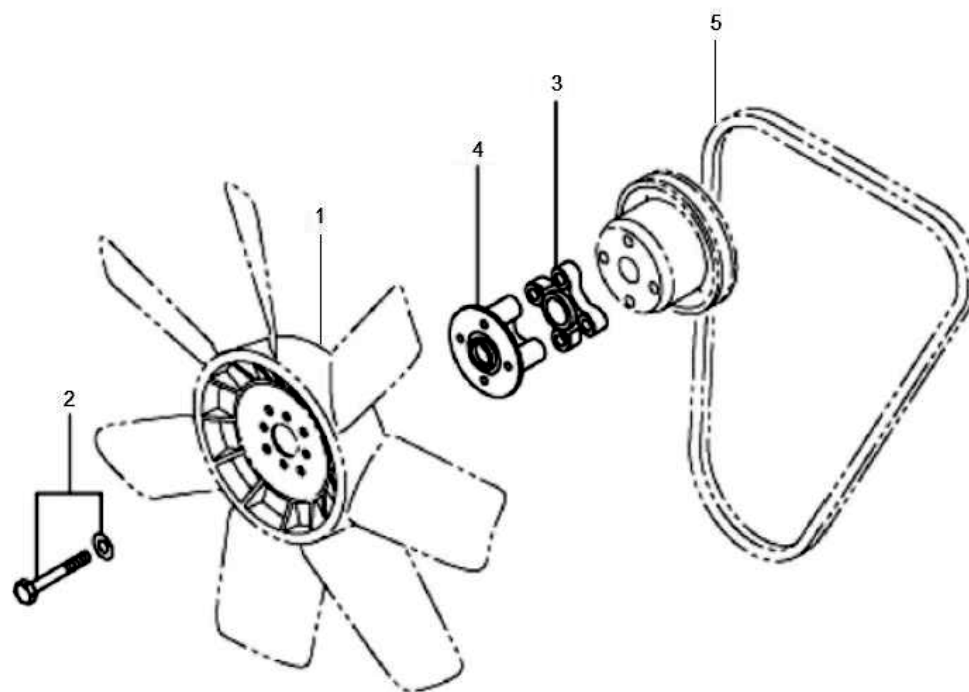



P-63


[illegible]

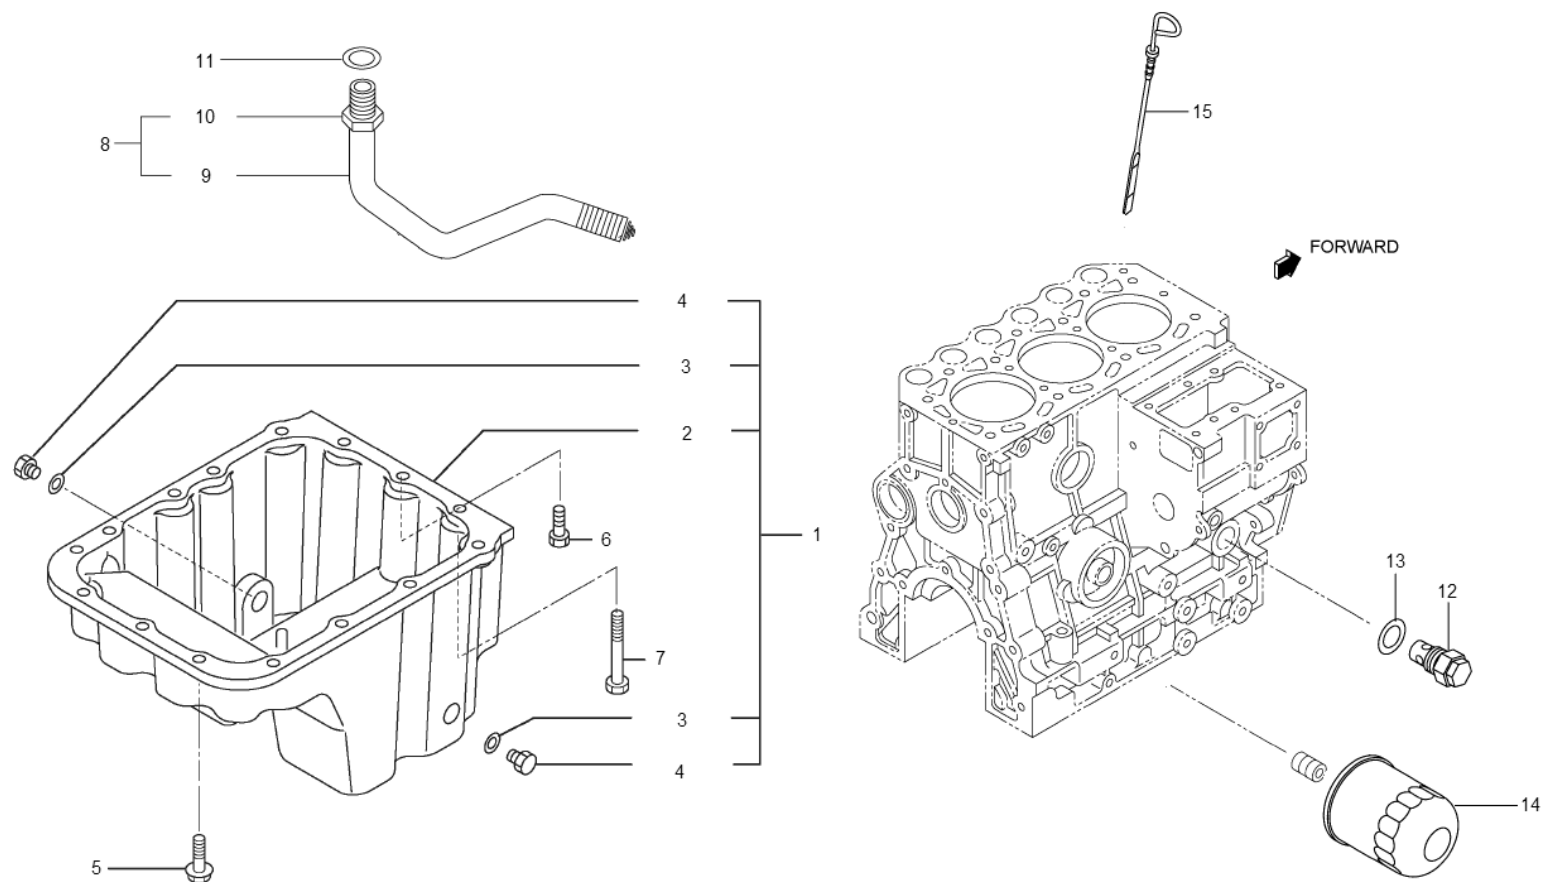



P-64


[illegible]

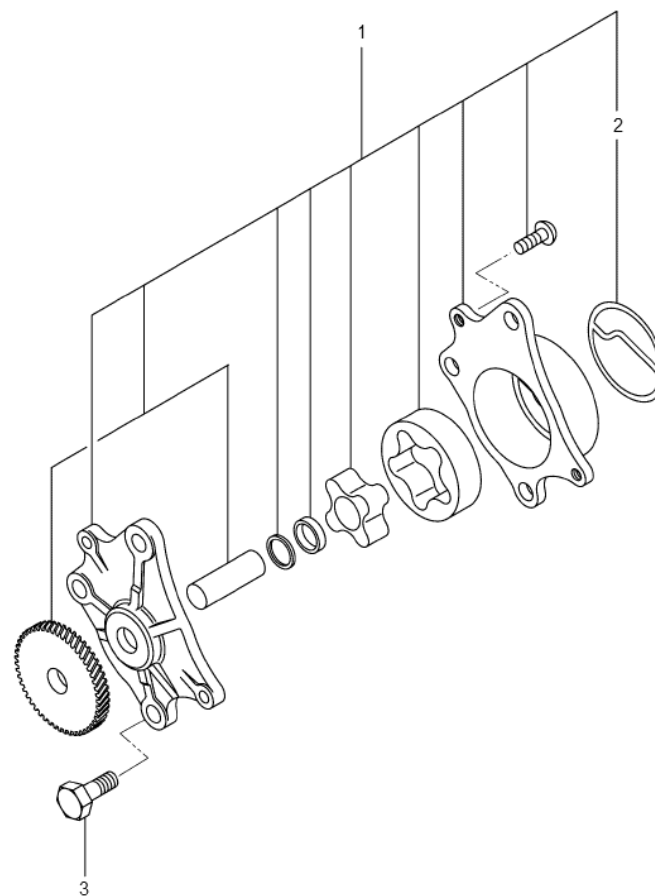




P-65

[illegible]

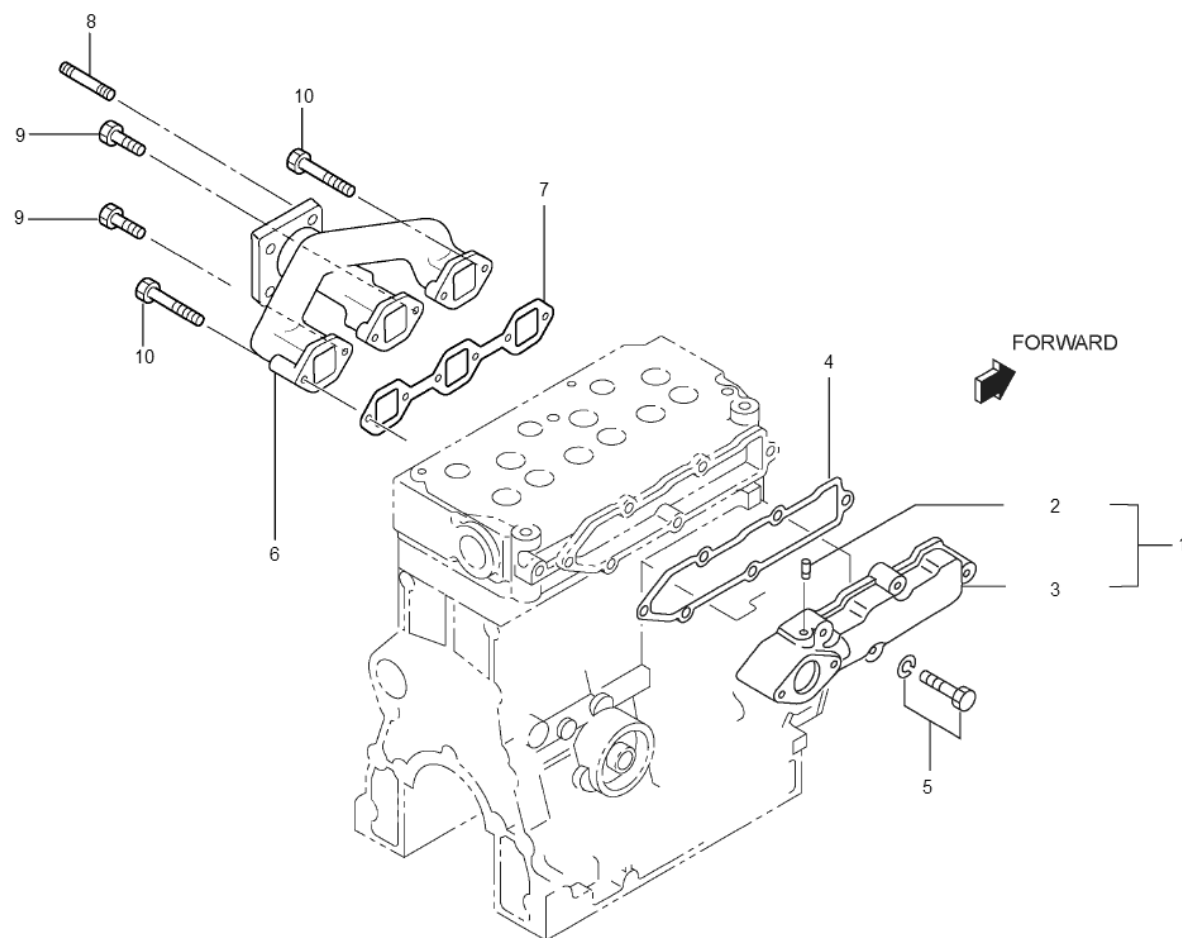




P-66

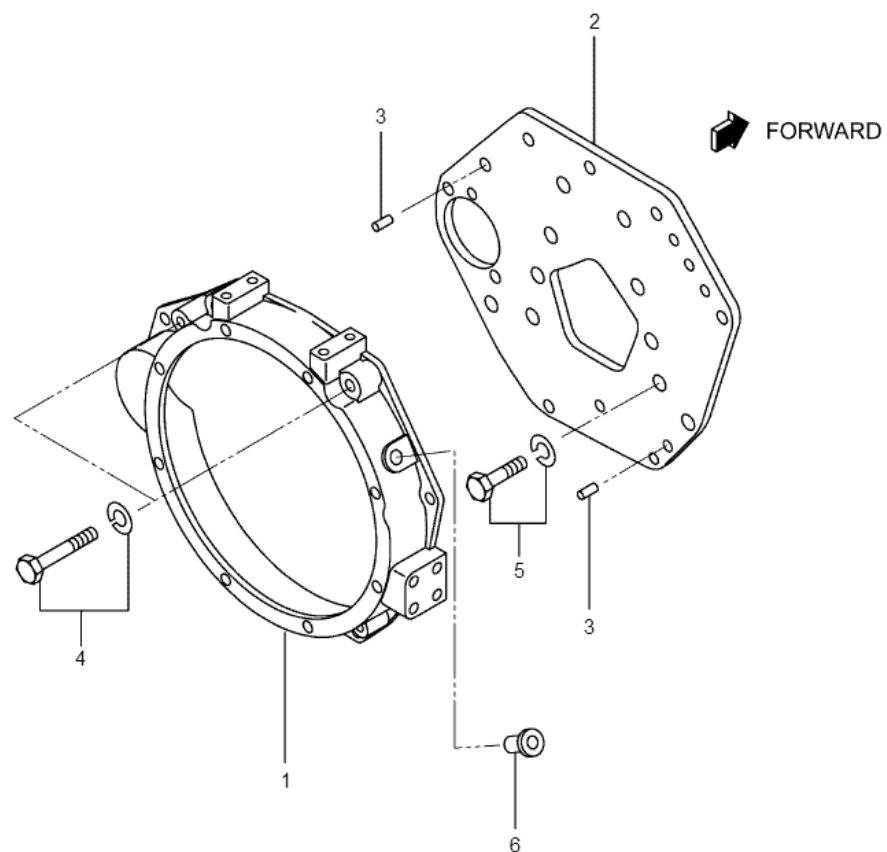



P-67

[illegible]

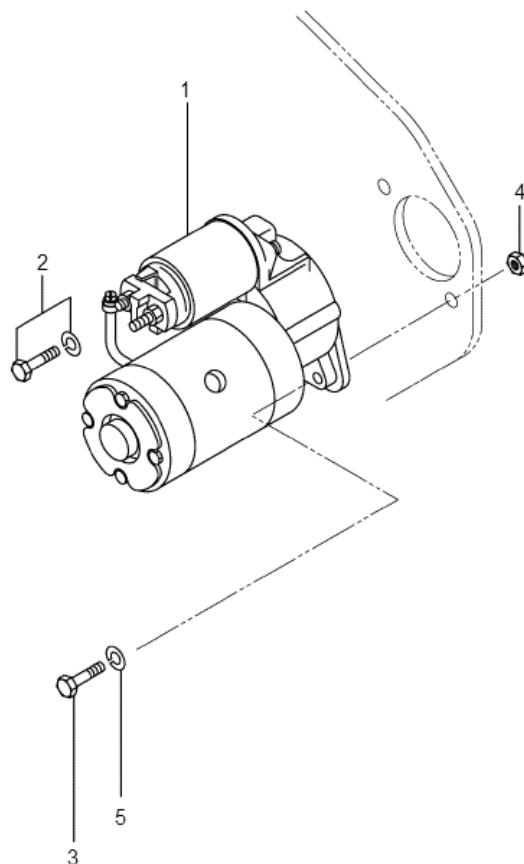





P-68

[illegible]



GLOW PLUG & WIRE


P-69

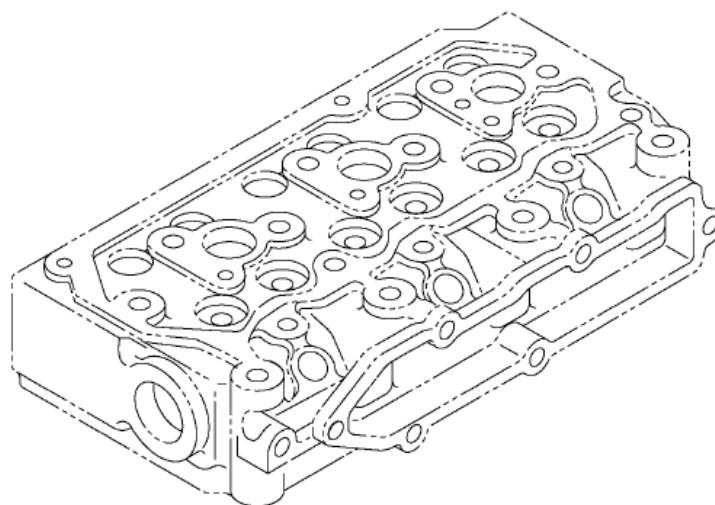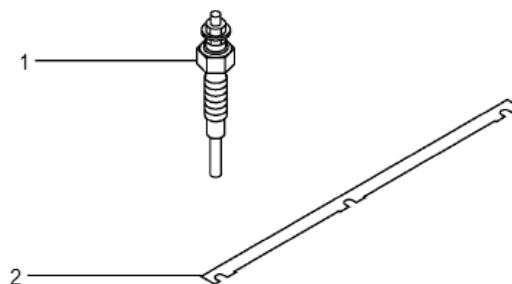



P-69


[illegible]

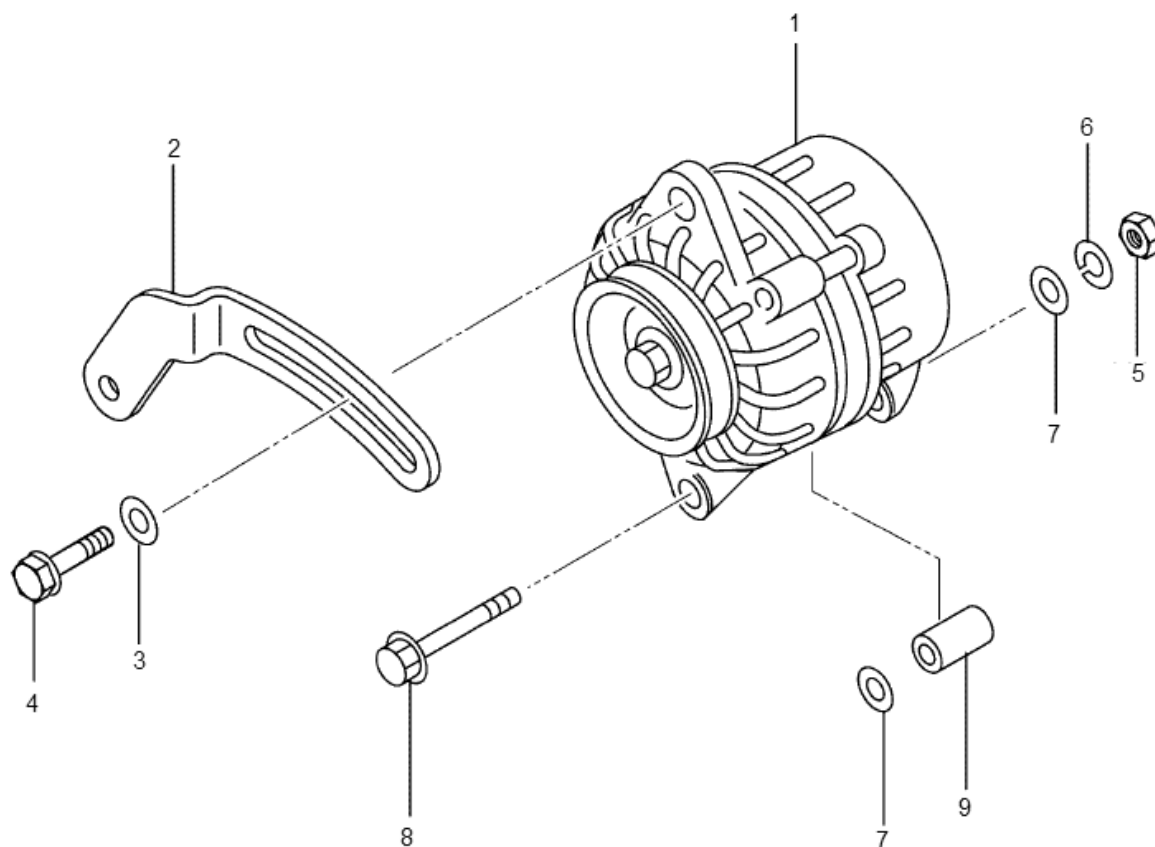



P-70


[illegible]

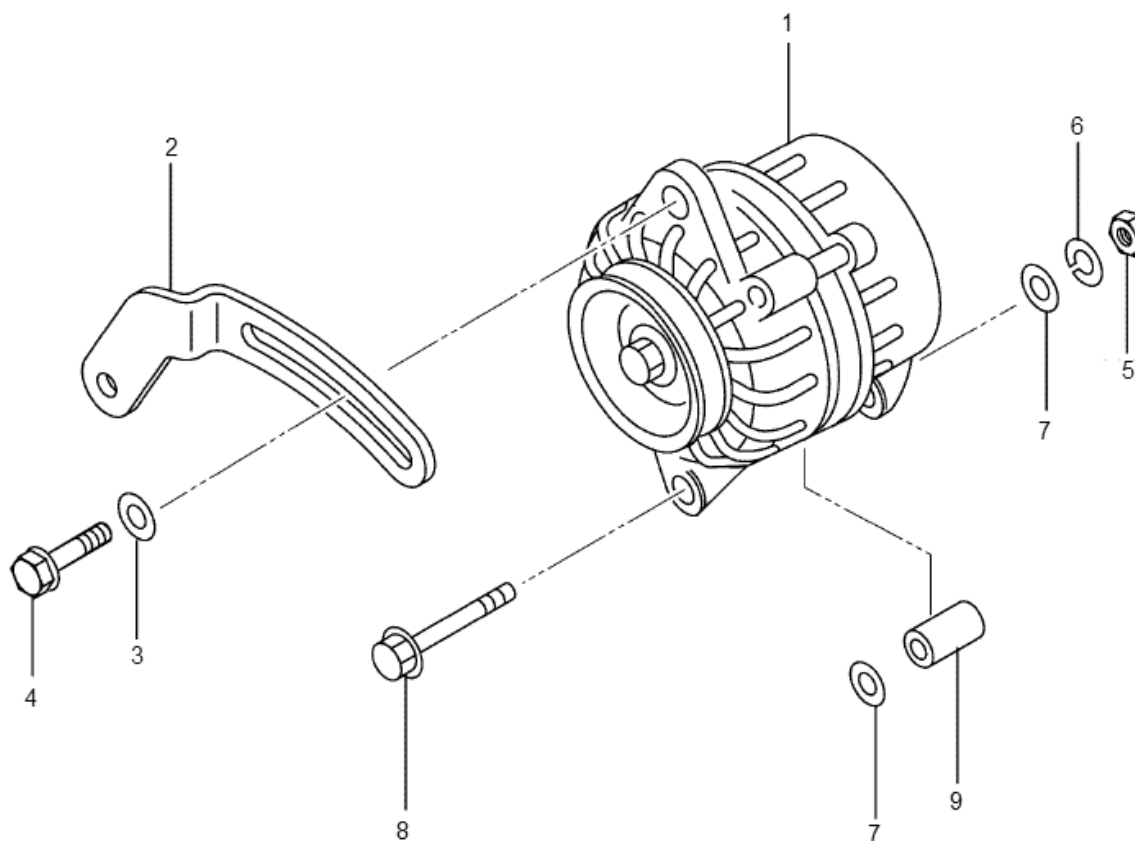



P-71


[illegible]

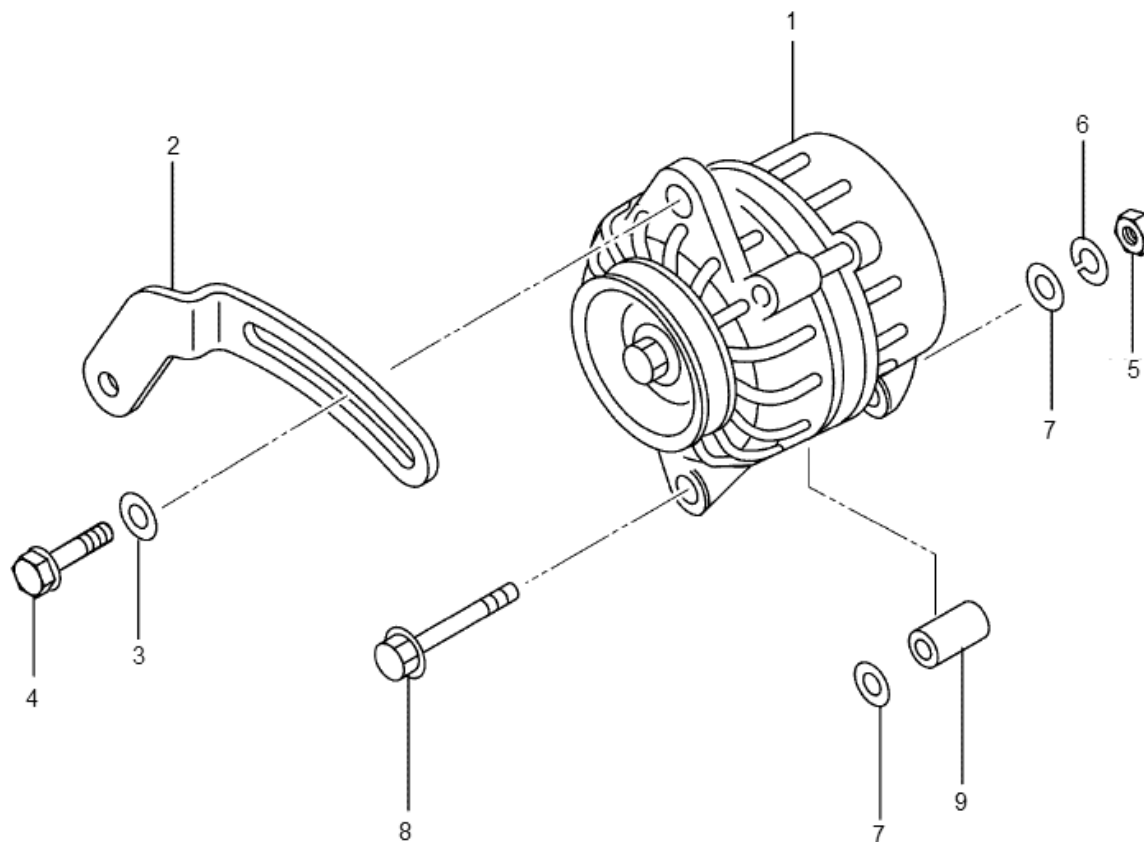



P-72


[illegible]

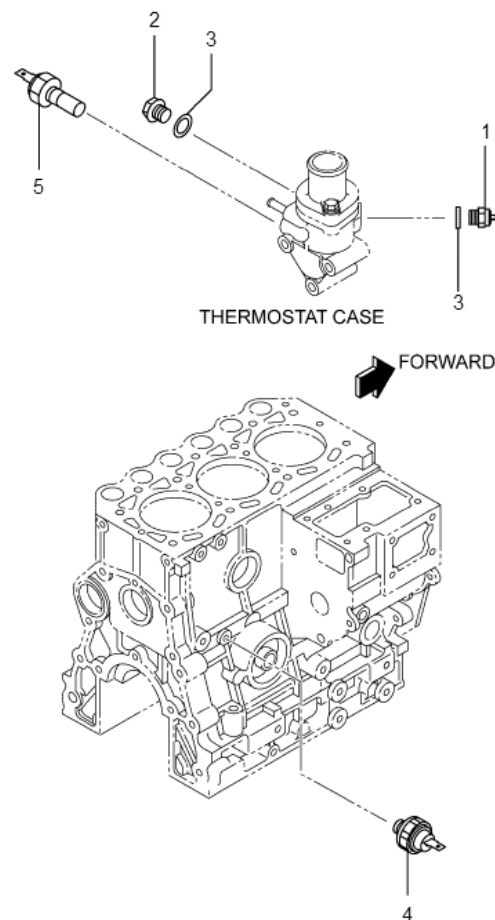



P-73

[illegible]

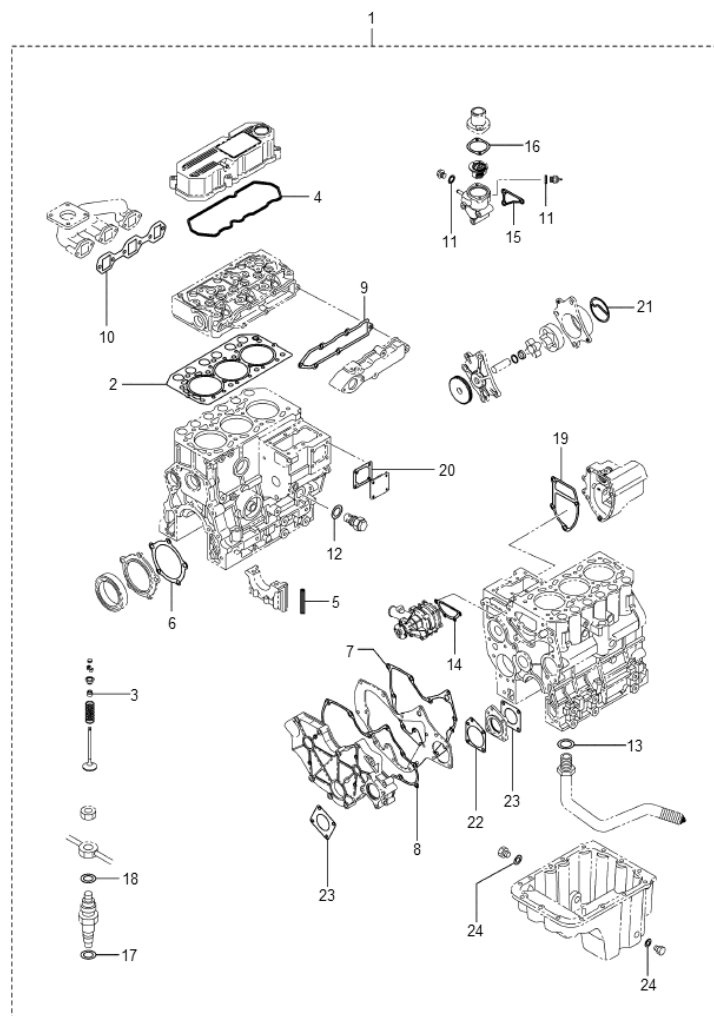




P-74

[illegible]



RADIATOR & RELATED PARTS


P-75

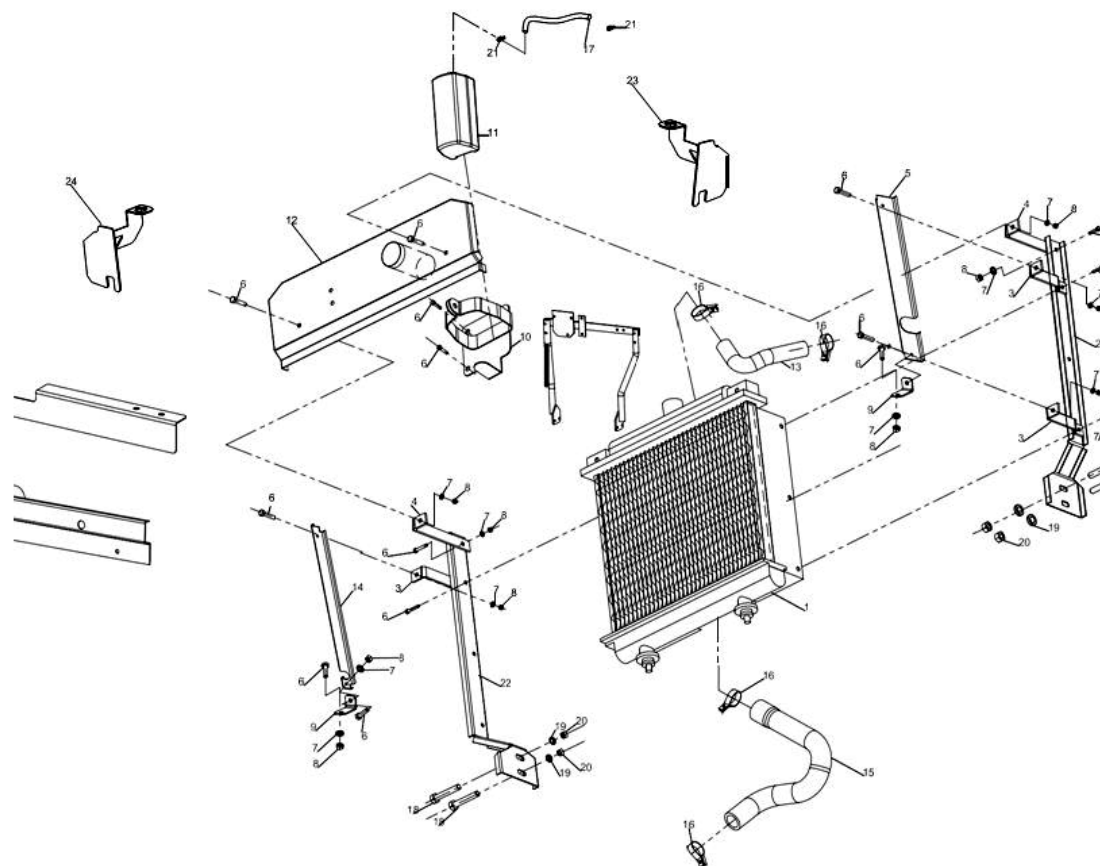



P-75

[illegible]

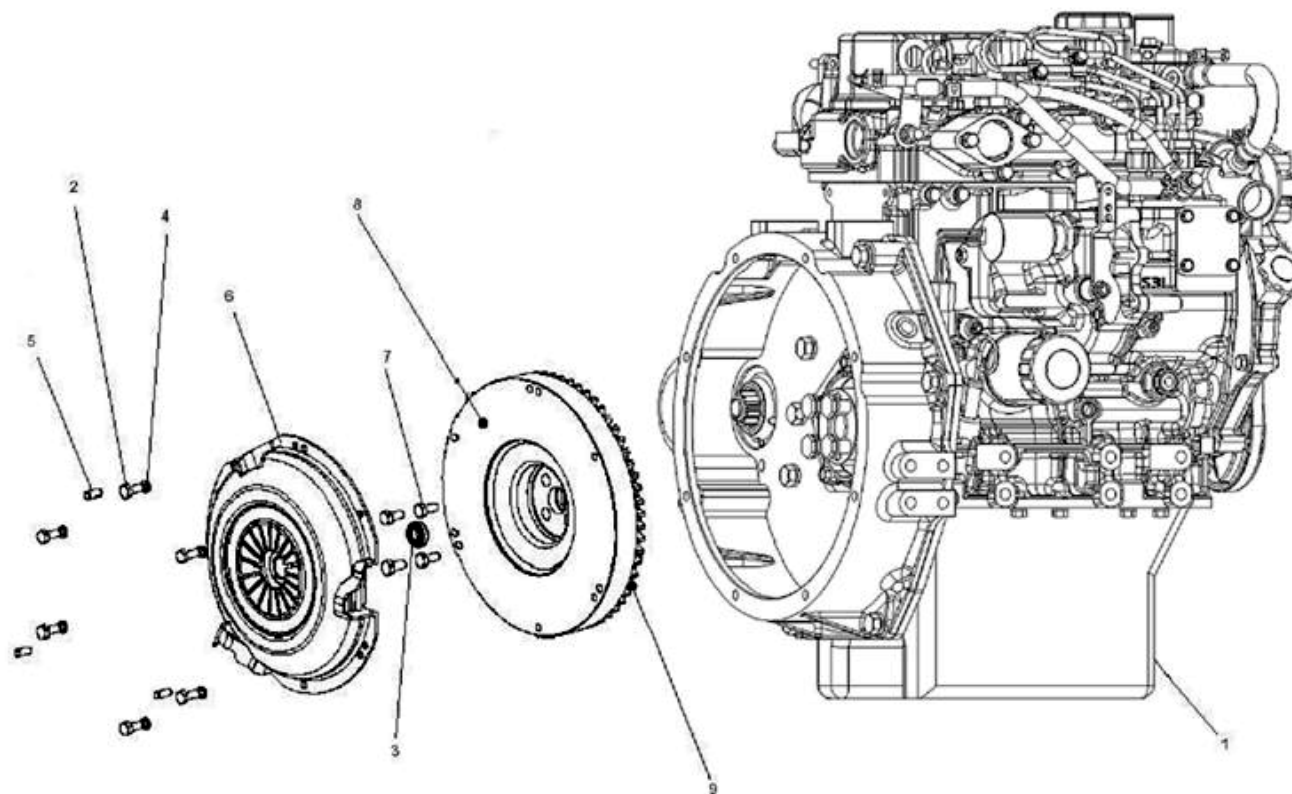




P-76

[illegible]



DRY AIR CLEANER & RELATED PARTS


P-77

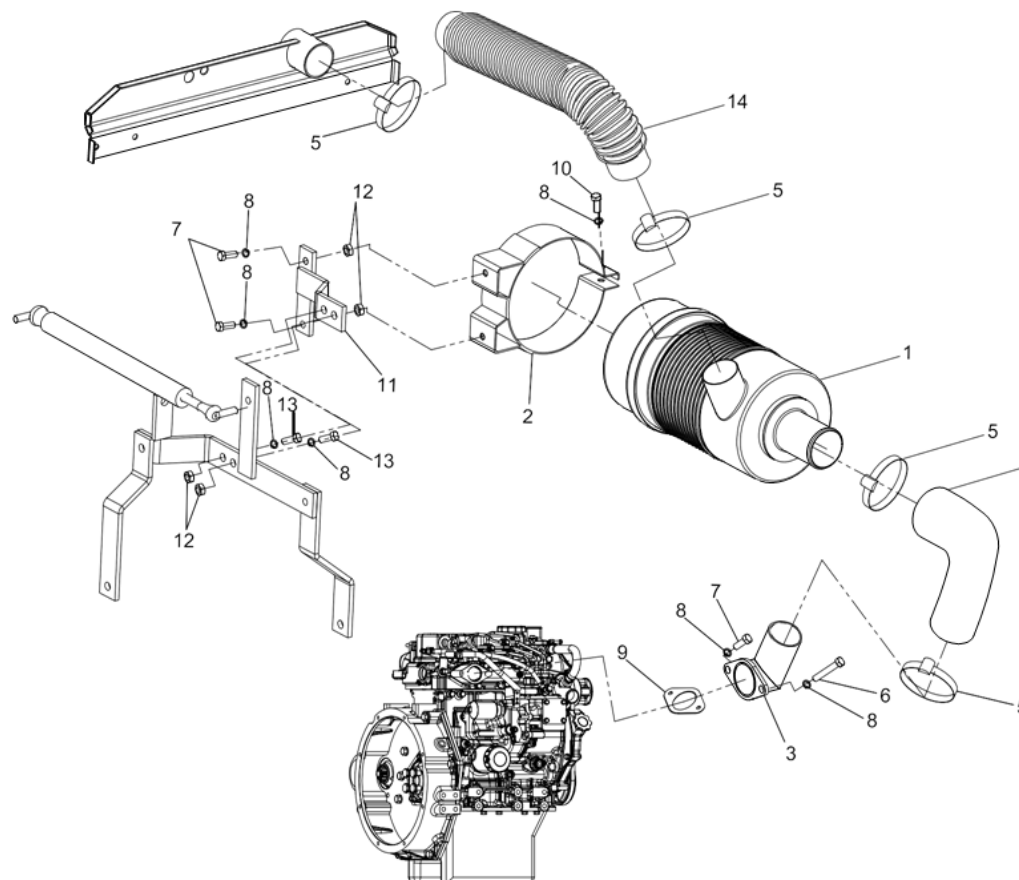



P-77


[illegible]

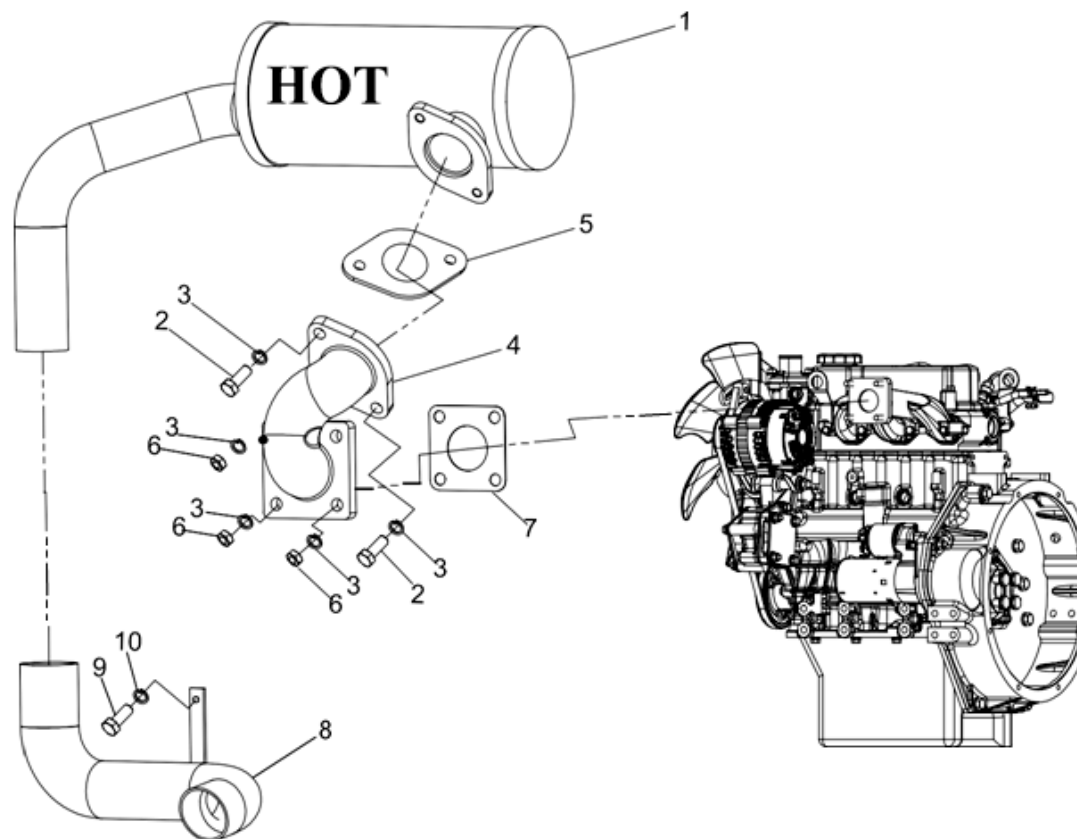



P-78

[illegible]

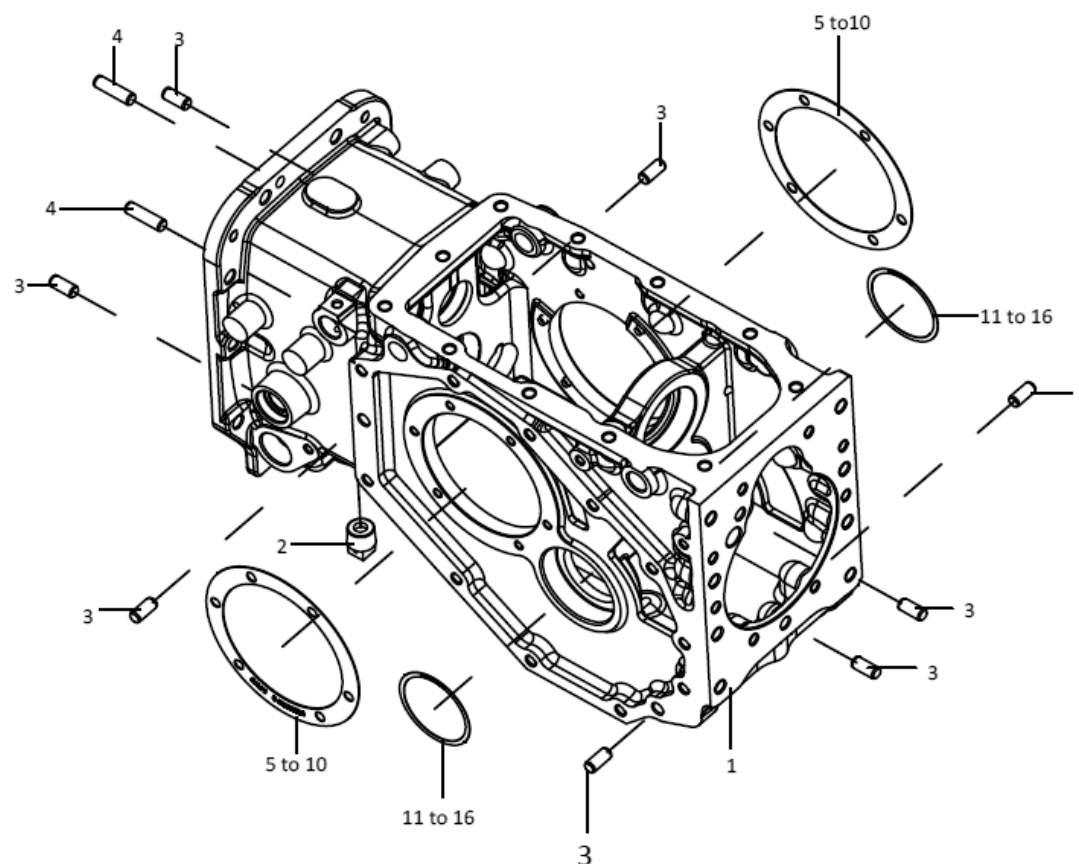




P-79

[illegible]



BOTTOM COVER PLATE MID PTO


P-80

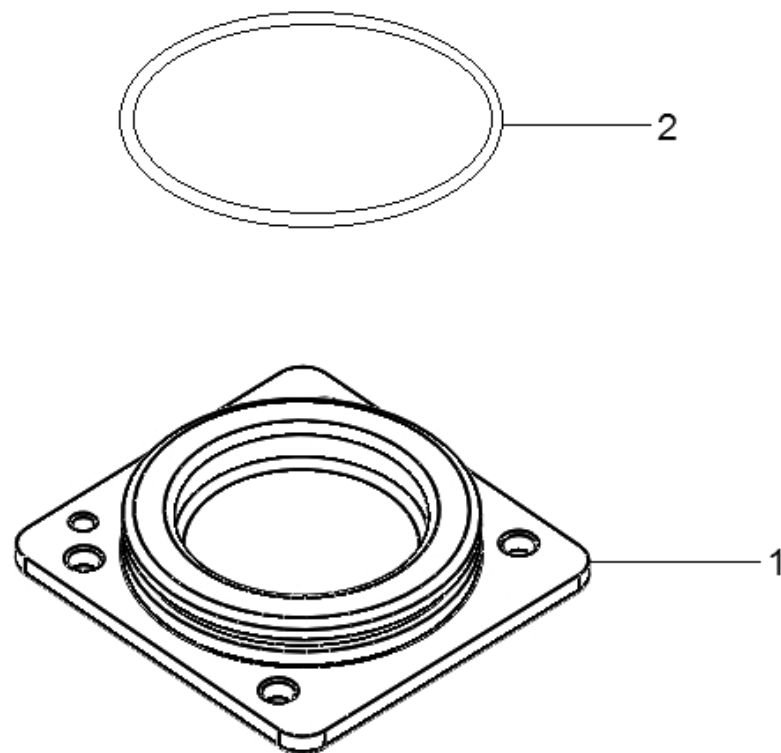



P-80


[illegible]

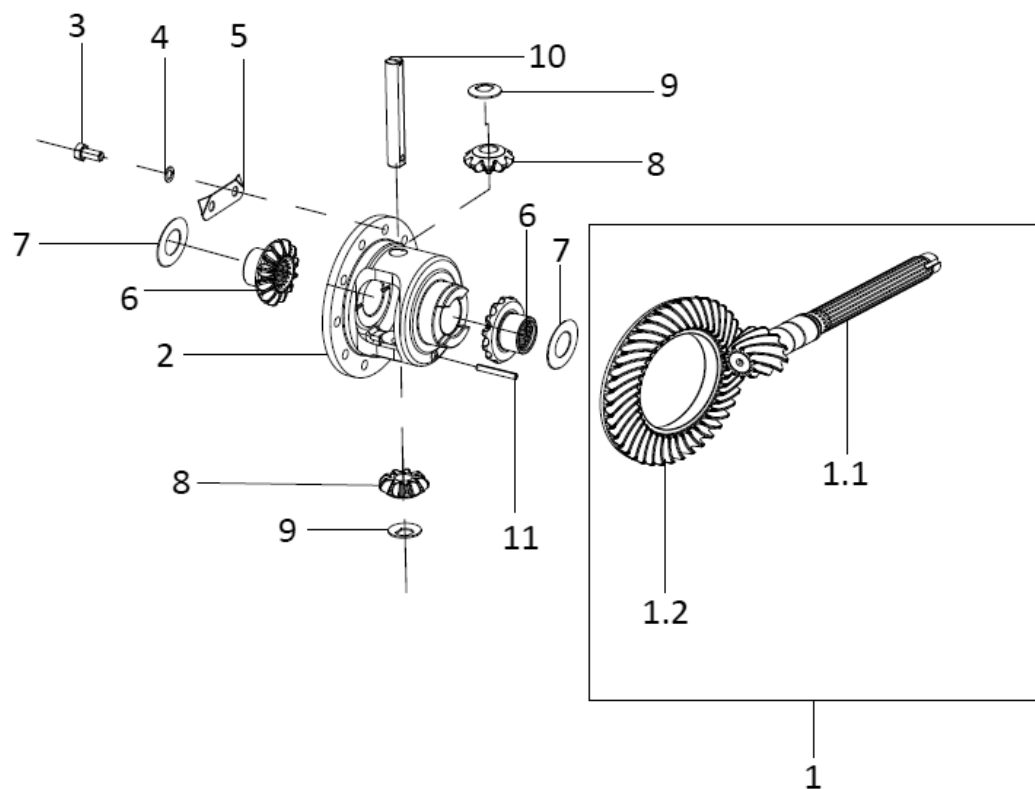



P-81


[illegible]

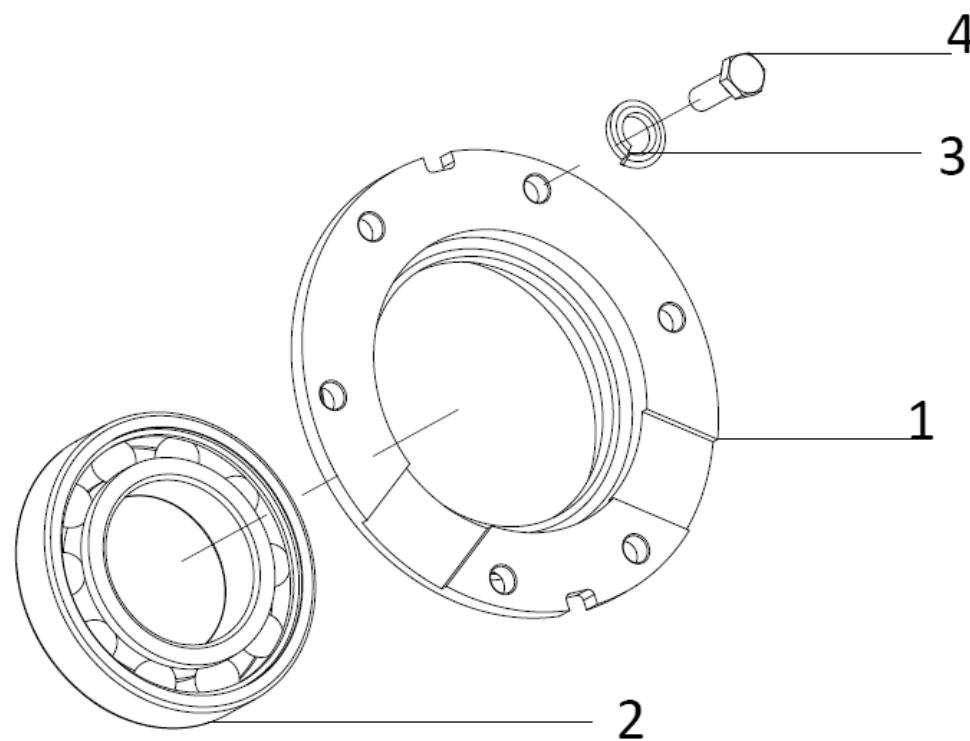



P-82


[illegible]

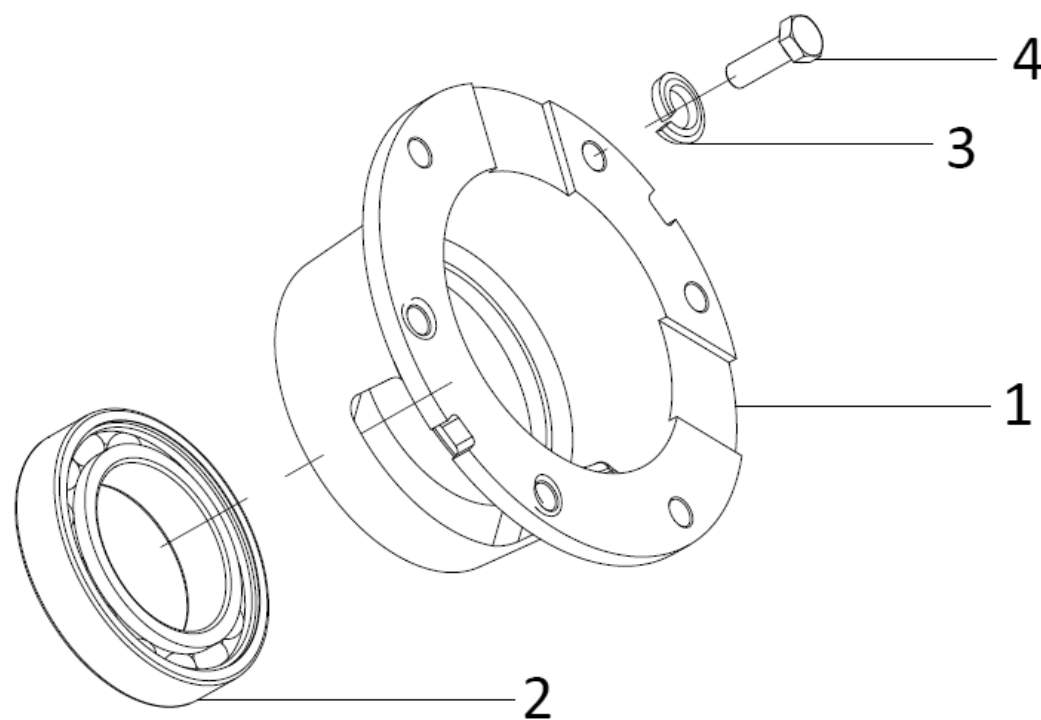



P-83


[illegible]

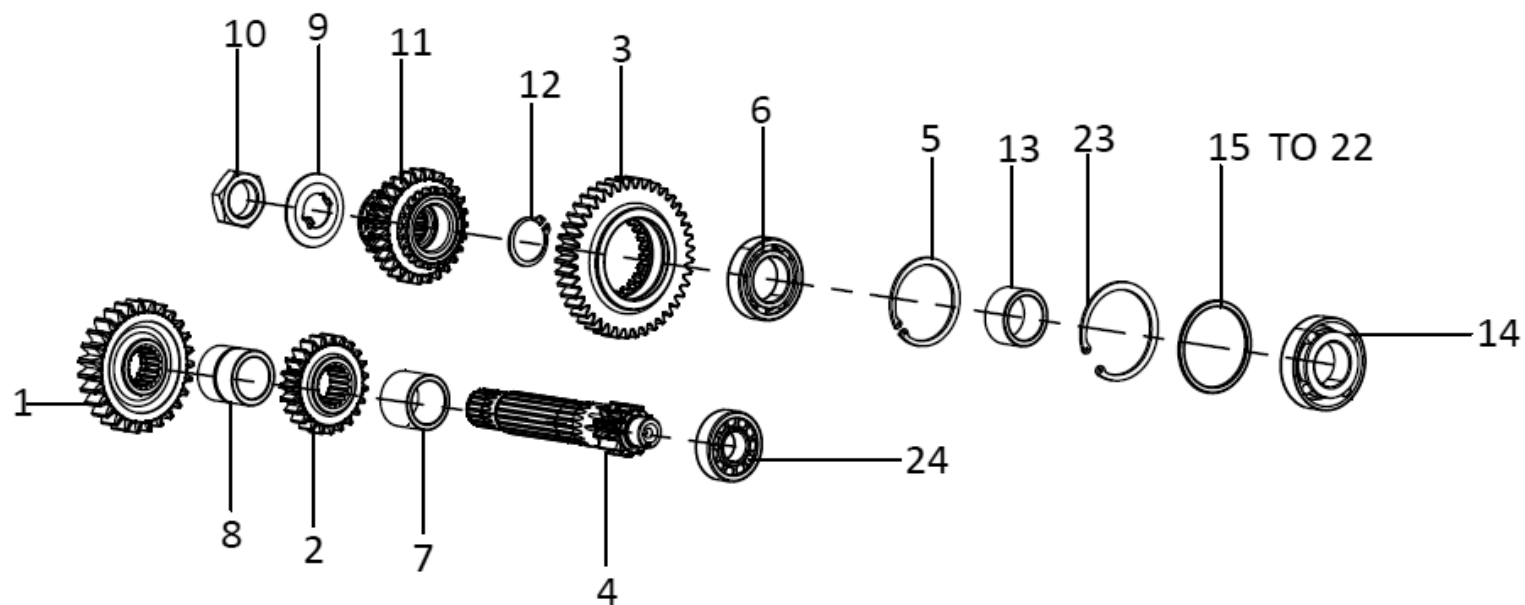



P-84


[illegible]

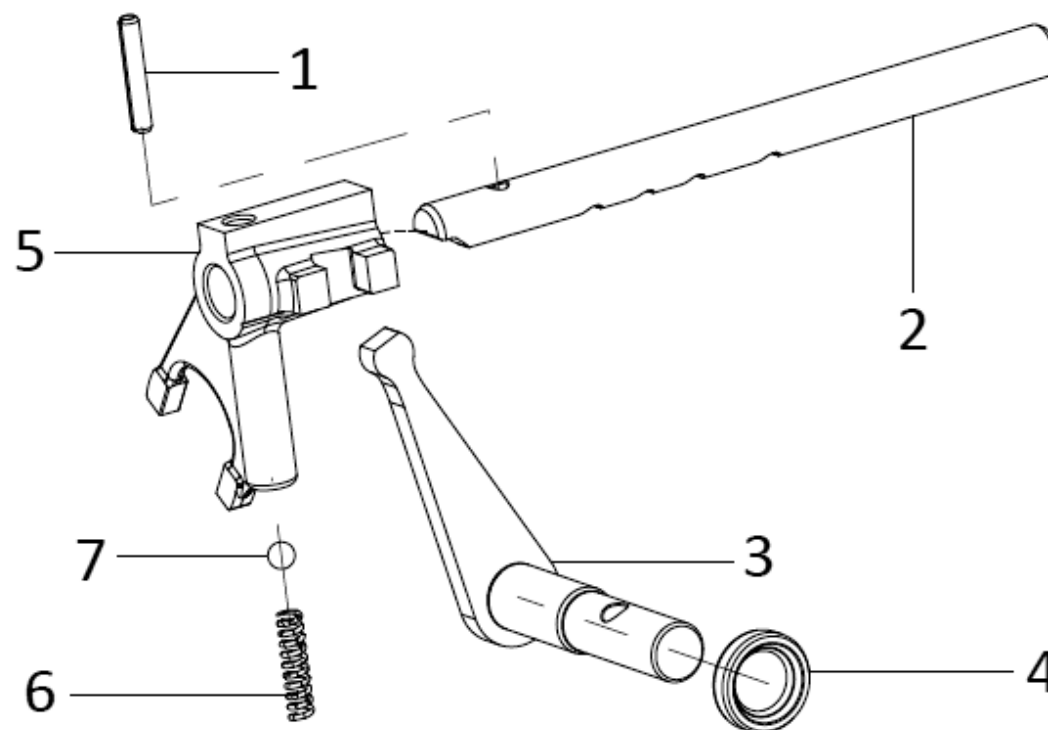



P-85


[illegible]

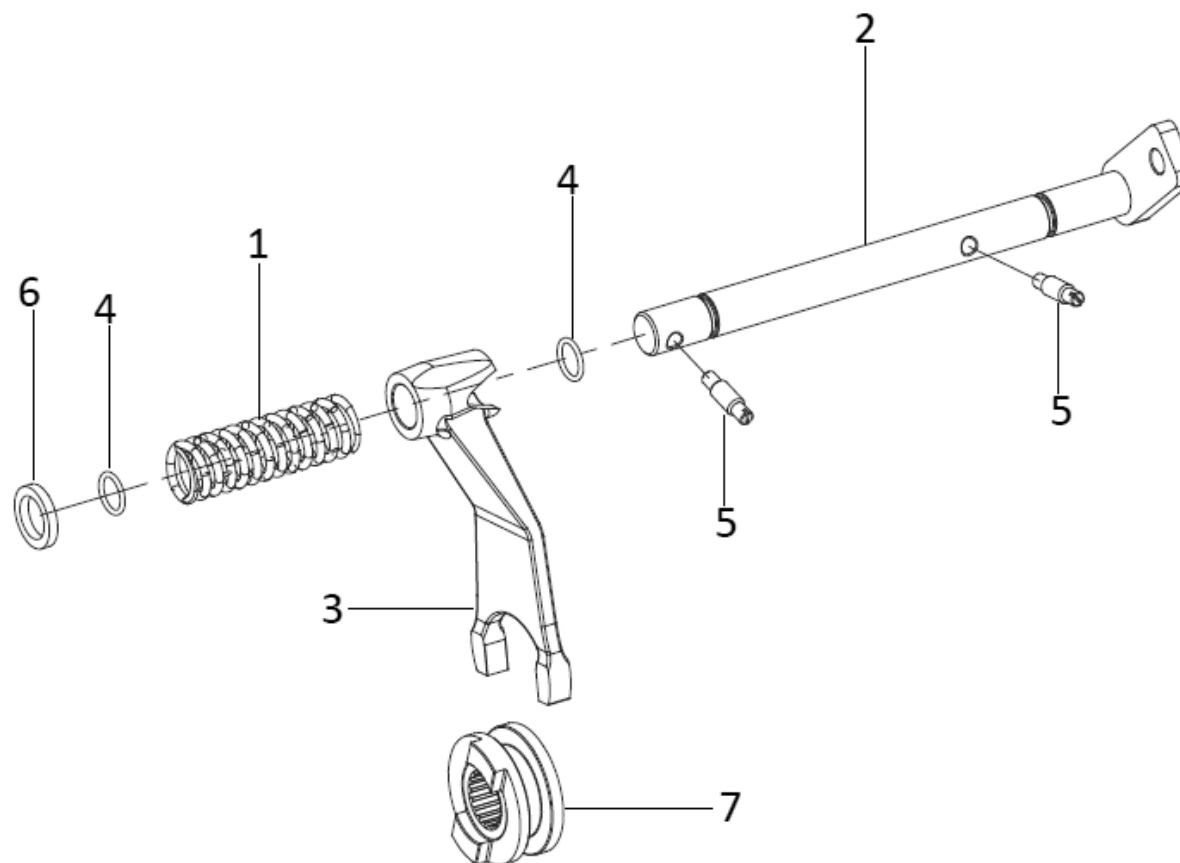



P-86


[illegible]

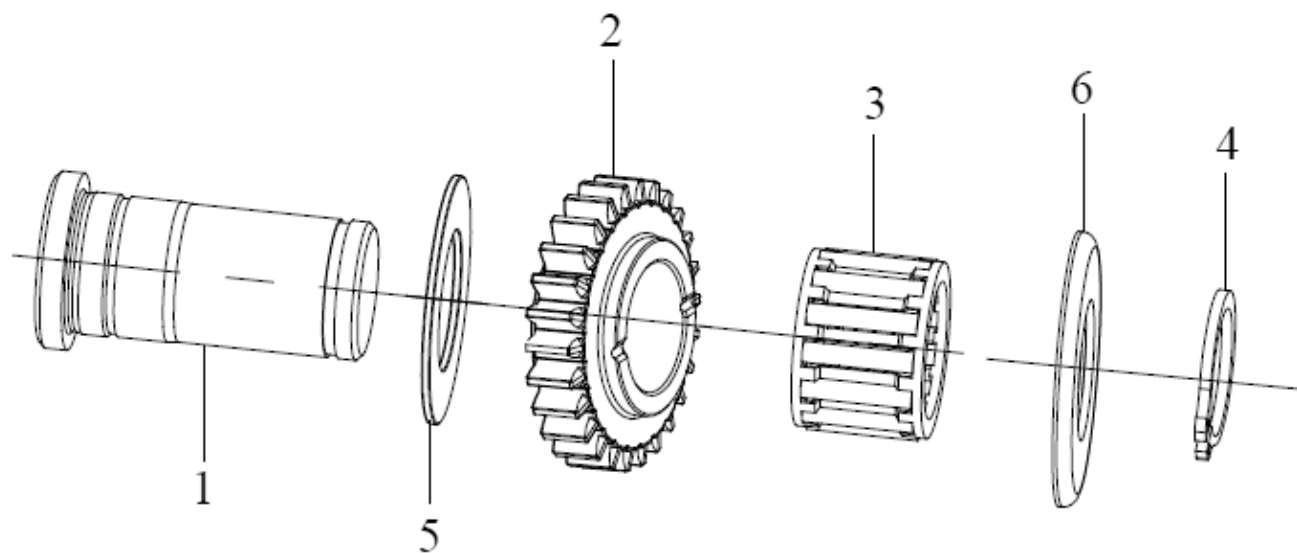



P-87


[illegible]

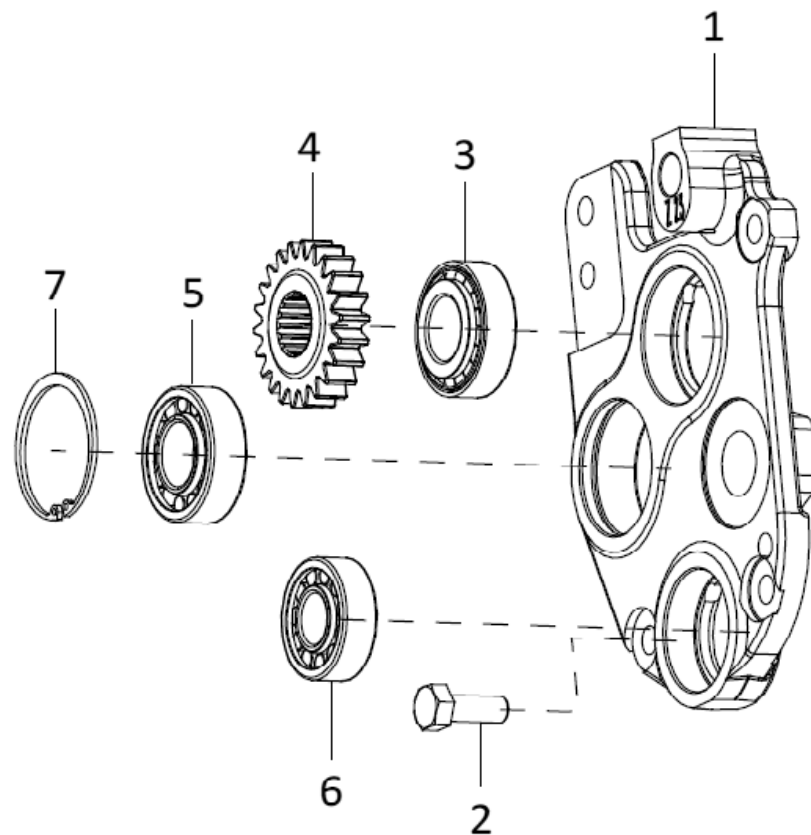



P-88

[illegible]

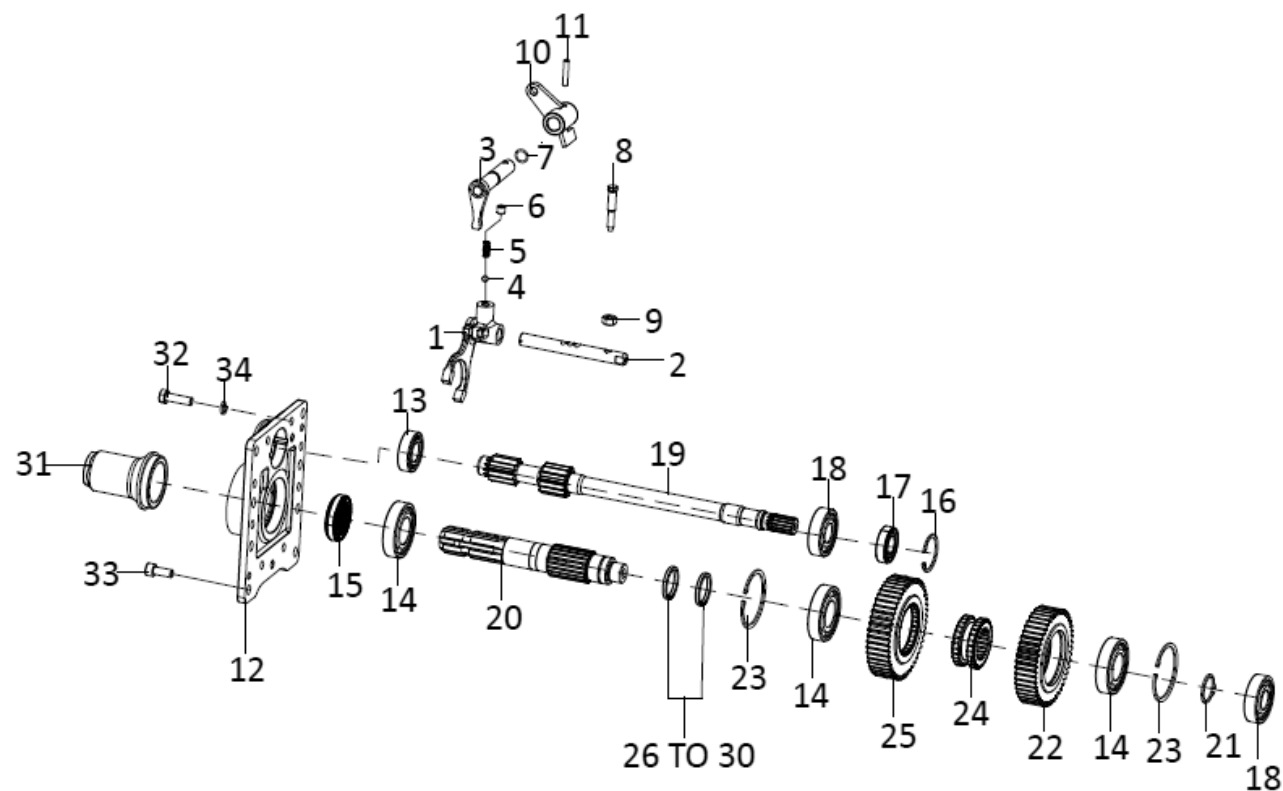




GEAR TRAIN PTO & SHIFTER ARRANGEMENT

P-89

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	PM0601097	PTO SHIFTER FORK	1	
2	ALL MODELS	PM0601098	PTO SHIFTER ROD	1	
3	ALL MODELS	PM0601099	PTO SHIFTER LEVER ASSY	1	
4	ALL MODELS	H030001	BALL 5/16" SNAP LOCK	1	
5	ALL MODELS	PM0601100	PTO SHIFTER SPRING	1	
6	ALL MODELS	H51082	GRUB SCREW M10X1.5X10-45H	1	
7	ALL MODELS	PM0601108	O RING 2X14	1	
8	ALL MODELS	PM0601102	SCREW PTO SHIFTER ROD	1	
9	ALL MODELS	H001001	HEX NUT M10X1.5-8	1	
10	ALL MODELS	PM0601103	PTO GEAR SHIFTER LEVER ID	1	
11	ALL MODELS	H073002	SPIRAL DOWEL PIN HEAVY DUTY 6X35	1	
12	ALL MODELS	PM0601104	PTO- BACK COVER	1	
13	ALL MODELS	H049003	ROLLER BEARING NJ205	1	
14	ALL MODELS	H026007	BALL BEARING 6207	3	
15	ALL MODELS	H071001	OIL SEAL 35X60X14.5	1	
16	ALL MODELS	H025068	CIRCLIP B47X2.0 H	1	
17	ALL MODELS	H026027	BALL BEARING 6005	1	
18	ALL MODELS	H026023	BALL BEARING 6305	2	
19	ALL MODELS	PM0601110	INPUT PTO SHAFT (Z-13/Z-11)	1	
20	ALL MODELS	PM0601111	PTO SHAFT 6 SPLINE	1	
21	ALL MODELS	H050013	EXT. CIRCLIP A35X2.5 H	1	
22	ALL MODELS	PM0601112	PTO GEAR (Z-49)	1	
23	ALL MODELS	H018007	INT. CIRCLIP B72X2.5 N	2	
24	ALL MODELS	PM0601113	PTO SHIFTING SLEEVE	1	
25	ALL MODELS	PM0601114	PTO GEAR (Z-51)	1	
26	ALL MODELS	PM0601115	SPACER PTO SHAFT-6S (4.7 MM)	AR	
27	ALL MODELS	PM0601116	SPACER PTO SHAFT-6S (4.8 MM)	AR	
28	ALL MODELS	PM0601117	SPACER PTO SHAFT-6S (4.9 MM)	AR	
29	ALL MODELS	PM0601118	SPACER PTO SHAFT-6S (5.0 MM)	AR	
30	ALL MODELS	PM0601119	SPACER PTO SHAFT-6S (5.1 MM)	AR	

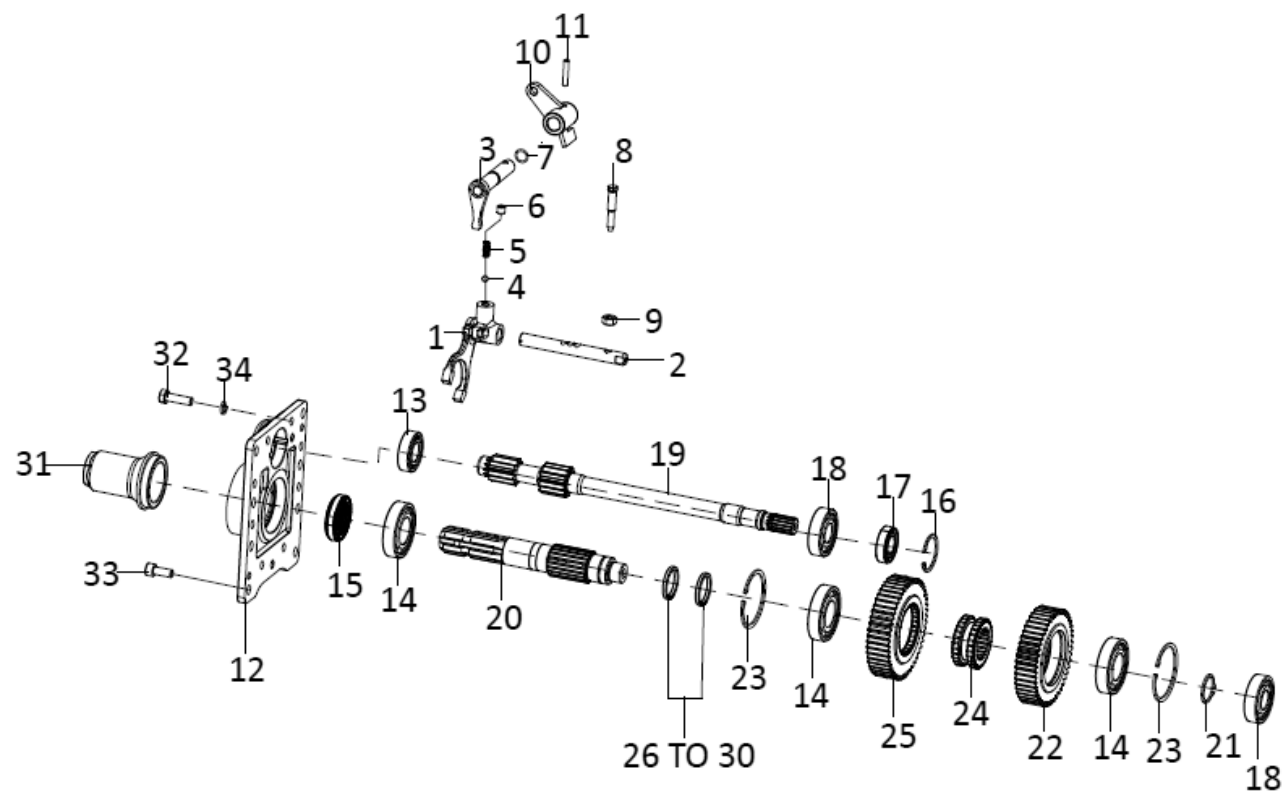




P-89

[illegible]



DIFFERENTIAL LOCK CONTROL ASSEMBLY

P-90

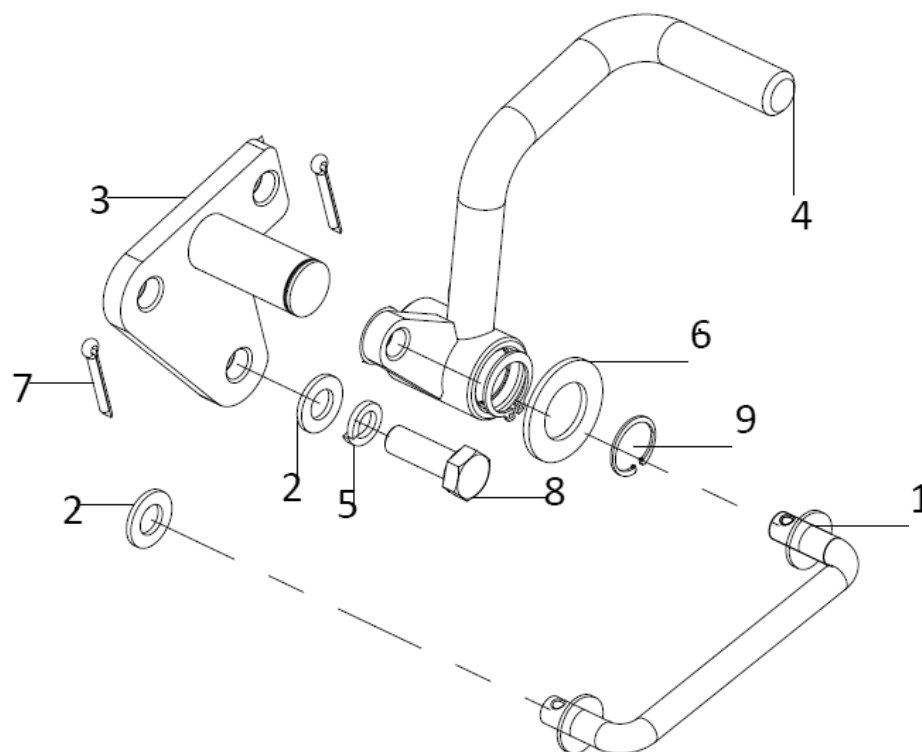




P-90

[illegible]



HITCH REAR SWINGING DRAWBAR SUBASSEMBLY


P-91

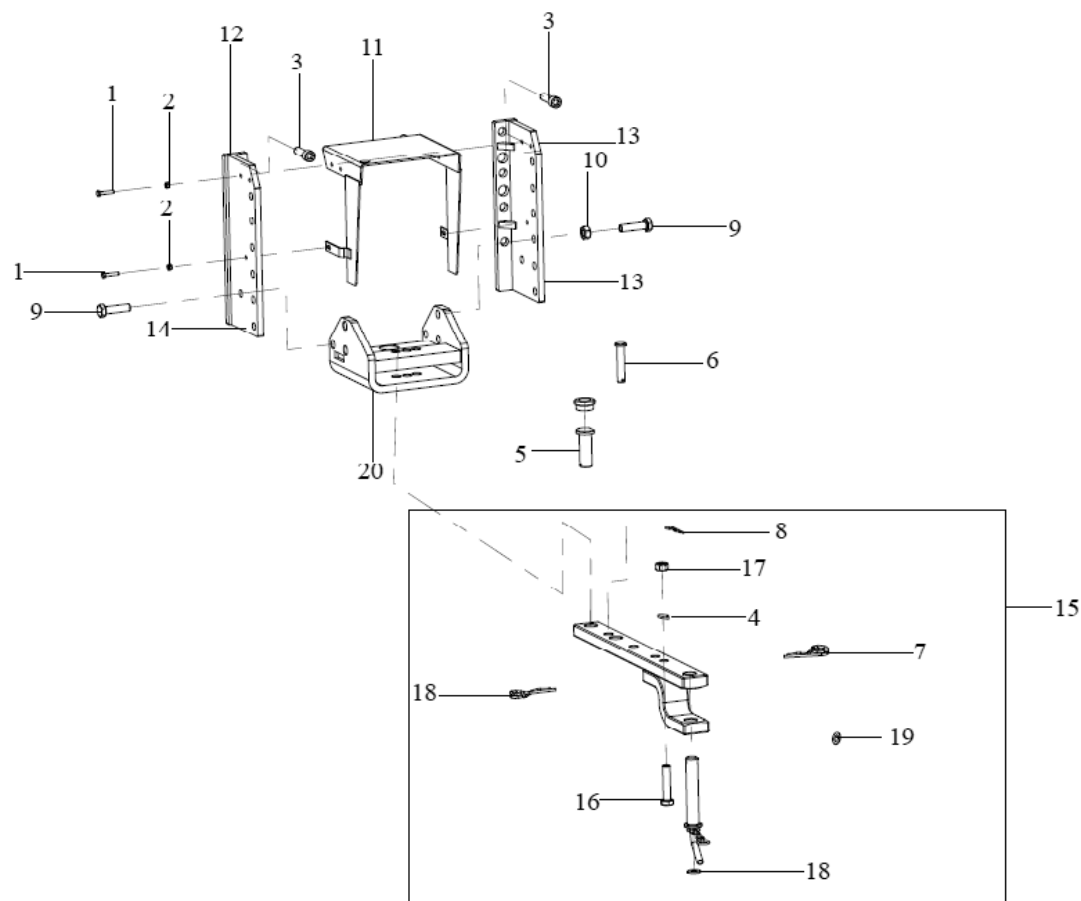

HITCH REAR SWINGING DRAWBAR SUBASSEMBLY

P-91


[illegible]

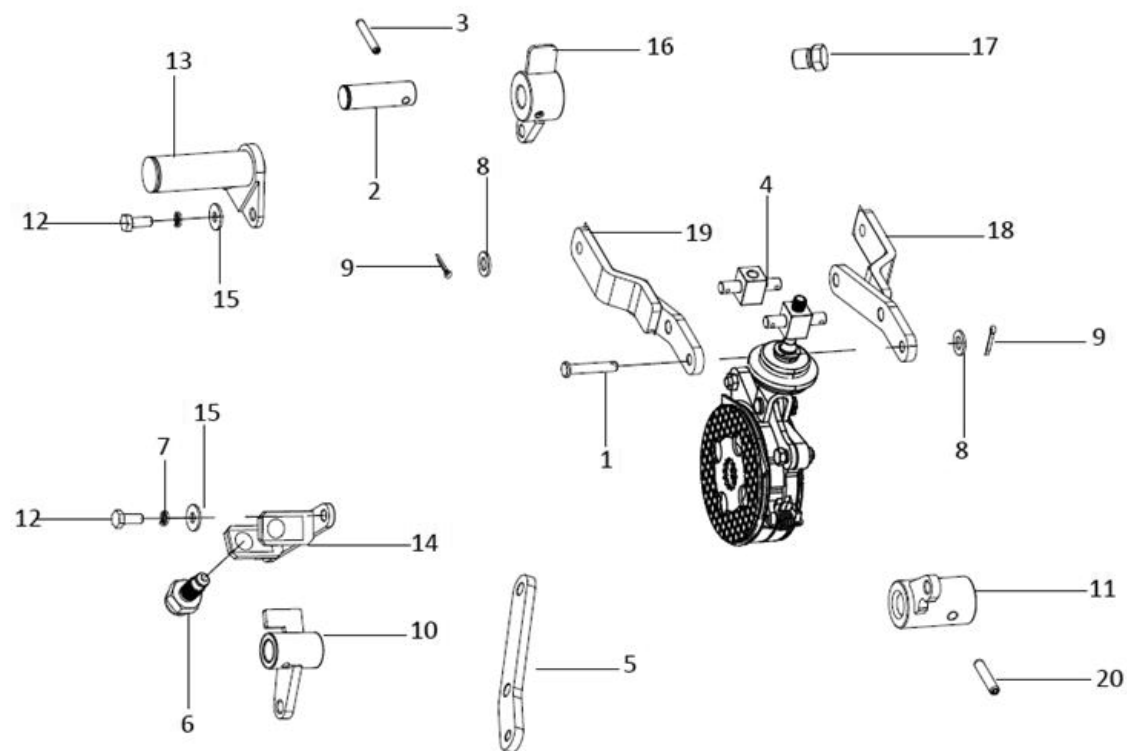



P-92


[illegible]

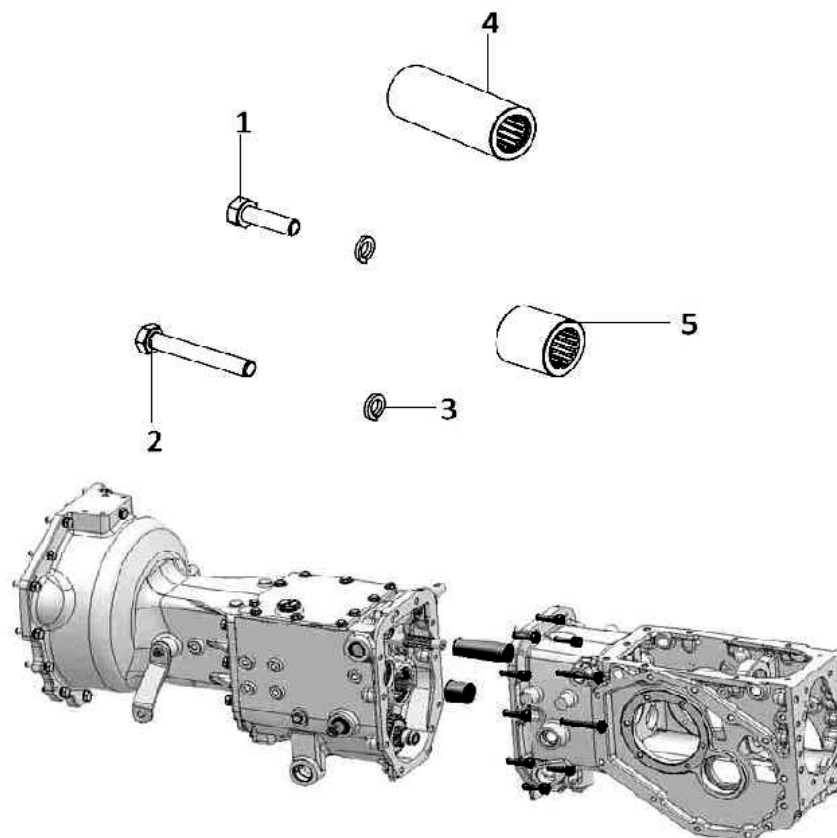



P-93

[illegible]

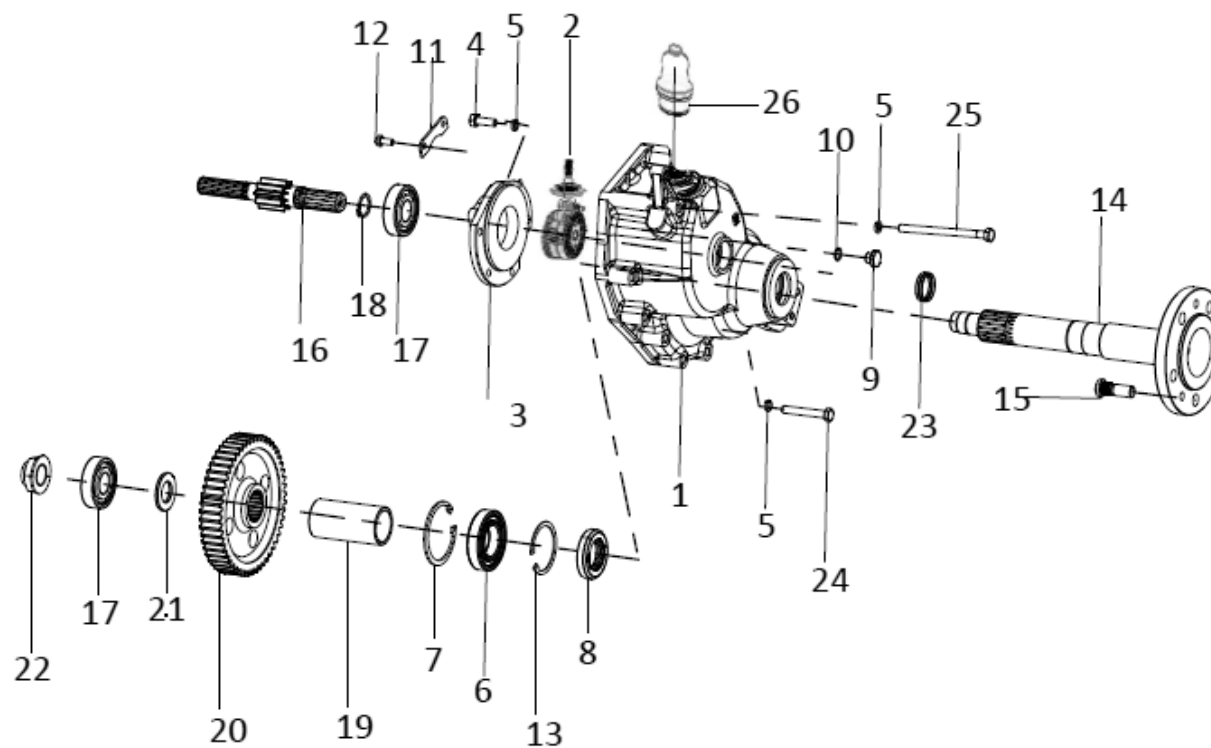




REAR AXLE HSG RH

P-94

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	PM0701020	TRUMPET HOUSING REAR AXEL RH	1	
2	ALL MODELS	PM0701021	WET BRAKE ASSEMBLY 4.5"	1	
3	ALL MODELS	PM0701022	BRAKE INNER HOUSING RH	1	
4	ALL MODELS	H003132	HEX HEAD BOLT M10X1.50X30-10.9 (16A/F)	5	
5	ALL MODELS	H006001	SPRING WASHER M10	5	
6	ALL MODELS	H026004	BALL BEARING 6209 CN	1	
7	ALL MODELS	H018004	INT. CIRCLIP B85X3 N	1	
8	ALL MODELS	H071002	OIL SEAL 45X70X14.0(METALLIC)	1	
9	ALL MODELS	PM0701023	DRAIN PLUG M14X1.5X10	2	
10	ALL MODELS	H031006	COPPER WASHER 14x20x1.5	2	
11	ALL MODELS	PM0701024	LOCKING WASHER BP SHAFT BEARING	1	
12	ALL MODELS	H004006	HEX HEAD SCREW M8X1.25X18-10.9	2	
13	ALL MODELS	H072001	INTERNAL CIRCLIP B70X1.5 N	1	
14	ALL MODELS	PM0701025	REAR AXLE	1	
15	ALL MODELS	P1002005	REAR WHEEL BOLT M16X1.5X48-10.9	5	
16	ALL MODELS	PM0701027	BP SHAFT RH (Z-9)	1	
17	ALL MODELS	H026008	BALL BEARING 6306	1	
18	ALL MODELS	PM0701028	DIFF. LOCK SLEEVE	1	
19	ALL MODELS	H050010	EXT. CIRCLIP A30X2 H	1	
20	ALL MODELS	PM0701029	BULL GEAR SPACER	1	
21	ALL MODELS	PM0701030	BULL GEAR (Z-53)	1	
22	ALL MODELS	PM0701031	AXLE SHAFT SPACER	1	
23	ALL MODELS	PM0701032	CRIMPING NUT M30X1.5	1	
24	ALL MODELS	PM0701033	PLUG TRUMPET HSG	1	
25	ALL MODELS	H003133	HEX HEAD BOLT M10X1.50X70-10.9	10	
26	ALL MODELS	H003134	HEX HEAD BOLT M10X1.50X145-10.9 (16A/F)	1	
27	ALL MODELS	*	SEALANT LIQUID ANAEROBIC	9	(HIGHER STRENGTH)
28	ALL MODELS	*	LOCTITE L-515	AR	

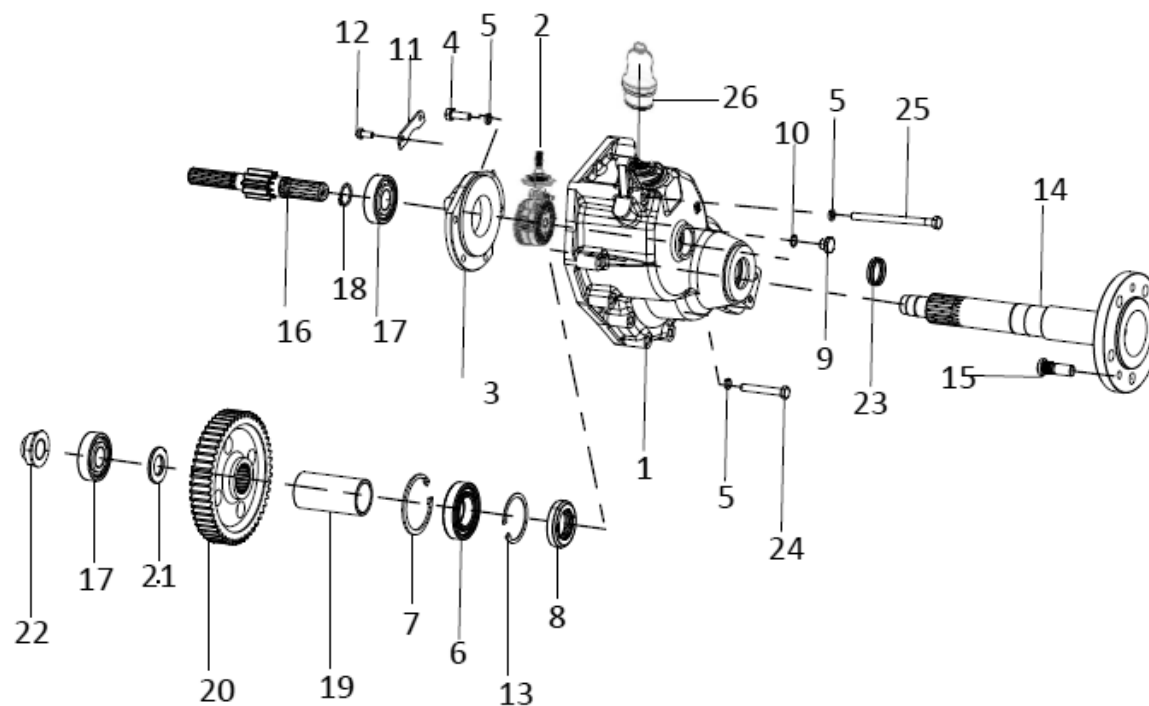



REAR AXLE HSG LH


P-95

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	PM0701034	TRUMPET HOUSING REAR AXEL LH	1	
2	ALL MODELS	PM0701021	WET BRAKE ASSEMBLY 4.5"	1	
3	ALL MODELS	PM0701035	BRAKE INNER HOUSING LH	1	
4	ALL MODELS	H003132	HEX HEAD BOLT M10X1.50X30-10.9 (16A/F)	5	
5	ALL MODELS	H006001	SPRING WASHER M10	16	
6	ALL MODELS	H026004	BALL BEARING 6209 CN	1	
7	ALL MODELS	H018004	INT. CIRCLIP B85X3 N	1	
8	ALL MODELS	H071002	OIL SEAL 45X70X14.0(METALLIC)	1	
9	ALL MODELS	PM0701023	DRAIN PLUG M14X1.5X10	2	
10	ALL MODELS	H031006	COPPER WASHER 14x20x1.5	2	
11	ALL MODELS	PM0701024	LOCKING WASHER BP SHAFT BEARING	1	
12	ALL MODELS	H004006	HEX HEAD SCREW M8X1.25X20-10.9	2	
13	ALL MODELS	H072001	INTERNAL CIRCLIP B70X1.5 N	1	
14	ALL MODELS	H003134	HEX HEAD BOLT M10X1.50X145-10.9 (16A/F)	1	
15	ALL MODELS	PM0701025	REAR AXLE	1	
16	ALL MODELS	P1002005	REAR WHEEL BOLT M16X1.5X48-10.9	5	
17	ALL MODELS	H003133	HEX HEAD BOLT M10X1.5X70-10.9	10	
18	ALL MODELS	PM0701036	BP SHAFT LH (Z-9)	1	
19	ALL MODELS	H026008	BALL BEARING 6306	1	
20	ALL MODELS	H050010	EXT. CIRCLIP A30X2 H	1	
21	ALL MODELS	PM0701029	BULL GEAR SPACER	1	
22	ALL MODELS	PM0701030	BULL GEAR (Z-53)	1	
23	ALL MODELS	PM0701031	AXLE SHAFT SPACER	1	
24	ALL MODELS	H026008	BALL BEARING 6306	1	
25	ALL MODELS	PM0701032	CRIMPING NUT M30X1.5	1	
26	ALL MODELS	PM0701033	PLUG TRUMPET HSG	1	
27	ALL MODELS	*	SEALANT LIQUID ANAEROBIC	9	(HIGHER STRENGTH)
28	ALL MODELS	*	LOCTITE L-515	AR	



HARDWARE CLUTCH HSG. TO GB HSG SPEED


P-96

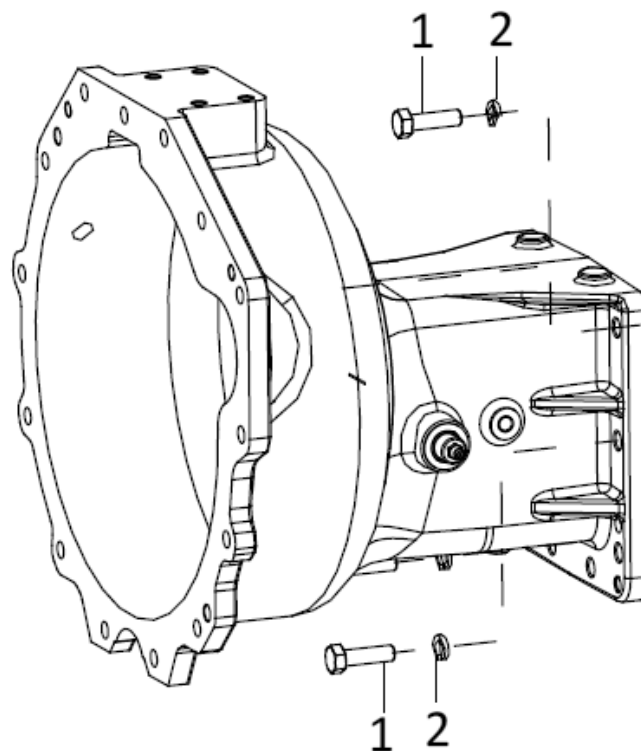



P-96


[illegible]

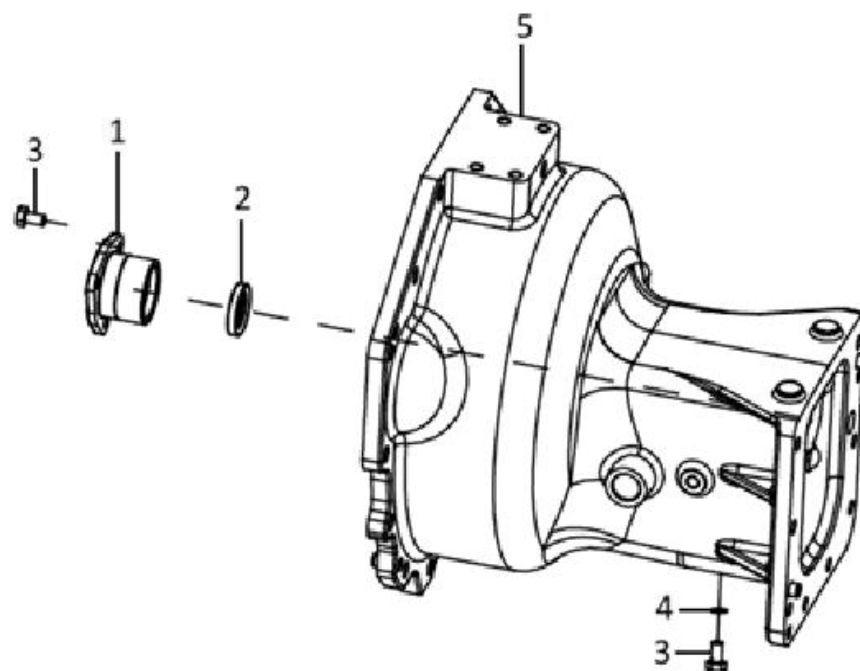



P-97


[illegible]

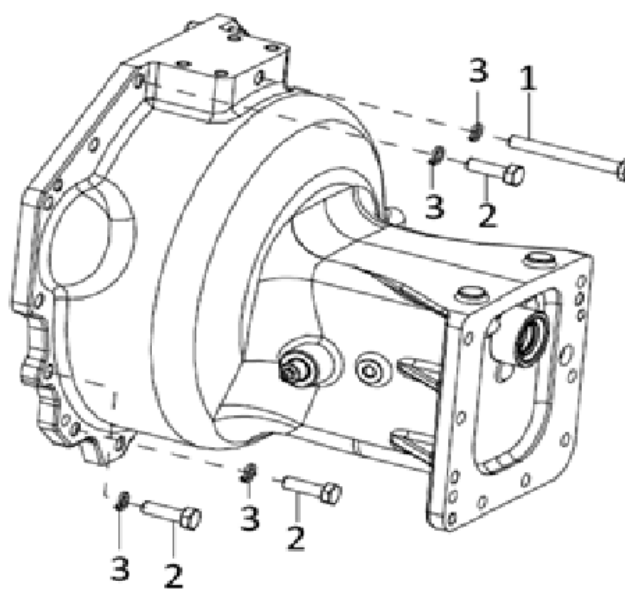



P-98


[illegible]

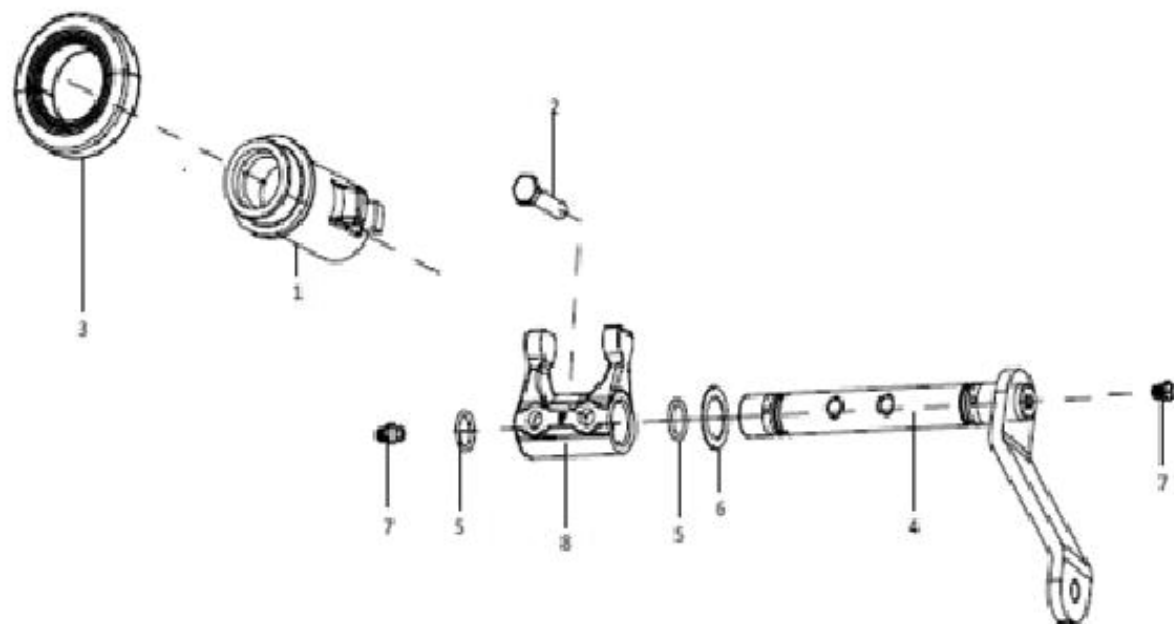



P-99


[illegible]

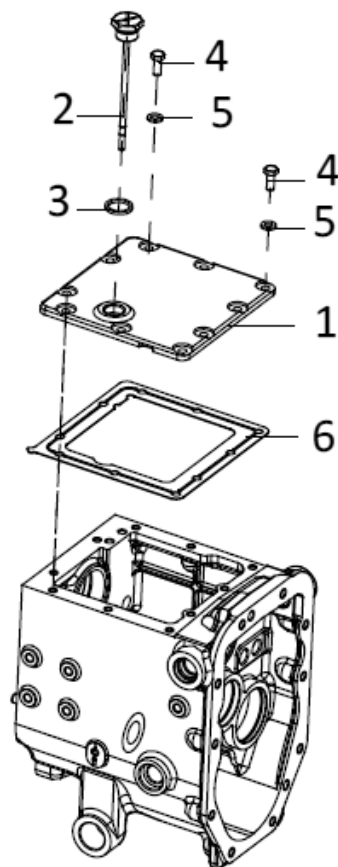



P-100


[illegible]

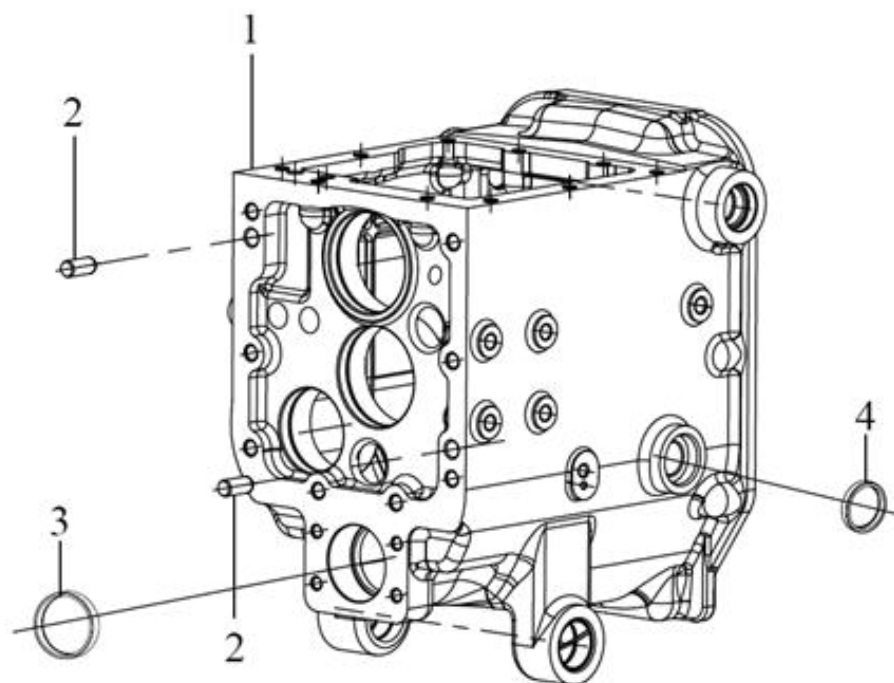



P-101


[illegible]

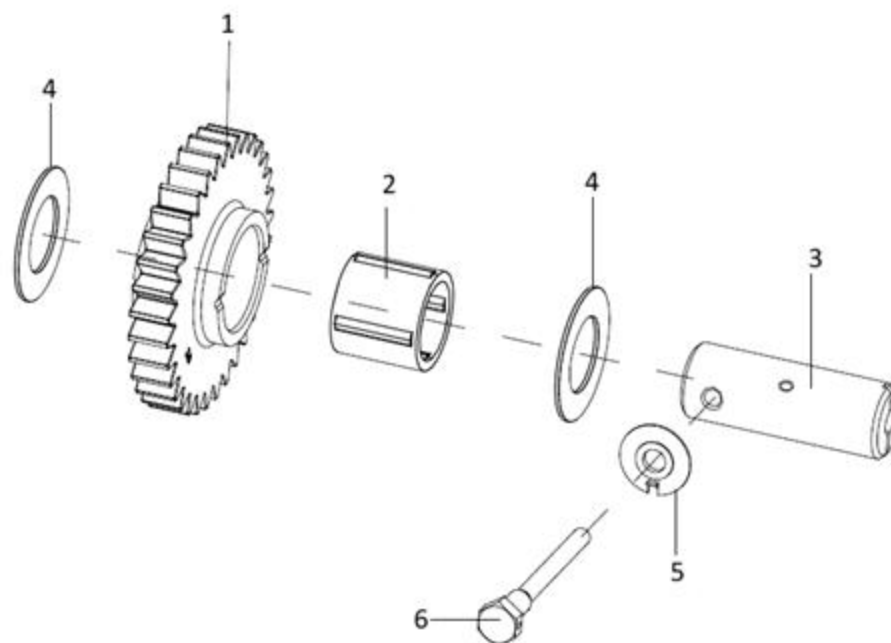



P-102


[illegible]

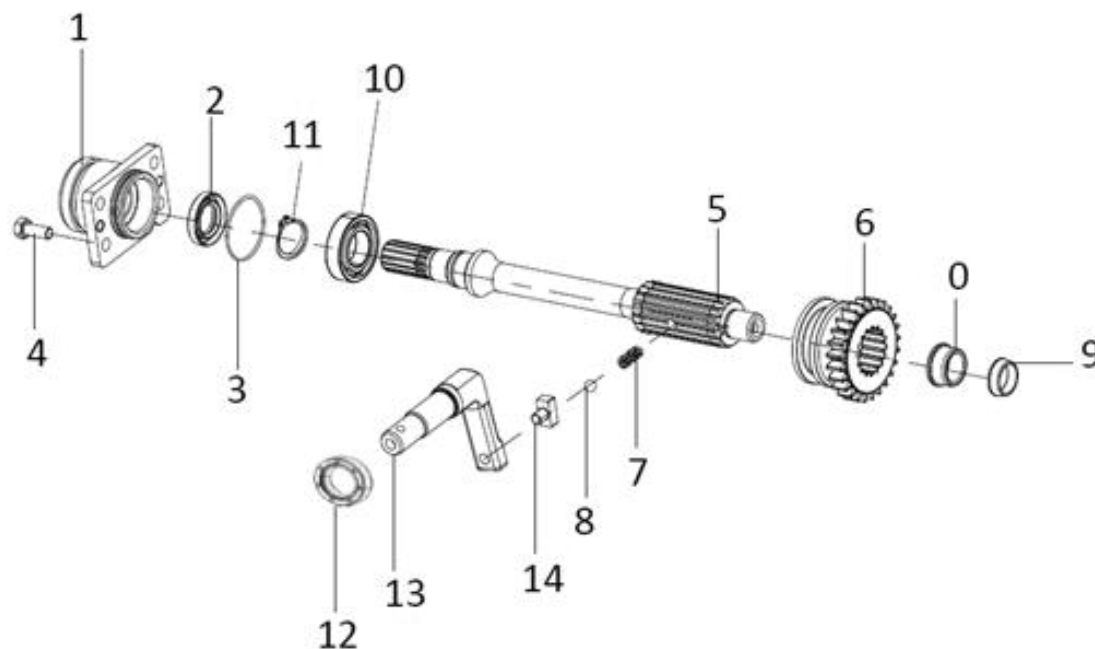



P-103


[illegible]

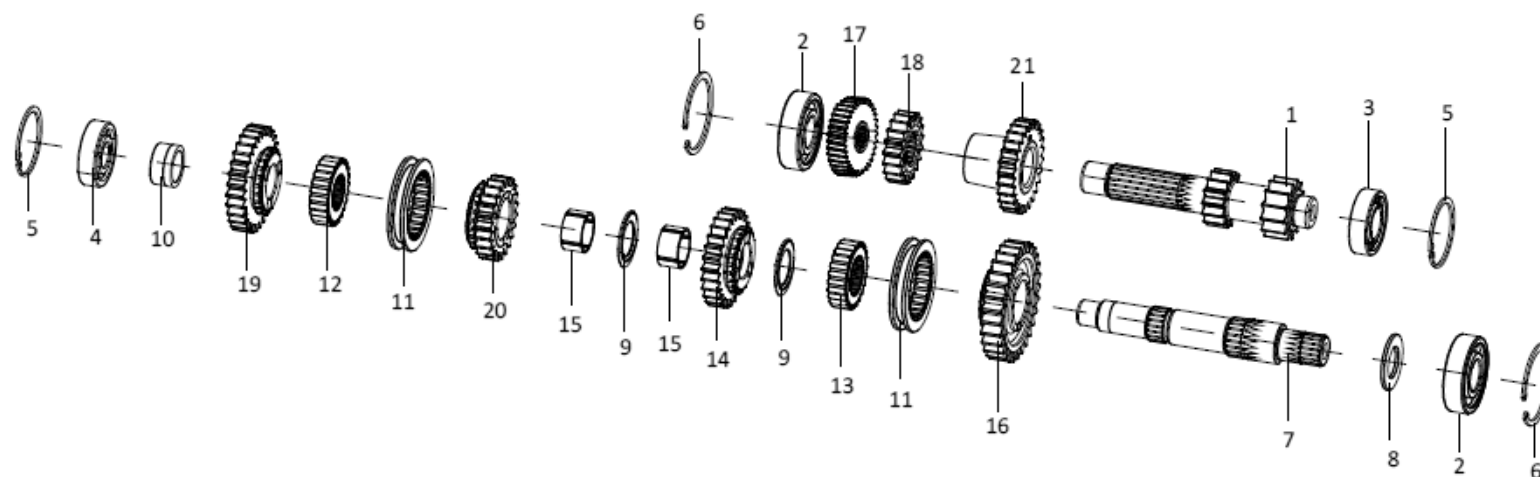



P-104


[illegible]

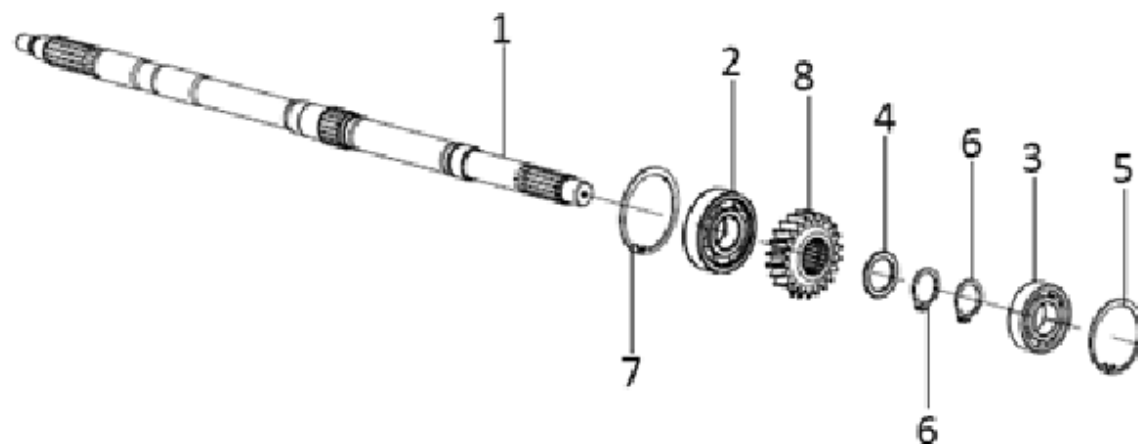



P-105


[illegible]

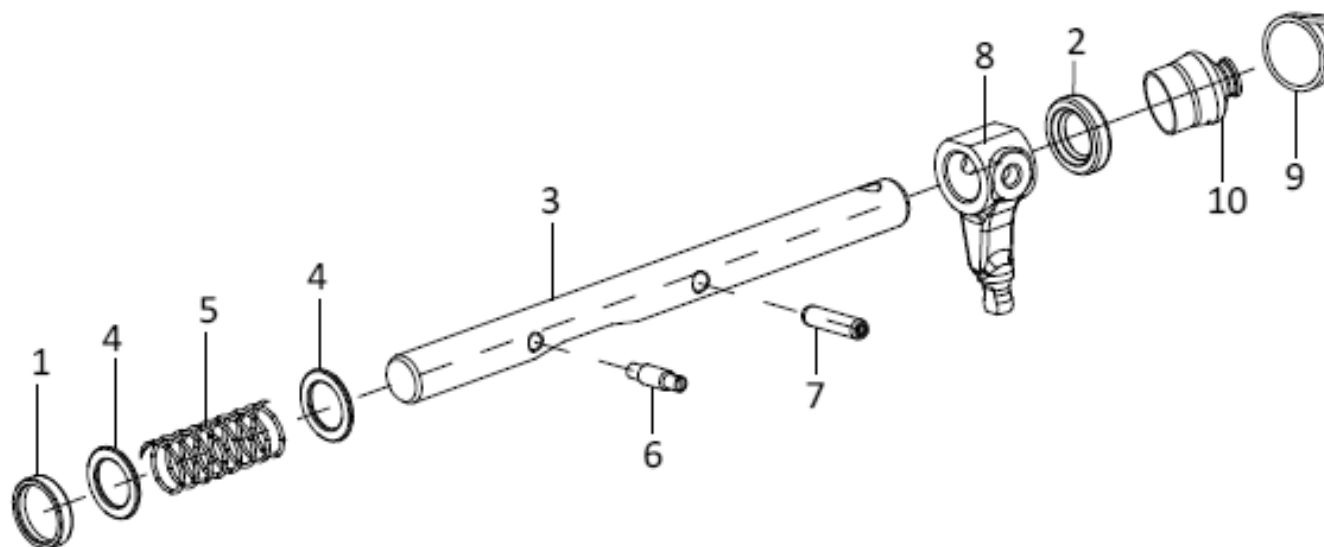



P-106


[illegible]

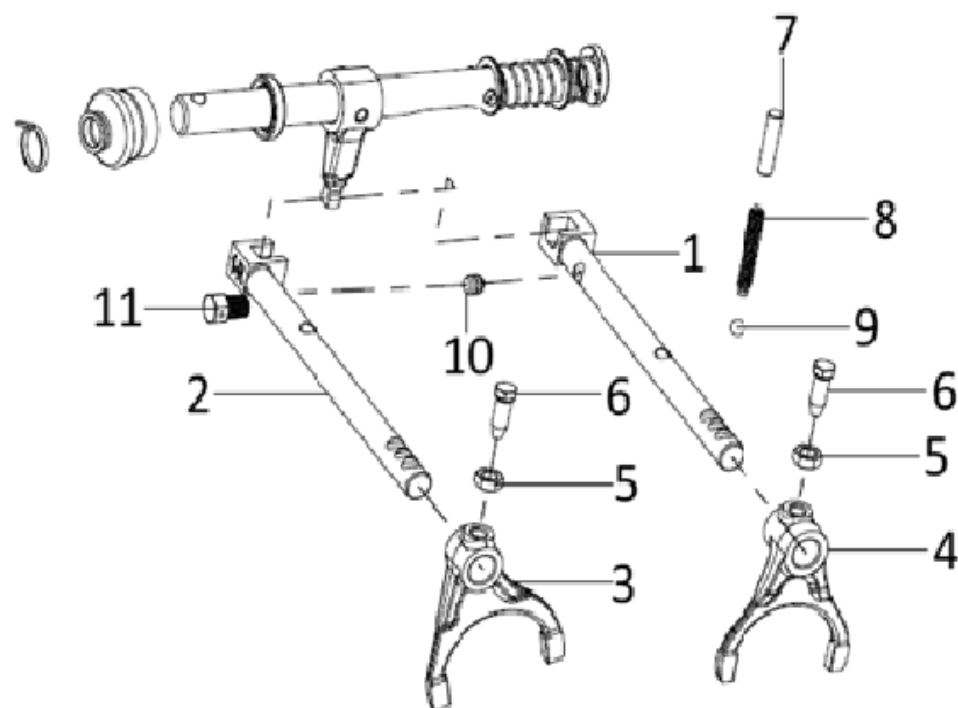



STEERING WHEEL AND RELATED PARTS

P-108

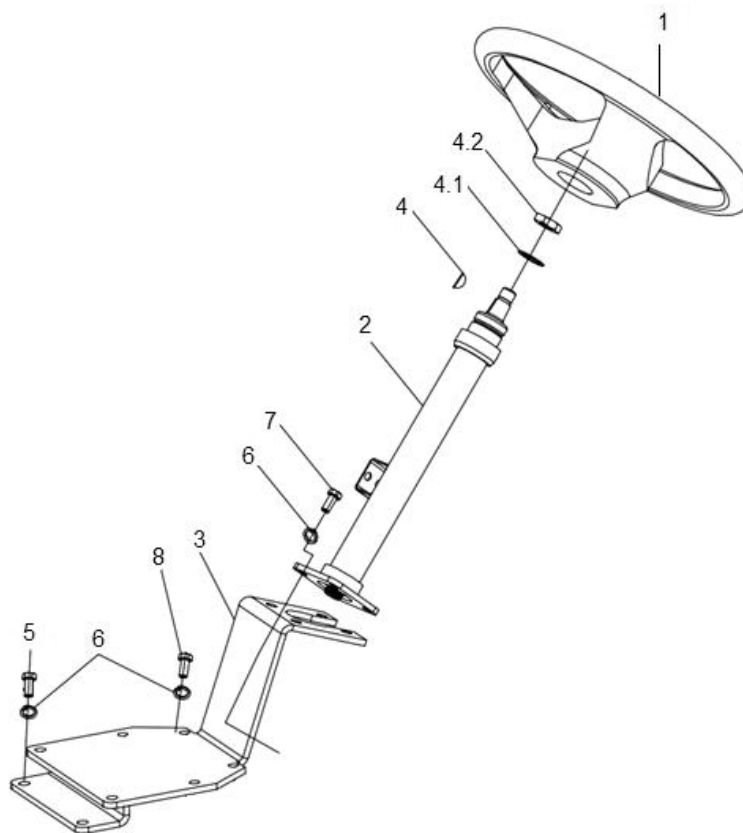




P-108

[illegible]



LEVER CONTROL 2WD 4WD SUB ASSEMBLY

P-109

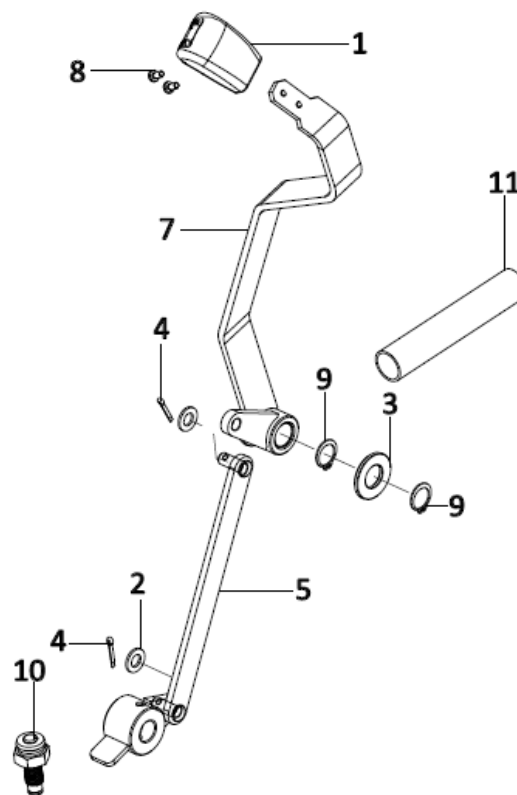




P-109

[illegible]



LEVER SPEED GEAR SHIFT SUBASSEMBLY

P-110

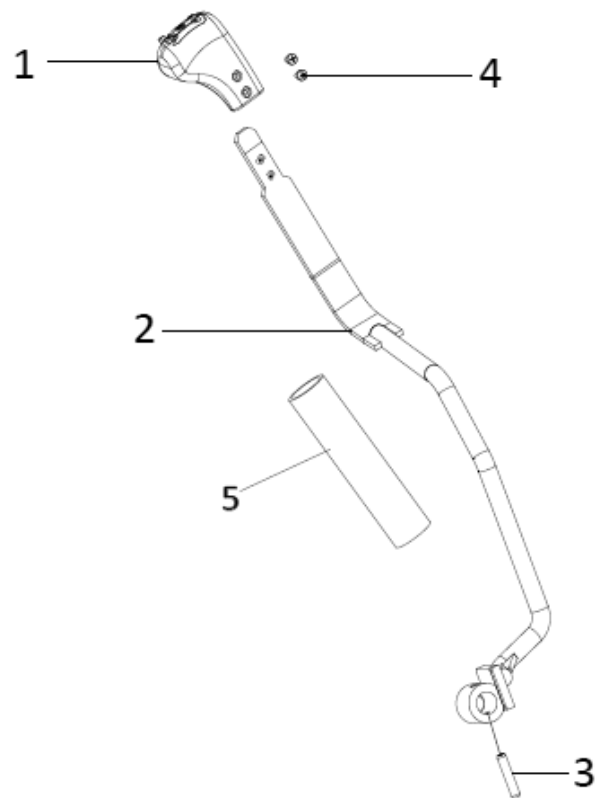


[illegible]



LINKAGE CLUTCH CONTROL SUBASSEMBLY


P-111

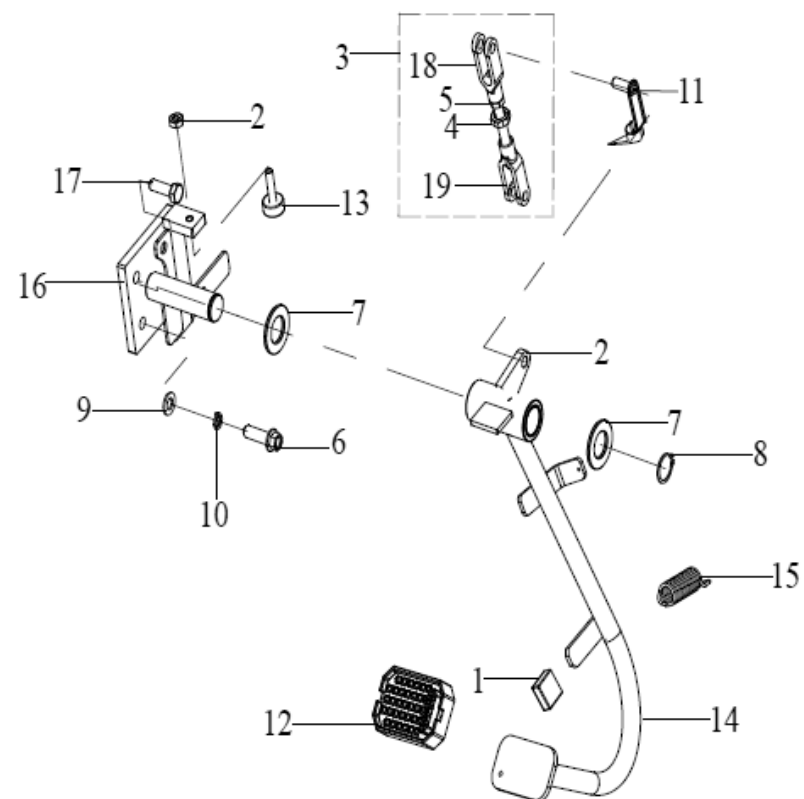



P-111

[illegible]

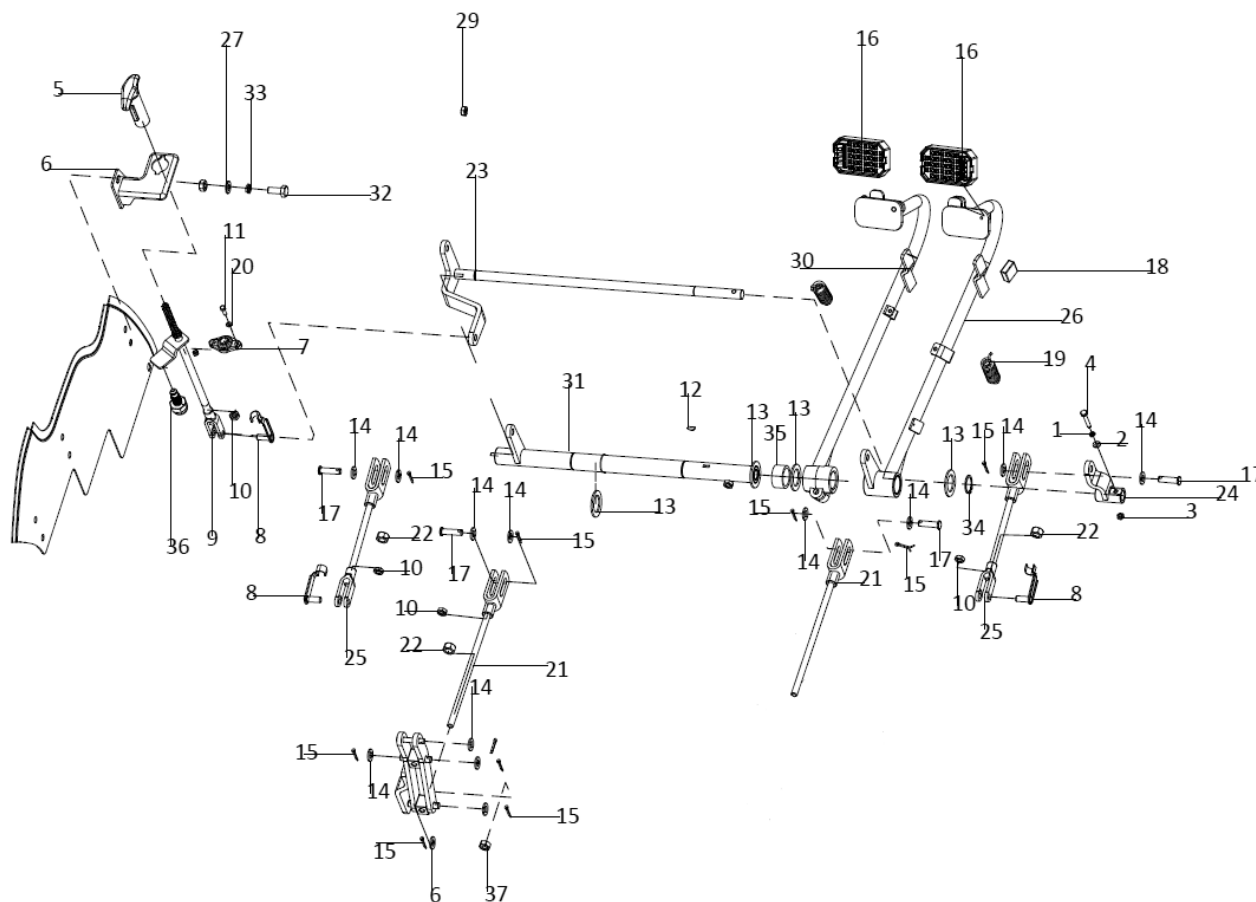




LINKAGE ASSEMBLY BRAKE CONTROL

P-112

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	H006005	WASHER M6 SPRING LOCK	1	
2	ALL MODELS	H008004	WASHER M6 FLAT	1	
3	ALL MODELS	H001007	NUT M6X1.00-6 HEX	1	
4	ALL MODELS	H003137	BOLT M6X1.00X35-8.0 HEX HEAD	1	
5	ALL MODELS	PM0601183	KNOB ASSY INDEPENDENT PARKING BRAKE	1	
6	ALL MODELS	PM0205039	BKT ASSY INDEPENDENT PARKING BRAKE	1	
7	ALL MODELS	PM0205057	GUIDE SUPPORT LEVER (IGUS)	1	
8	ALL MODELS	H076001	PIN 3/8" CLEVIS (RETENTION CLIP)	3	
9	ALL MODELS	PM0205058	ROD & CLEVIS ASSY PARKING BRAKE	1	
10	ALL MODELS	H074002	NUT 3/8"-24 HEX	1	
11	ALL MODELS	H004008	SCREW M5X0.80X16-6.6 HEX HEAD	2	
12	ALL MODELS	PM0205051	KEY 4X5 WOODRUFF	1	
13	ALL MODELS	PM0205052	WASHER BRAKE PEDAL CROSS SHAFT THRUST	4	
14	ALL MODELS	H008001	WASHER M10 FLAT	8	
15	ALL MODELS	H043023	PIN 1/8"X0.75" COTTER	4	
16	ALL MODELS	PM0205047	PAD RUBBER TOP PLATE	2	
17	ALL MODELS	H077004	CLEVIS PIN B 10X35	4	
18	ALL MODELS	PM0205048	COVER RUBBER RETURN STOPPER	2	
19	ALL MODELS	PM0205071	SPRING BRAKE PEDAL RETURN	2	
20	ALL MODELS	H008011	WASHER M5 FLAT	2	
21	ALL MODELS	PM0205045	TIE ROD BRAKE PEDAL	2	
22	ALL MODELS	H001004	NUT M12X1.75 HEX	2	
23	ALL MODELS	PM0205030	SHAFT ASSEMBLY BRAKE PEDAL INNER	1	
24	ALL MODELS	PM0205031	HUB& LEVER ASSY PARKING BRAKE RH	1	
25	ALL MODELS	PM0205044	TIE ROD PARKING BRAKE	2	
26	ALL MODELS	PM0205038	PEDAL ASSEMBLY BRAKE RH	1	
27	ALL MODELS	H008001	WASHER M10 FLAT	1	
28	ALL MODELS	H001005	NUT M8X1.25-6 HEX	1	
29	ALL MODELS	PM0205037	PEDAL ASSEMBLY BRAKE LH	1	
30	ALL MODELS	PM0205029	SHAFT ASSEMBLY BRAKE PEDAL OUTER	1	

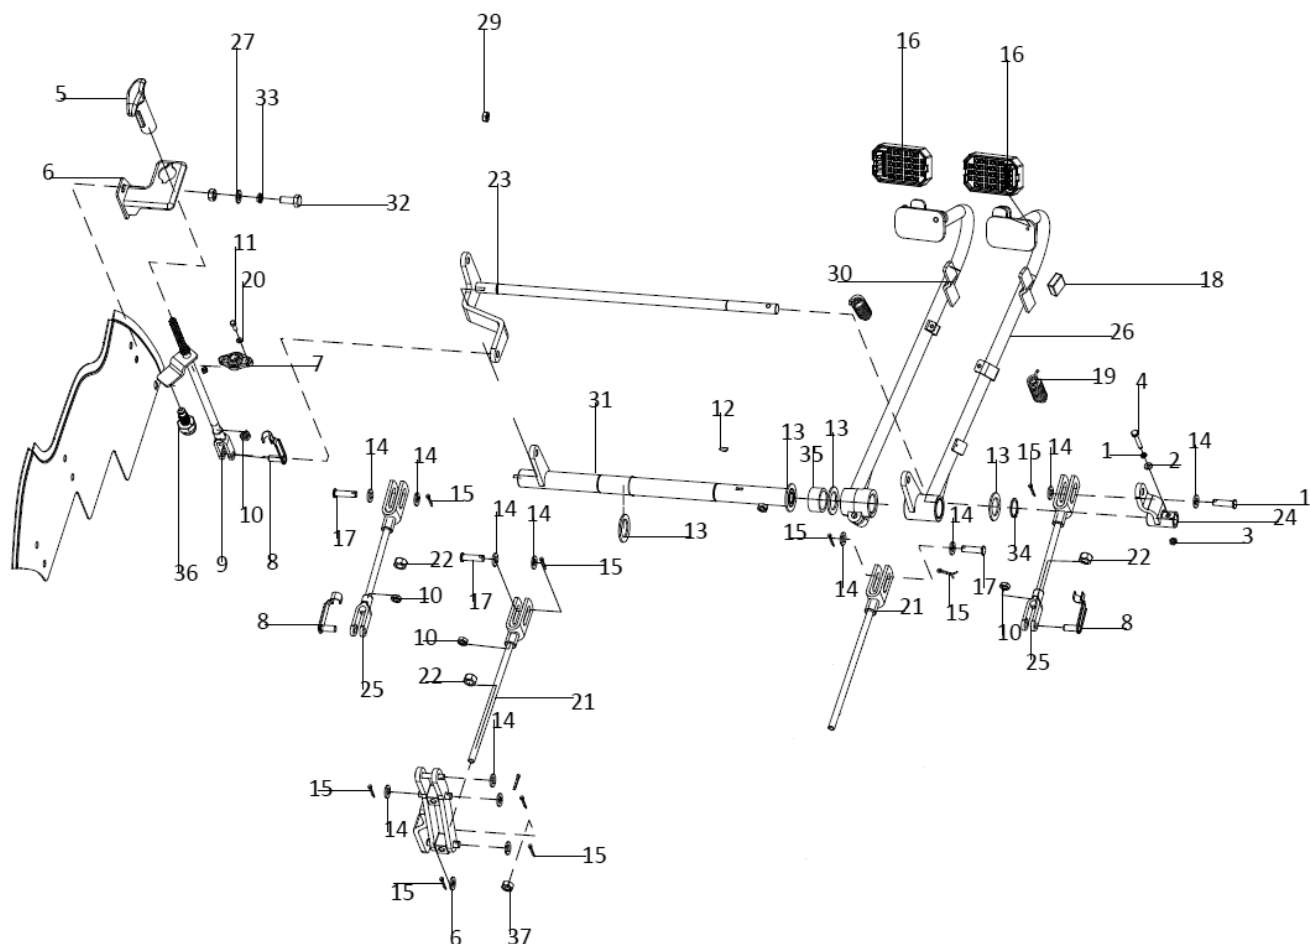




P-112

[illegible]



HYDRAULIC LIFT ASSY.


P-113

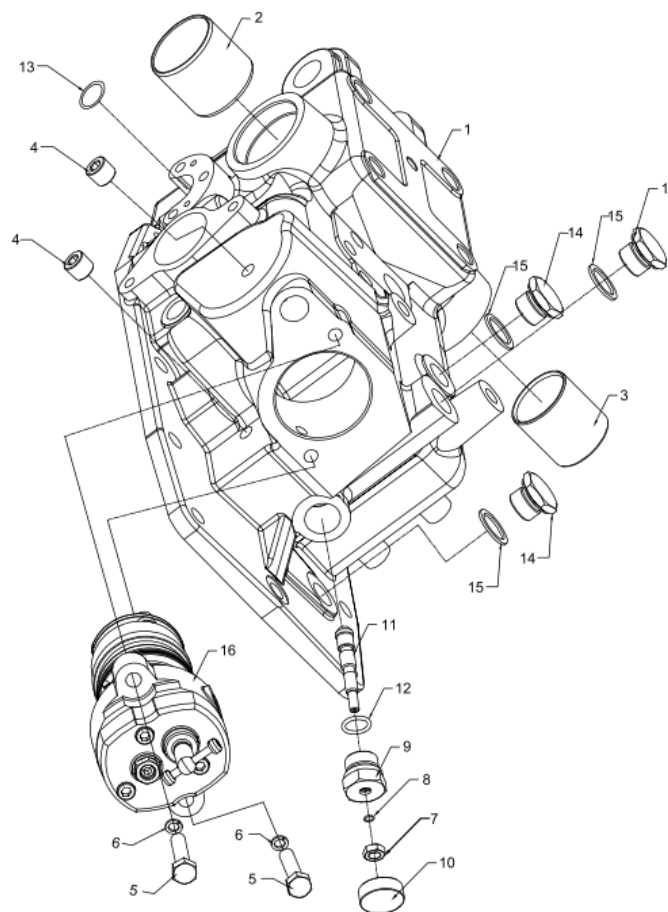




P-113

[illegible]

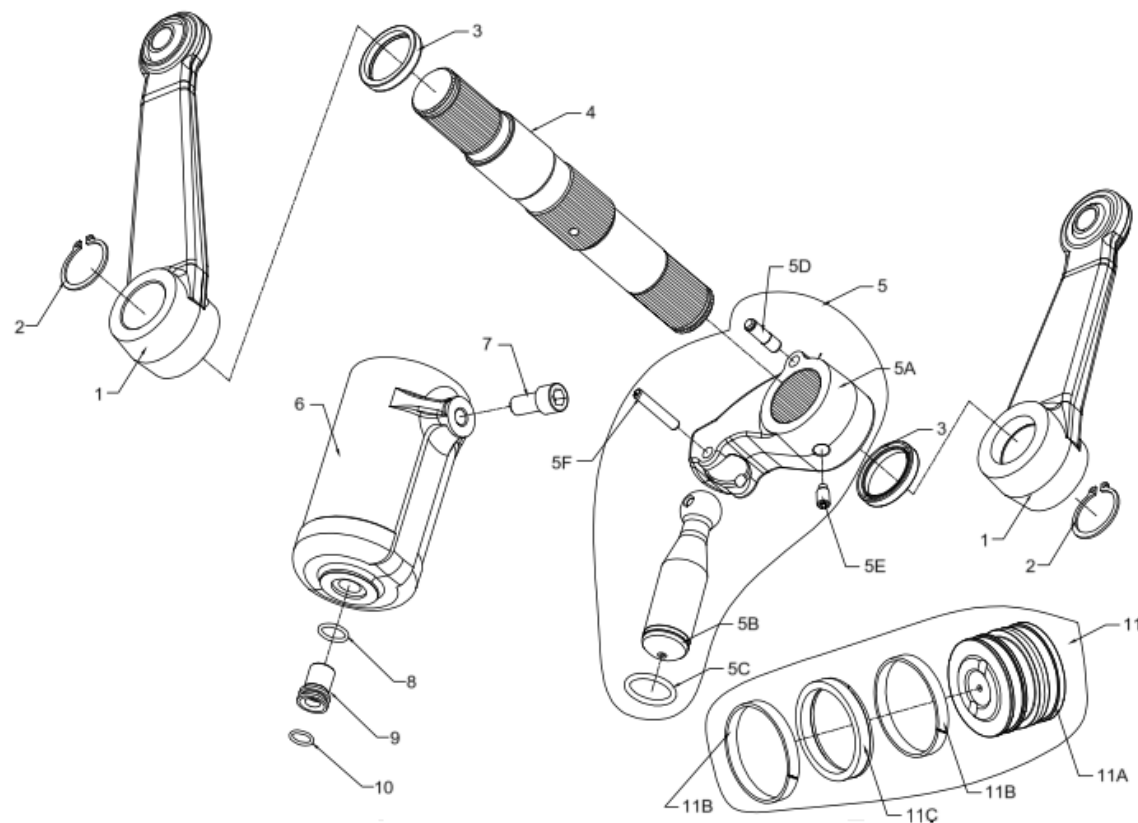



P-114

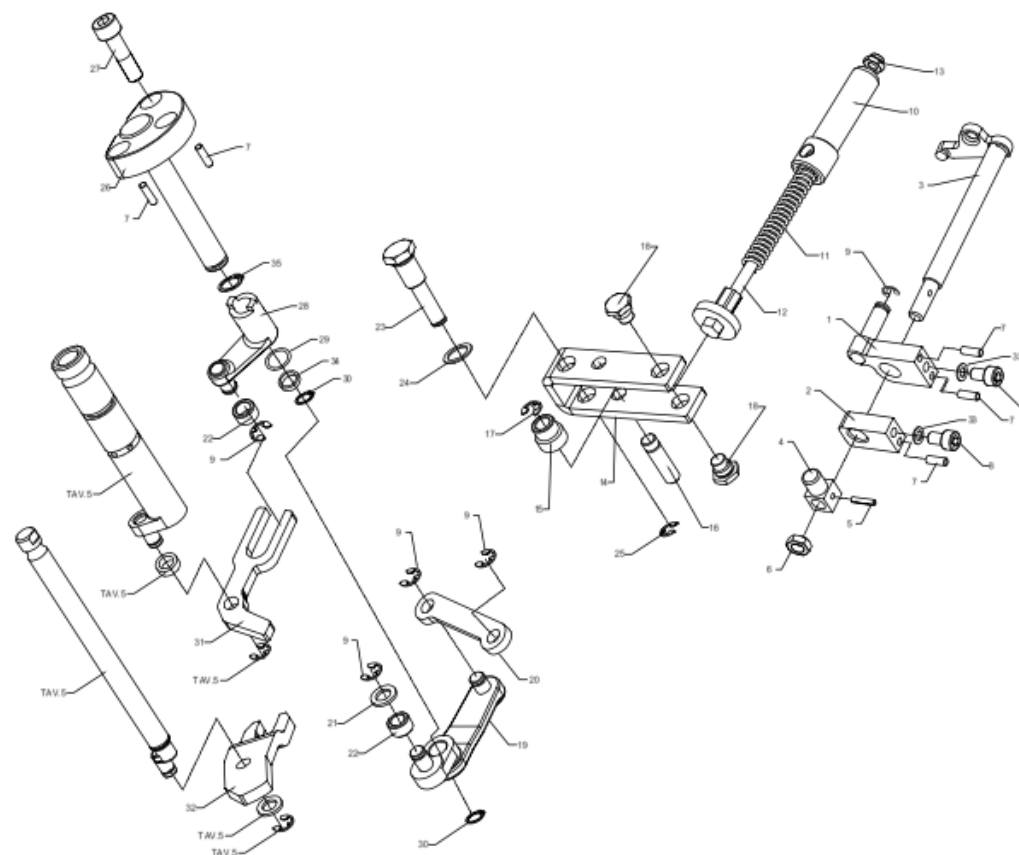




INTERNAL LEVER ASSY.

P-115


S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	PSPDGML028	LIMIT SWITCH SUPPORT WITH PIN	1	
2	ALL MODELS	PSPDGML029	LIMIT SWITCH SUPPORT	1	
3	ALL MODELS	PSPDGML030	LIMIT SWITCH LEVER	1	
4	ALL MODELS	PSPDGML031	PIN	1	
5	ALL MODELS	PSPDGML032	ELASTIC PIN DIA 3x14	1	
6	ALL MODELS	PSPDGML098	NUT M8	1	
7	ALL MODELS	PSPDGML033	PIN D4x19.8	5	
8	ALL MODELS	PSPDGML099	ALLEN BOLT M6x16	2	
9	ALL MODELS	PSPDGML100	RADIAL CIRCLIP 6MM	5	
10	ALL MODELS	PSPDGML035	SPRING SEAT	1	
11	ALL MODELS	PSPDGML036	SPRING	1	
12	ALL MODELS	PSPDGML037	PUSH ROD ASSEMBLY	1	
13	ALL MODELS	PSPDGML101	NUT M6	1	
14	ALL MODELS	PSPDGML038	LEVER	1	
15	ALL MODELS	PSPDGML039	WHEEL	1	
16	ALL MODELS	PSPDGML040	PIN	1	
17	ALL MODELS	PSPDGML041	RADIAL CIRCLIP 5MM	1	
18	ALL MODELS	PSPDGML042	SUPPORT PIN	2	
19	ALL MODELS	PSPDGML043	COMPENSATOR	1	
20	ALL MODELS	PSPDGML044	LINK	1	
21	ALL MODELS	PSPDGML045	PLAIN WASHER 8.4	1	
22	ALL MODELS	PSPDGML102	ROLLER '8/12x7 SUPPORT PIN	2	
23	ALL MODELS	PSPDGML047	SUPPORT PIN	1	
24	ALL MODELS	PSPDGML071	COPPER WASHER 14.5/20*1	1	
25	ALL MODELS	PSPDGML103	RADIAL EXT.CIRCLIP	1	
26	ALL MODELS	PSPDGML049	HUB WITH PIN	1	
27	ALL MODELS	PSPDGML104	ALLEN BOLT M8x20	3	
28	ALL MODELS	PSPDGML050	LEVER WITH PIN	1	
29	ALL MODELS	PSPDGML051	O - RING	1	
30	ALL MODELS	PSPDGML052	CIRCLIP	2	

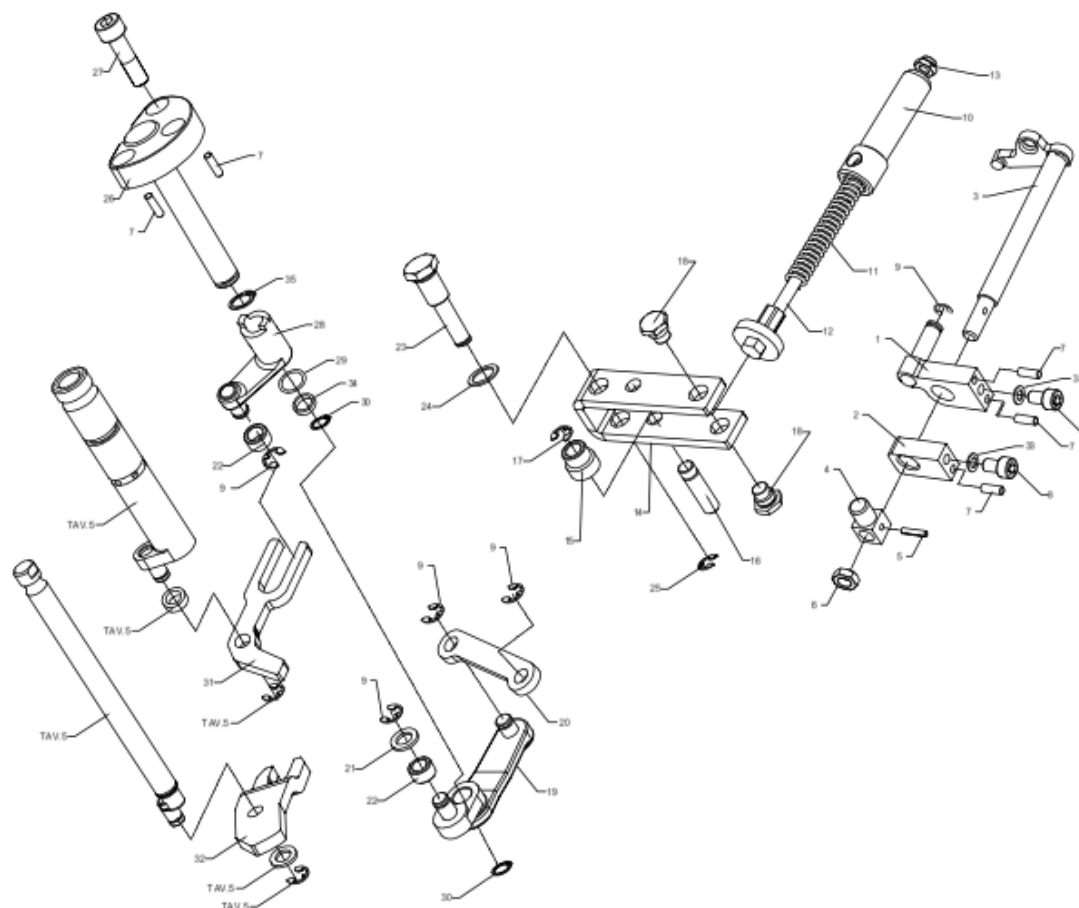



P-116

[illegible]

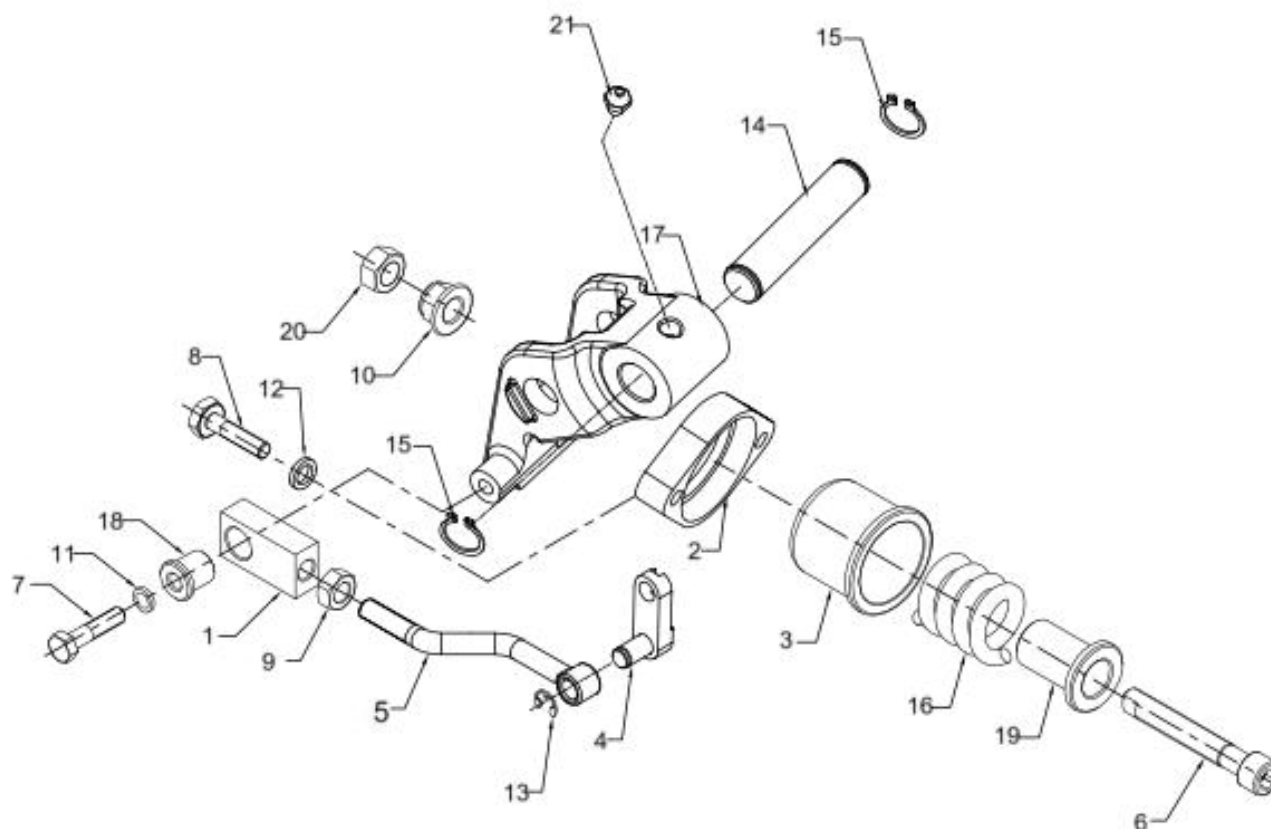




P-117

[illegible]



CONTROL LEVER ASSY.


P-118

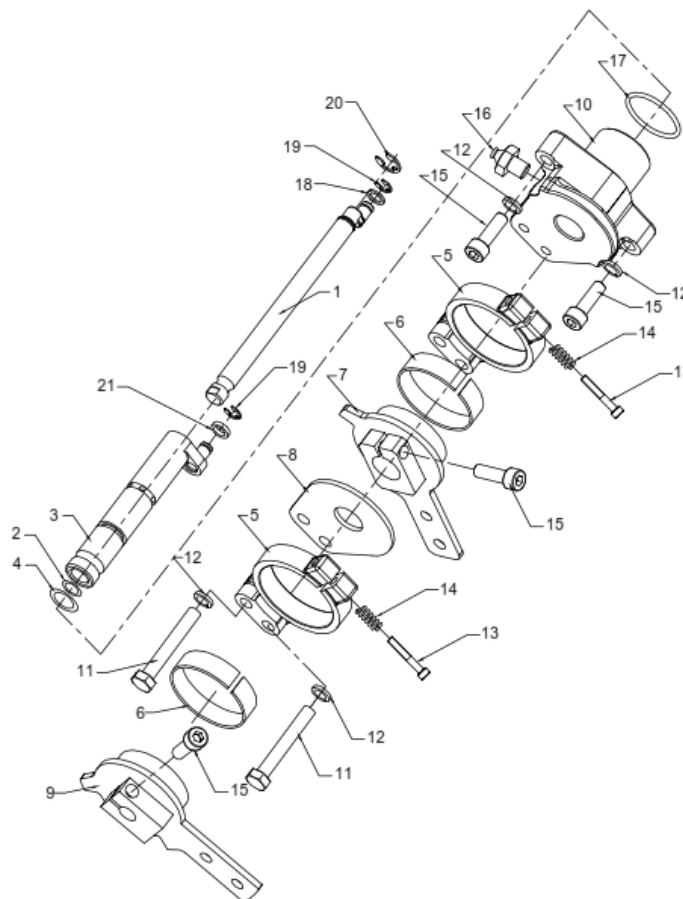



P-118

[illegible]

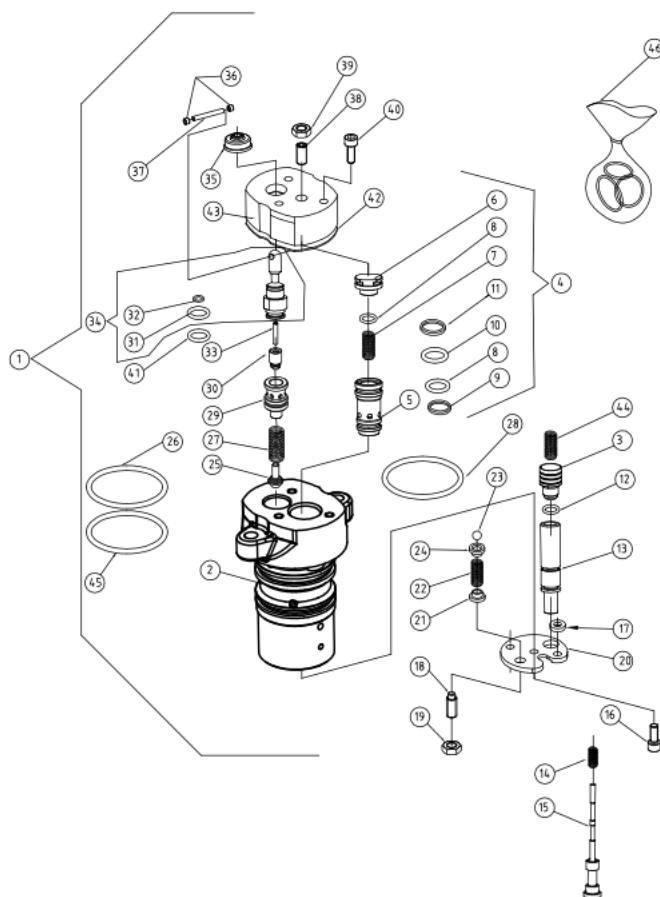




CONTROL LEVER ASSY.

P-119

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	PSPDGML009	CONTROL VALVE	1	
2	ALL MODELS	PSPDGML133	NOT AVAILABLE AS SPARE	-	
3	ALL MODELS	PSPDGML134	VALVE	1	
4	ALL MODELS	PSPDGML135	VALVE ASSY.	1	
5	ALL MODELS	PSPDGML136	NOT AVAILABLE AS SPARE PARTS	-	
6	ALL MODELS	PSPDGML137	PLUG M14x1	1	
7	ALL MODELS	PSPDGML138	SPRING	1	
8	ALL MODELS	PSPDGML139	OOR 2062 D=15.6x1.78 Sh 80/90	2	
9	ALL MODELS	PSPDGML140	PARBAK 8-016	1	
10	ALL MODELS	PSPDGML141	OR D=18.77, T1.78	1	
11	ALL MODELS	PSPDGML142	PARBAK 8-018	1	
12	ALL MODELS	PSPDGML143	OR D12.42, T1.78 Sh80/90	1	
13	ALL MODELS	PSPDGML144	VALVE SEAT	1	
14	ALL MODELS	PSPDGML145	SPRING	1	
15	ALL MODELS	PSPDGML146	NOT AVAILABLE AS SPARE PARTS	-	
16	ALL MODELS	PSPDGML147	SCREW TCEI M6x18 DIN912 8G	3	
17	ALL MODELS	PSPDGML148	SPACER 6/12x5	3	
18	ALL MODELS	PSPDGML149	SCREW M8x20 DIN915 12.9	2	
19	ALL MODELS	PSPDGML150	NUT M8 DIN7967	2	
20	ALL MODELS	PSPDGML151	PLATE	1	
21	ALL MODELS	PSPDGML152	SPACER	2	
22	ALL MODELS	PSPDGML153	SPRING	2	
23	ALL MODELS	PSPDGML154	BALL 9/32" D=7.144	2	
24	ALL MODELS	PSPDGML155	SPACER	2	
25	ALL MODELS	PSPDGML156	VALVE	1	
26	ALL MODELS	PSPDGML157	OR D47.63 T3.53 Sh80/90	2	
27	ALL MODELS	PSPDGML158	SPRING	1	
28	ALL MODELS	PSPDGML159	OR 3.53x58.74 Sh80/90	1	
29	ALL MODELS	PSPDGML160	VALVE SEAT	1	
30	ALL MODELS	PSPDGML161	VALVE	1	

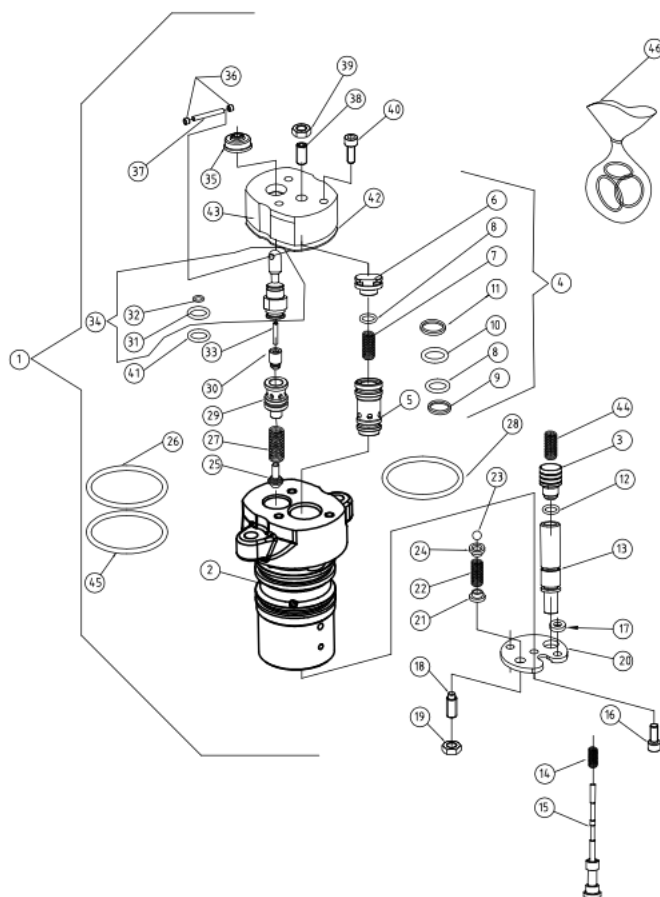




P-119

[illegible]



THREE POINT LINKAGE SUBASSEMBLY

P-120

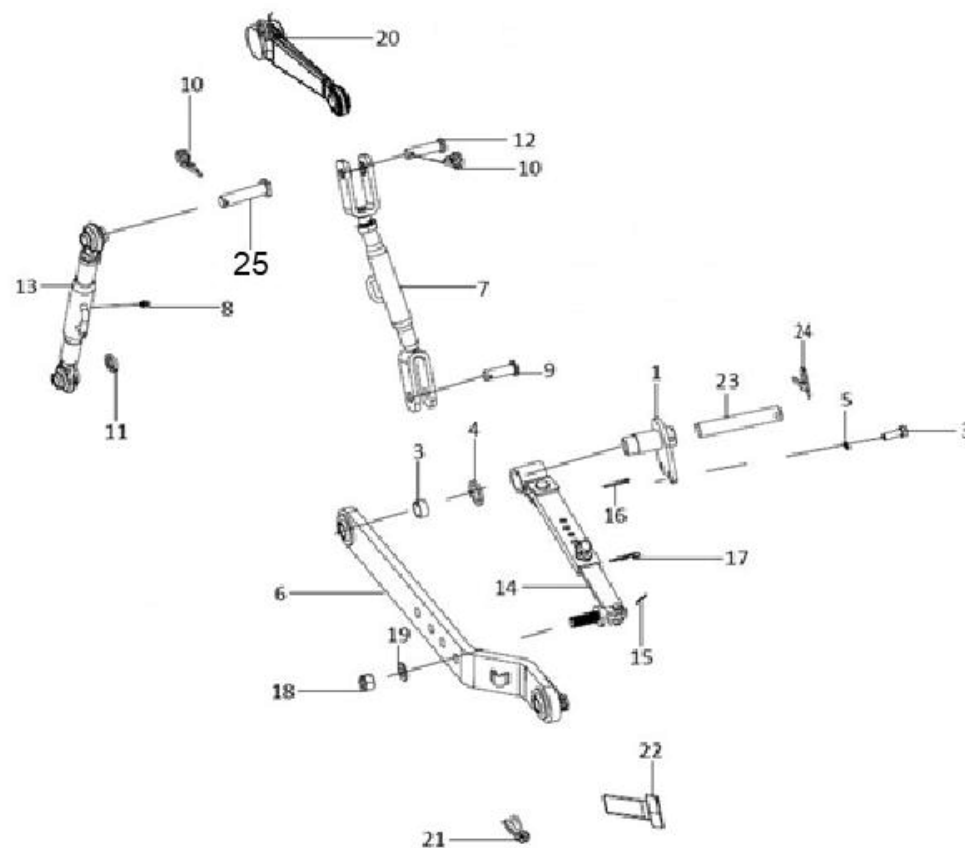




P-120



LEVER POSITION AND DRFAT CONTROL SUBASSEMBLY P-121

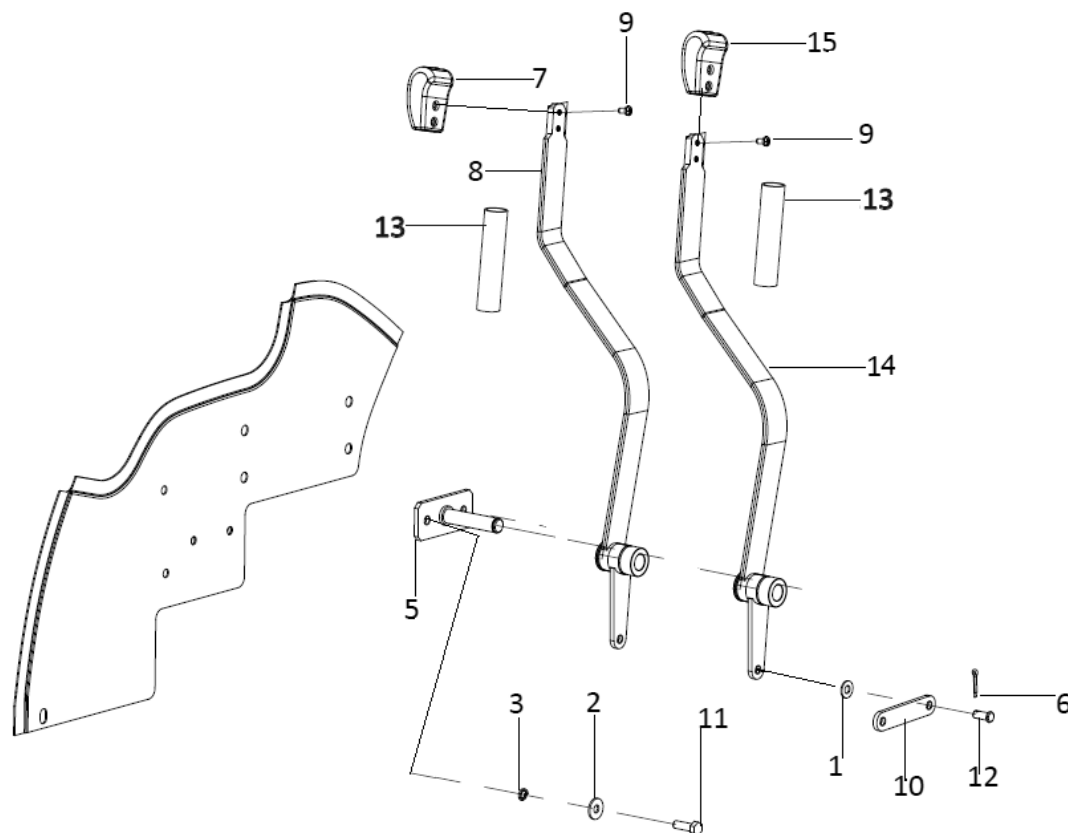



[illegible]



LEVER PTO GEAR SHIFT SUBASSEMBLY

P-122

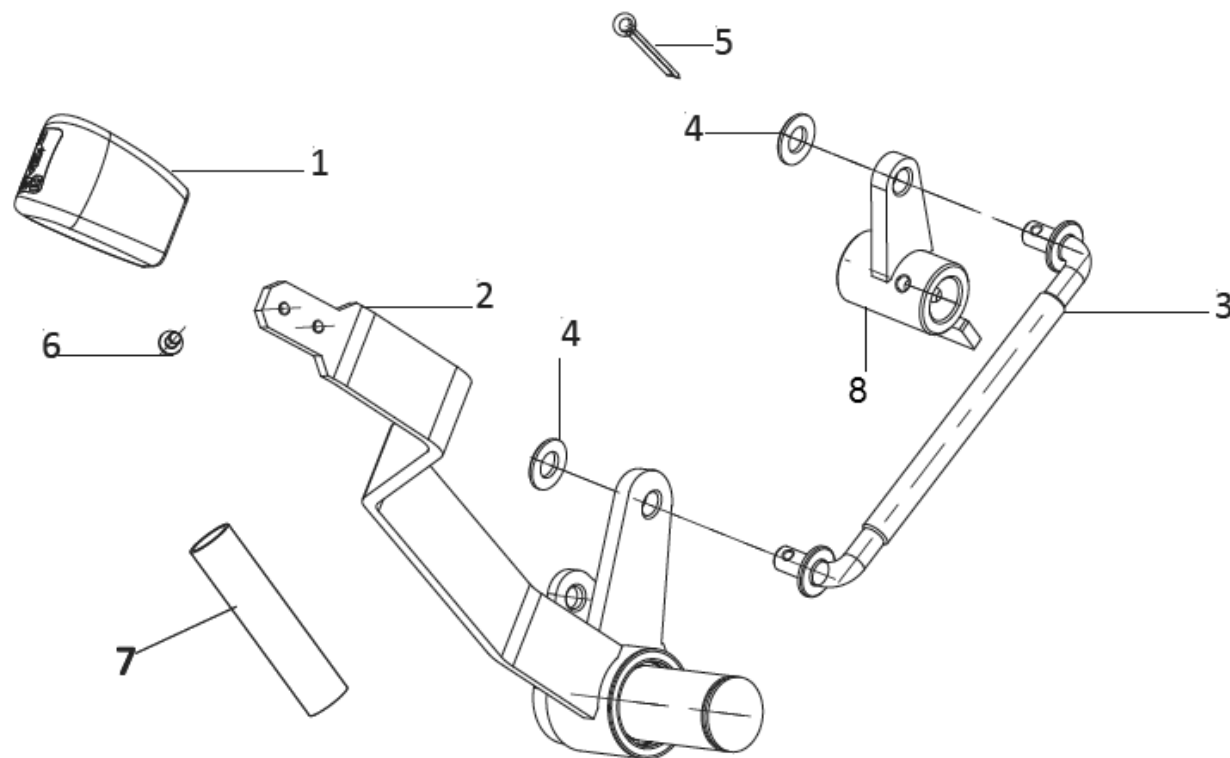


[illegible]




LEVER RANGE HIGH LOW MEDIUM GEAR SHIFT SUBASSEMBLY

P-123

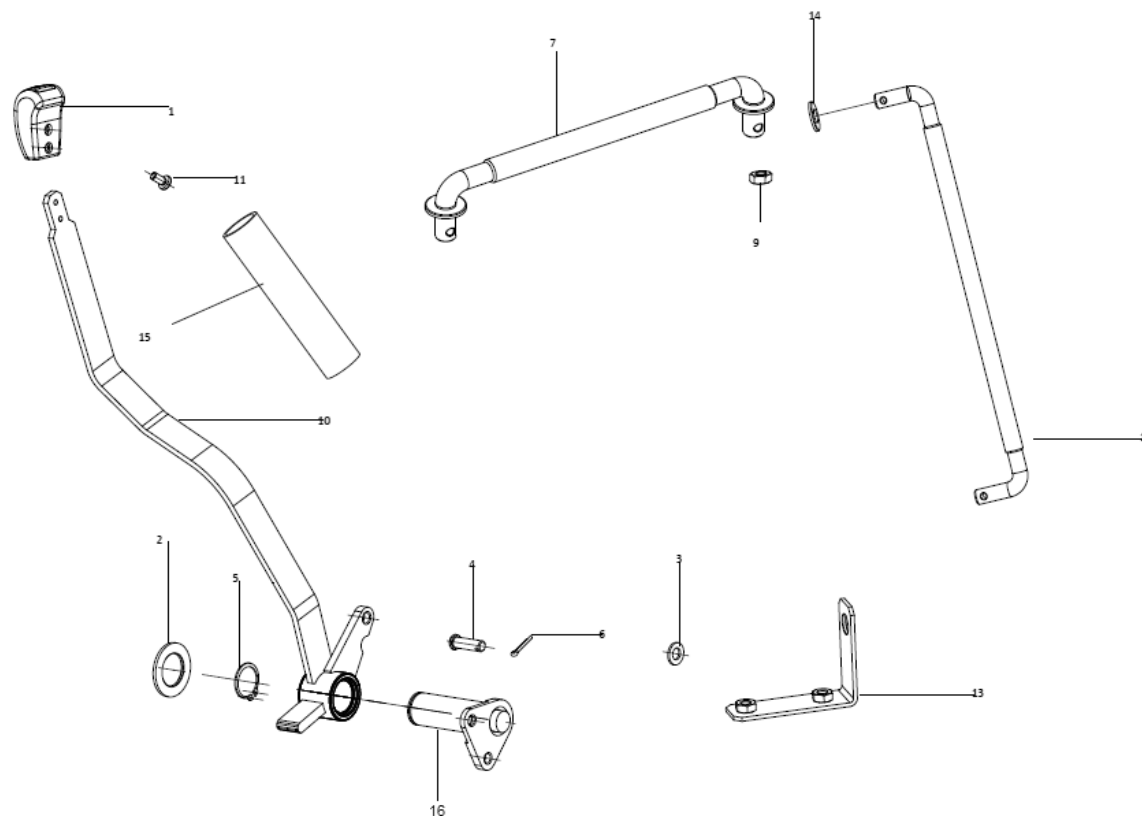


[illegible]

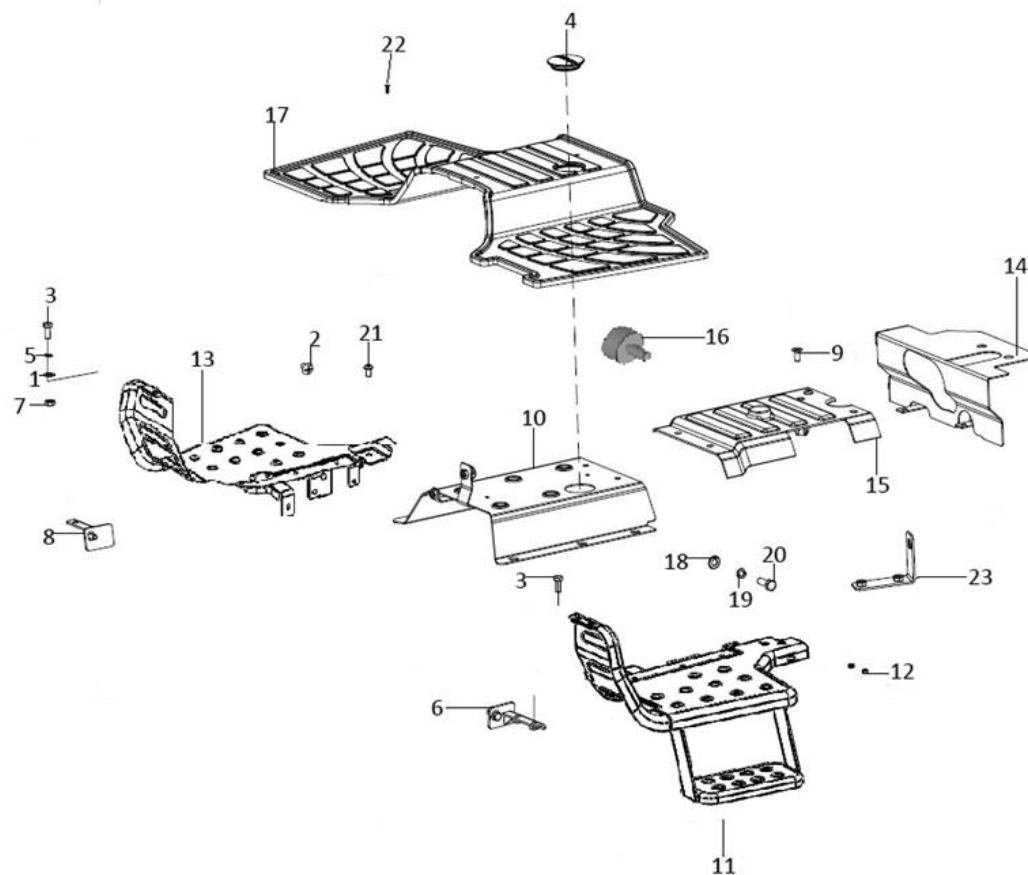



P-124

[illegible]

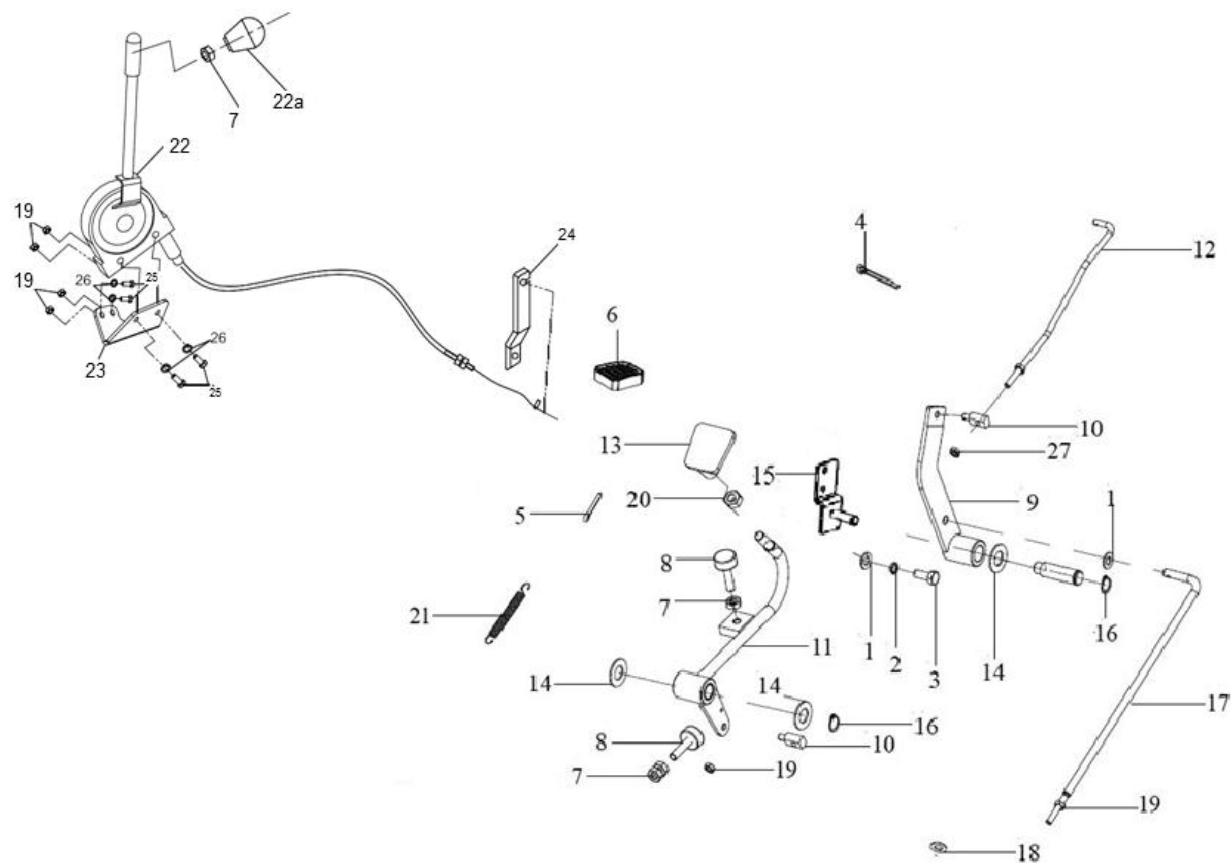




THROTTLE LINKAGE & RELATED PARTS

P-125

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	H008002	WASHER M8 FLAT	3	
2	ALL MODELS	H006003	WASHER M8 SPRING LOCK	2	
3	ALL MODELS	H005004	BOLT M8X1.25X20-8.8 HEX HEAD	2	
4	ALL MODELS	H043024	PIN 1.6X12.5 COTTER	3	
5	ALL MODELS	H043008	PIN 4.0X25.0 COTTER	1	
6	ALL MODELS	PM1701371	COVER RUBBER FOOT THROTTLE PEDAL	1	
7	ALL MODELS	H001005	NUT M8X1.25-6 HEX	4	
8	ALL MODELS	PM0205046	PAD CLUTCH PEDAL STOP	2	
9	ALL MODELS	PM1701380	HUB & LEVER ASSY FOOT THROTTLE	1	
10	ALL MODELS	PM1701390	TRUNION PULL TO STOP	2	
11	ALL MODELS	PM1701367	PEDAL ASSEMBLY FOOT THROTTLE	1	
12	ALL MODELS	PM1701385	ROD & CLEVIS ASSEMBLY FOOT THROTTLE FRONT	1	
13	ALL MODELS	PM1701368	PLATE ASSEMBLY FOOT THROTTLE PEDAL TOP	1	
14	ALL MODELS	PM0205055	WASHER 15.5X30 DIFF LOCK BUSH THRUST	4	
15	ALL MODELS	PM1701379	PLATE AND PIN ASSLY FOOT THROTTLE HUB MTG	1	
16	ALL MODELS	H017021	CIRCLIP A15X0.90 SB	2	
17	ALL MODELS	PM1701386	ROD & CLEVIS ASSEMBLY FOOT THROTTLE REAR	1	
18	ALL MODELS	H008003	WASHER M12 FLAT	1	
19	ALL MODELS	H001007	NUT M6X1.00-6 HEX	2	
20	ALL MODELS	H001001	HEX NUT M10X1.5-8	1	
21	ALL MODELS	PM0205049	SPRING FOOT THROTTLE CONTROL RETURN	1	
22	ALL MODELS	PM0204011	Hand Throttle Assy.	1	
22a	ALL MODELS	PM0204001	Hand Acc. Knob	1	
23	ALL MODELS	P0501008	HAND ACTUATOR BRACKET	1	
24	ALL MODELS	P0204068	Wire End Bracket	1	
25	ALL MODELS	H005013	Hex. Screw M6X25	4	
26	ALL MODELS	H006005	Spring Washer M6	4	

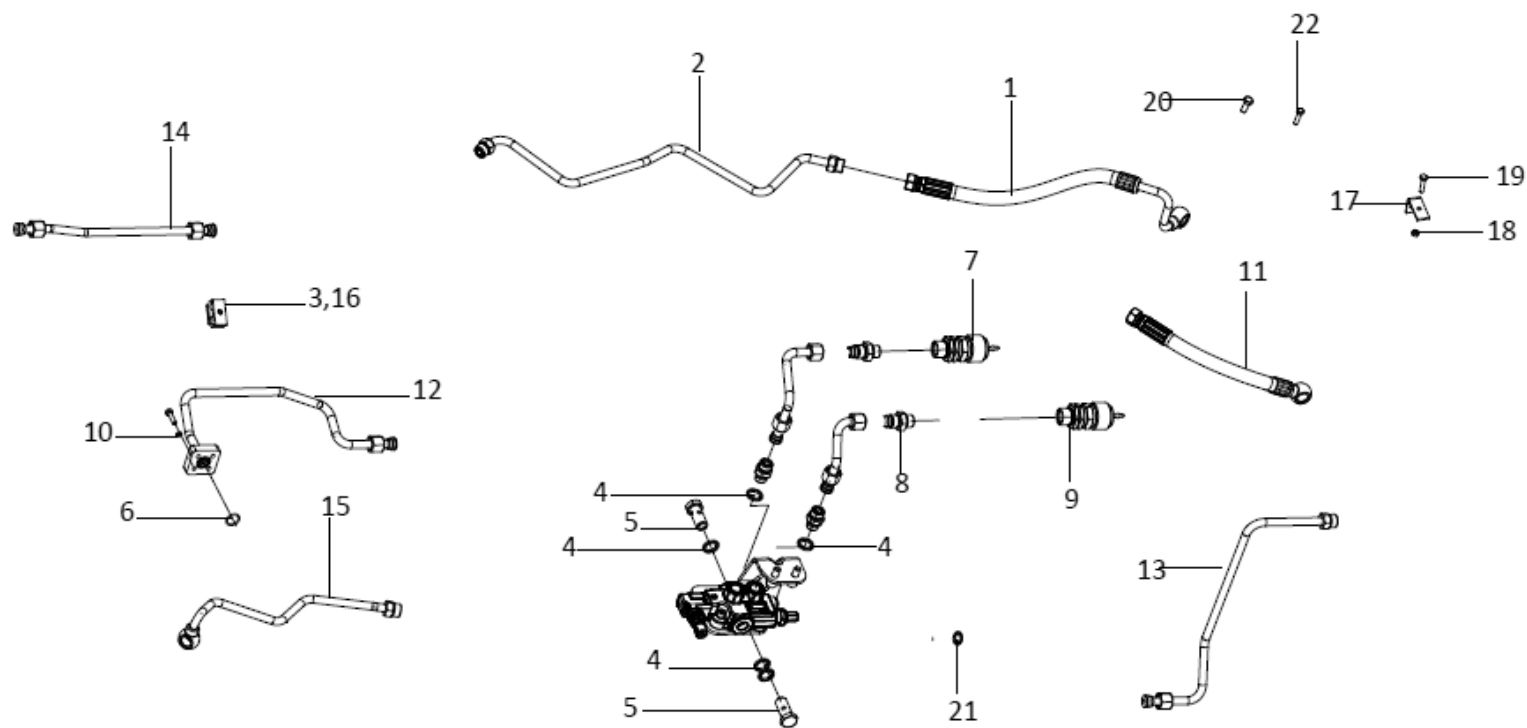



TUBING AUXILLIARY VALVE SUBASSEMBLY


P-126

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	PM0906061	SECONDARY PIPE FROM PUMP TO DCV	1	
2	ALL MODELS	PM0906062	INTERMEDIATE PIPE FORM PUMP TO DCV	1	
3	ALL MODELS	PM1501079	CLAMP FOR PS DELIVERY PIPE	1	
4	ALL MODELS	H031001	Copper Washer 18x24/1.5	6	
5	ALL MODELS	H033005	BOLT BANJO M18X1.50	3	
6	ALL MODELS	PM0906051	O RING 2.0X19	1	
7	ALL MODELS	PM0906065	QUICK RELEASE COUPLER BLUE	1	
7	ALL MODELS	PM0906066	QUICK RELEASE COUPLER	1	
8	ALL MODELS	PM0906067	3/4"-16 UNF - M18X1.50 ADAPTOR (S TYPE)	2	
9	ALL MODELS	PM0906068	QUICK RELEASE COUPLER RED	1	
9	ALL MODELS	PM0906069	QUICK RELEASE COUPLER FEMALE	1	
10	ALL MODELS	H006005	Spring Washer M6	4	
10	ALL MODELS	H006003	Spring Washer M8	4	
11	ALL MODELS	PM0906070	DCV TO HYD LIFT HOSE PIPE	1	
11	ALL MODELS	PM0906071	DCV TO HYD LIFT HOSE PIPE	1	
12	ALL MODELS	PM0906072	DELIVERY PIPE FROM PUMP TO CONNECTOR	1	
13	ALL MODELS	PM0906073	PRIMARY DELIVERY PIPE PUMP TO HYD LIFT	1	
14	ALL MODELS	PM0906074	INTERMEDIATE DELIVERY PIPE PUMP TO LIFT	1	
15	ALL MODELS	PM0906075	DCV TO HYD LIFT HOSE PIPE	1	
16	ALL MODELS	PM0906076	CLAMP ASSEMBLY HYD PIPE	1	
17	ALL MODELS	PM0906077	HYD DELIVERY PIPE HOLDING CLAMP	1	
18	ALL MODELS	H001007	Hex. Nut M6	1	
19	ALL MODELS	H005026	Hex. Screw M6x30	1	
20	ALL MODELS	H005004	Hex. Screw M8x20	1	
21	ALL MODELS	H010003	Plain Washer M8	1	
22	ALL MODELS	H005013	Hex. Screw M6x25	4	
22	ALL MODELS	H005026	Hex. Screw M6x30	4	



TUBING POWER STEERING SUBASSEMBLY

P-127

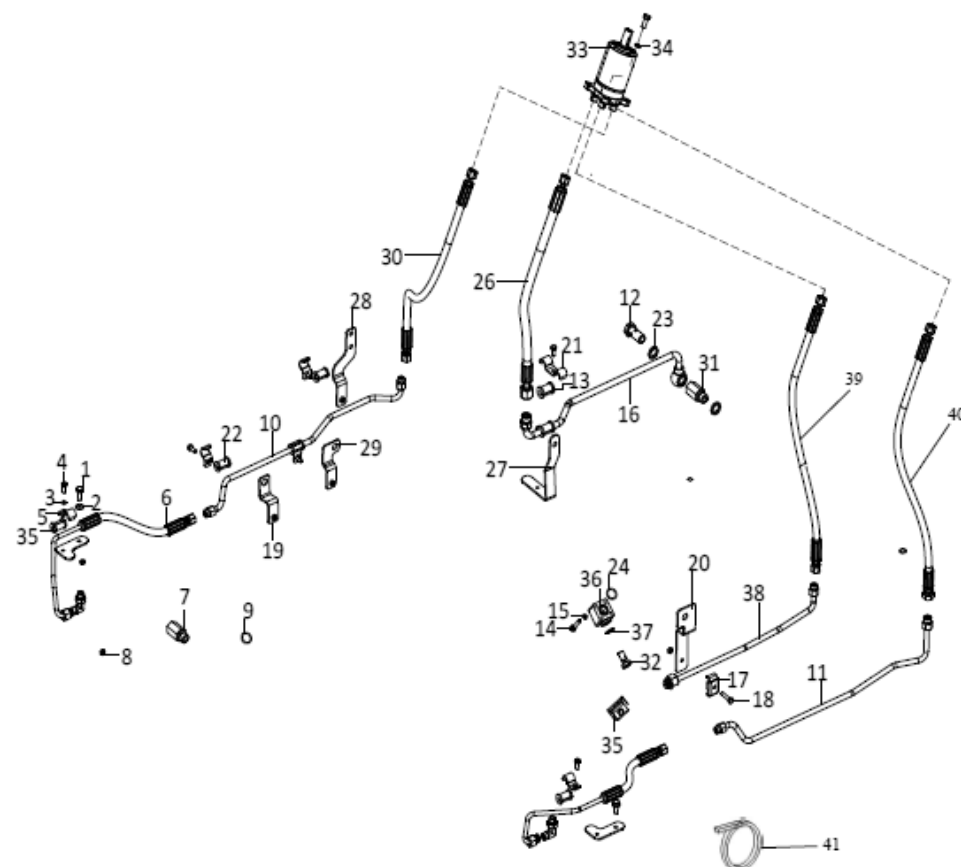



TUBING POWER STEERING SUBASSEMBLY


P-127

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	H005004	Hex. Screw M8x20	6	
2	ALL MODELS	H010003	Plain Washer M8	6	
3	ALL MODELS	H010002	Plain Washer M6	6	
4	ALL MODELS	H005001	Hex. Screw M6x16	6	
5	ALL MODELS	PM1501058	CLAMP FOR PIPE OD 10	5	
6	ALL MODELS	PM1501059	FLEXIBLE PIPE STEERING CYLINDER RH	2	
7	ALL MODELS	PM1501110	CONNECTOR 9/16-18 AND M14X1.5 STUD END	1	
8	ALL MODELS	H001007	Hex. Nut M6	7	
9	ALL MODELS	H075003	BONDED SEAL 14.7X22.0X1.5	1	
10	ALL MODELS	PM1501061	PIPE POWER STEERING CONNECTOR RH	1	
11	ALL MODELS	PM1501062	PIPE POWER STEERING CONNECTOR LH	1	
12	ALL MODELS	H033005	Banjo Bolt M18x1.5	1	
12.1	ALL MODELS	H033005	Banjo Bolt M18x1.5	1	
13	ALL MODELS	PM1501063	PIPE GROMMET	2	
14	ALL MODELS	H002033	Hex. Bolt M6x35	4	
15	ALL MODELS	H006005	Spring Washer M6	4	
15.1	ALL MODELS	H006003	Spring Washer M8	4	
16	ALL MODELS	PM1501064	PIPE STEERING UNIT RETURN	1	
17	ALL MODELS	PM1501065	CLAMP ASSY FOR POWER STEERING PIPES	1	
18	ALL MODELS	H005026	Hex. Screw M6x30	2	
19	ALL MODELS	PM1501066	BRACKET STEERING PIPE HOLDING FRONT RH	1	
20	ALL MODELS	PM1501067	BRACKET STEERING PIPE HOLDING FRONT LH	1	
21	ALL MODELS	PM1501068	PIPE HOLDING CLAMP	1	
22	ALL MODELS	PM1501069	RUBBER GROMMET FOR PIPE DIA 10	3	
23	ALL MODELS	H031001	Copper Washer 18x24/1.5	3	
23.1	ALL MODELS	H031001	Copper Washer 18x24/1.5	1	
24	ALL MODELS	PM0906051	O RING 2.0X19	1	
26	ALL MODELS	PM1501072	FLEXIBLE PIPE STEERING UNIT RETURN	1	
27	ALL MODELS	PM1501073	BRACKET FOR PIPE HOLDING	1	
28	ALL MODELS	PM1501074	PIPE HOLDING BRACKET	1	



TUBING POWER STEERING SUBASSEMBLY

P-127

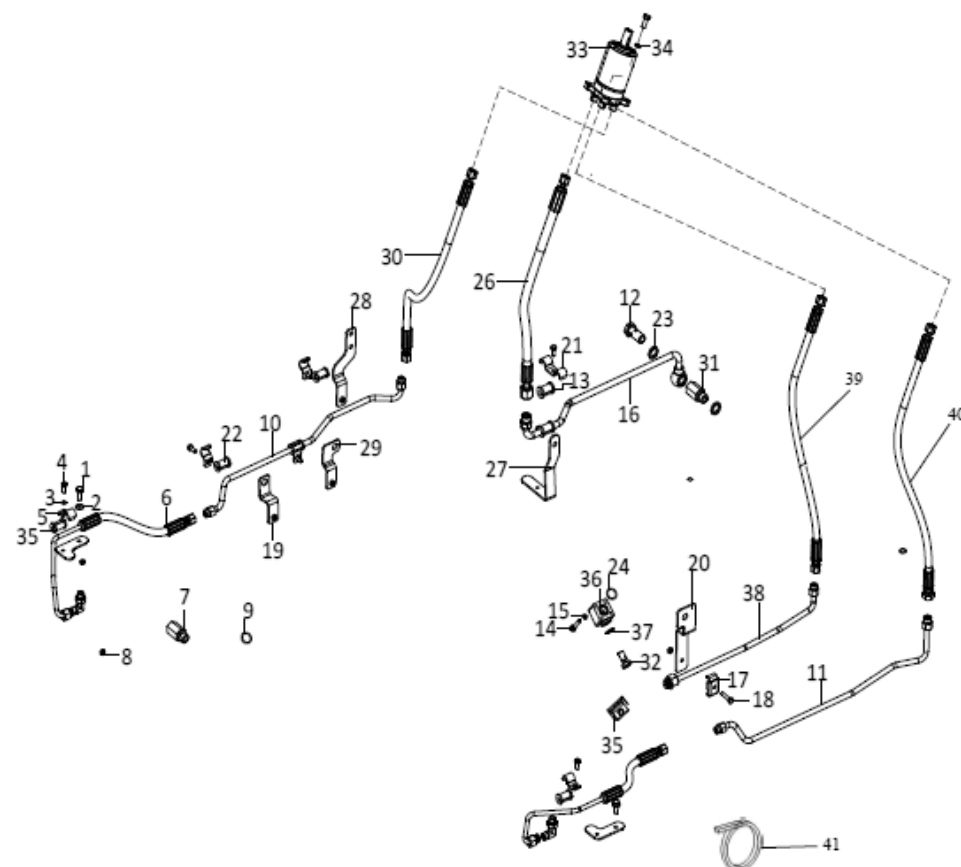




P-127

[illegible]



TUBING HYDRAULIC SUCTION SUBASSEMBLY

P-128

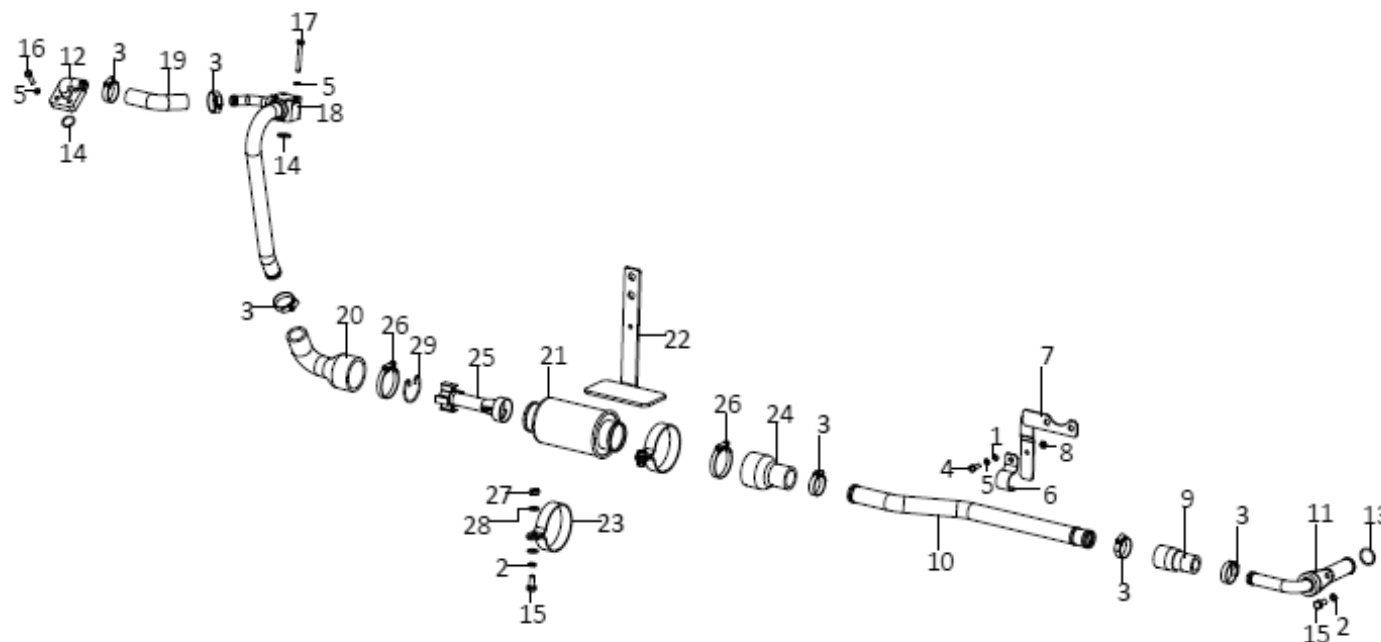




TUBING HYDRAULIC SUCTION SUBASSEMBLY

P-128


S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	H010002	Plain Washer M6	1	
2	ALL MODELS	H006003	Spring Washer M12	3	
3	ALL MODELS	H034006	Hose Clamp 35	6	
4	ALL MODELS	H005002	Hex. Screw M6x20	1	
5	ALL MODELS	H006005	Spring Washer M6	9	
5	ALL MODELS	H006003	Spring Washer M8	9	
6	ALL MODELS	PM0906044	CLAMP OF PIPE DIA 28.58	1	
7	ALL MODELS	PM0906045	SUCTION PIPE CLAMP BRACKET	1	
8	ALL MODELS	H001007	Hex. Nut M6	2	
9	ALL MODELS	PM0906046	SUCTION HOSE HYD	1	
10	ALL MODELS	PM0906047	PRIMARY SUCTION PIPE- DIFF TO STRAINER	1	
11	ALL MODELS	PM0906048	SUCTION STRAINER- WITH IN HOUSING	1	
12	ALL MODELS	PM0906049	SECONDARY PIPE FROM PUMP TO ST PUMP	1	
13	ALL MODELS	PM0906050	O RING 2.65X25.00	1	
14	ALL MODELS	PM0906051	O RING 2.0X19	2	
15	ALL MODELS	H005004	Hex. Screw M8x20	3	
16	ALL MODELS	H005013	Hex. Screw M6x25	4	
16	ALL MODELS	H003116	Hex. Bolt M6X30	4	
17	ALL MODELS	H003119	Hex. Bolt M6X45	4	
18	ALL MODELS	PM0906052	SECONDARY PIPE FROM STRAINER TO PUMP	1	
19	ALL MODELS	PM0906053	SUCTION HOSE FROM PUMP TO PUMP	1	
20	ALL MODELS	PM0906054	SUCTION HOSE FROM STRAINER TO PUMP	1	
21	ALL MODELS	PM0906055	SUCTION STRAINER- 102 LPM	1	
22	ALL MODELS	PM0906056	STRAINER BRACKET	1	
23	ALL MODELS	PM0906057	STRAINER CLAMP	2	
24	ALL MODELS	PM0906058	SUCTION HOSE FROM PIPE TO STRAINER	1	
24	ALL MODELS	PM1501115	SUCTION PIPE PS PUMP TO JOIN	1	
25	ALL MODELS	PM0906059	SUCTION STRAINER MAGNETIC	1	
26	ALL MODELS	H034007	Hose Clamp 60	2	
27	ALL MODELS	H001005	Hex. Nut M8	2	
28	ALL MODELS	H010003	Plain Washer M8	4	
29	ALL MODELS	PM0906060	STRAINER CLIP WIRE	1	



FRONT AXLE BRACKET & RELATED PARTS(4WD) P-129

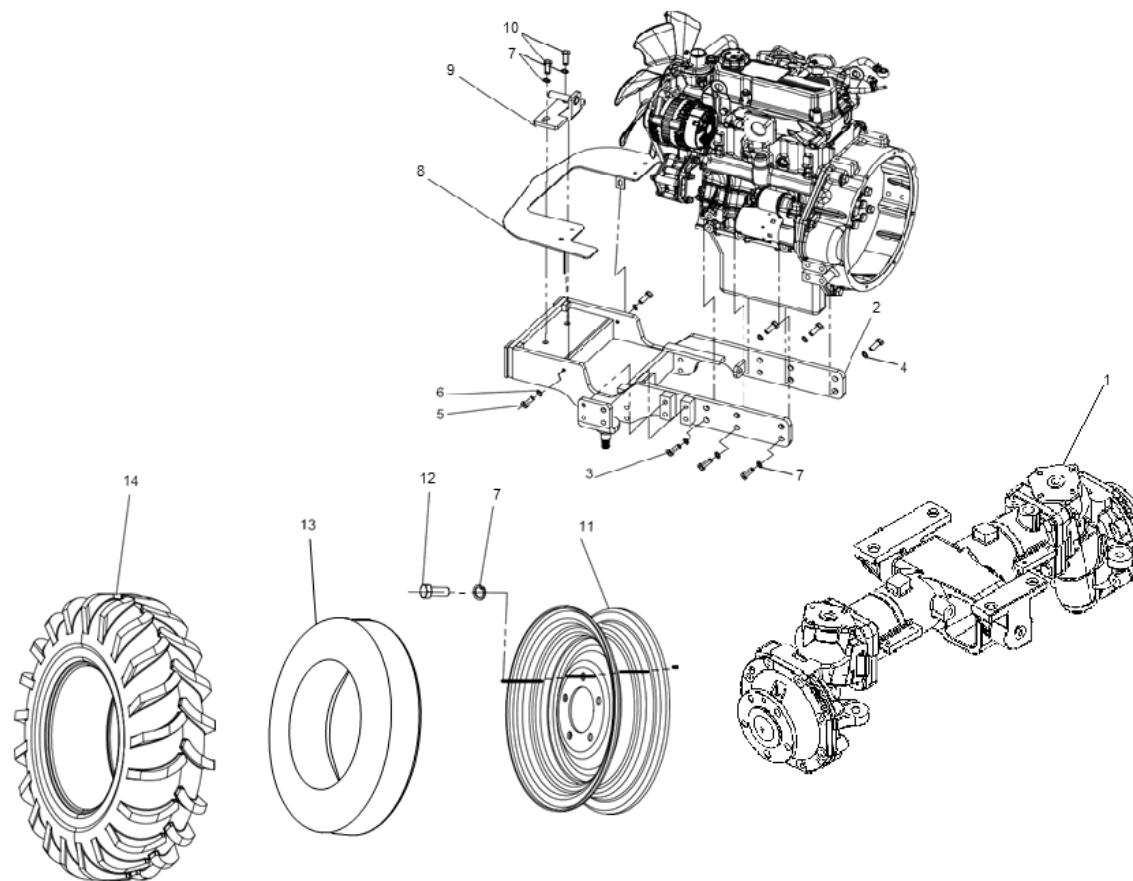

[illegible]

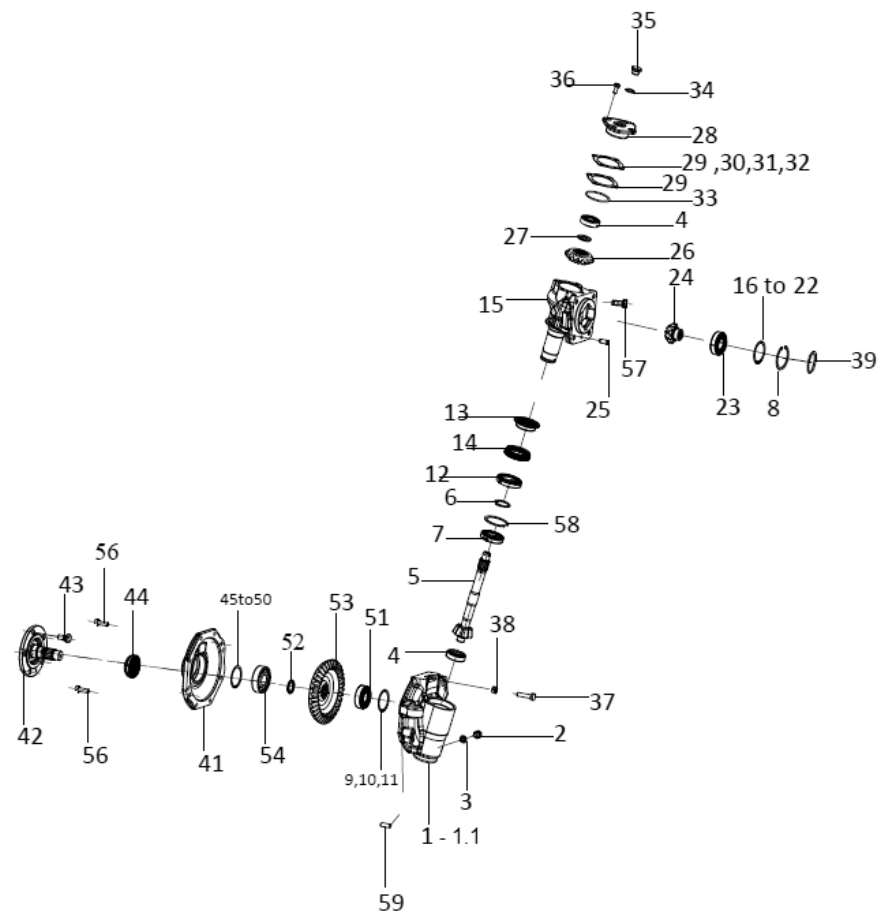



HOUSING SWIVEL FRONT AXLE LH / RH)


P-130

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	PM1003062	HOUSING SWIVEL FRONT AXLE LH	1	
1.1	ALL MODELS	PM1003063	HOUSING SWIVEL FRONT AXLE RH	1	
2	ALL MODELS	PM1003115	SCREW M12X1.75X12-8.8 HEX HEAD	2	
3	ALL MODELS	PM1003114	WASHER 12.0X22.0 SCREW RAIL	2	
4	ALL MODELS	H029033	BEARING TAPER ROLLER 30304	4	
5	ALL MODELS	PM1003093	SHAFT DRIVER BEVEL GEAR Z-9	2	
6	ALL MODELS	H017005	CIRCLIP A40X1.75 N	1	
7	ALL MODELS	H02629	BEARING BALL 6908	2	
8	ALL MODELS	H018014	CIRCLIP B62X2.0 N (IS 3075 PART-II)	6	
9	ALL MODELS	PM1003081	SHIM 60X50 (0.075 MM)	2	
10	ALL MODELS	PM1003082	SHIM 60X50 (0.2285 MM)	2	
11	ALL MODELS	PM1003083	SHIM 60.X50 (0.4065 MM)	2	
12	ALL MODELS	H02630	BEARING BALL 6909	2	
13	ALL MODELS	PM1003119	SLEEVE OIL SEAL SWIVEL HOUSING	2	
14	ALL MODELS	PM1003120	SEAL OIL SWIVEL HOUSING 52X70X10	2	
15	ALL MODELS	PM1003059	HOUSING KNUCKLE FRONT AXLE	2	
16	ALL MODELS	PM1003074	SHIM 61.8X51 (0.2285 MM)	2	
17	ALL MODELS	PM1003075	SHIM 61.8X51 (0.4065 MM)	2	
18	ALL MODELS	PM1003076	SHIM 61.8X51 (0.5335 MM)	2	
19	ALL MODELS	PM1003077	SHIM 61.8X51 (0.7875 MM)	2	
20	ALL MODELS	PM1003078	SHIM 61.8X51 (1 MM)	2	
21	ALL MODELS	PM1003079	SHIM 61.8X51 (1.2 MM)	2	
22	ALL MODELS	PM1003080	SHIM 61.8X51 (1.5 MM)	2	
23	ALL MODELS	H026014	BEARING BALL 6206	2	
24	ALL MODELS	PM1003095	GEAR DRIVER BEVEL KNUCKLE Z-10	2	
25	ALL MODELS	PM1003116	DOWEL POSITIONING 10X25	8	
26	ALL MODELS	PM1003096	GEAR DRIVEN BEVEL KNUCKLE Z-16	2	
27	ALL MODELS	PM1003117	WASHER 36.0X20.0X3.0	2	
28	ALL MODELS	PM1003064	COVER KNUCKLE HOUSING	2	
29	ALL MODELS	PM1003084	SHIM COVER KNUCKLE (0.075 MM)	2	



HOUSING SWIVEL FRONT AXLE LH / RH)

P-130 A

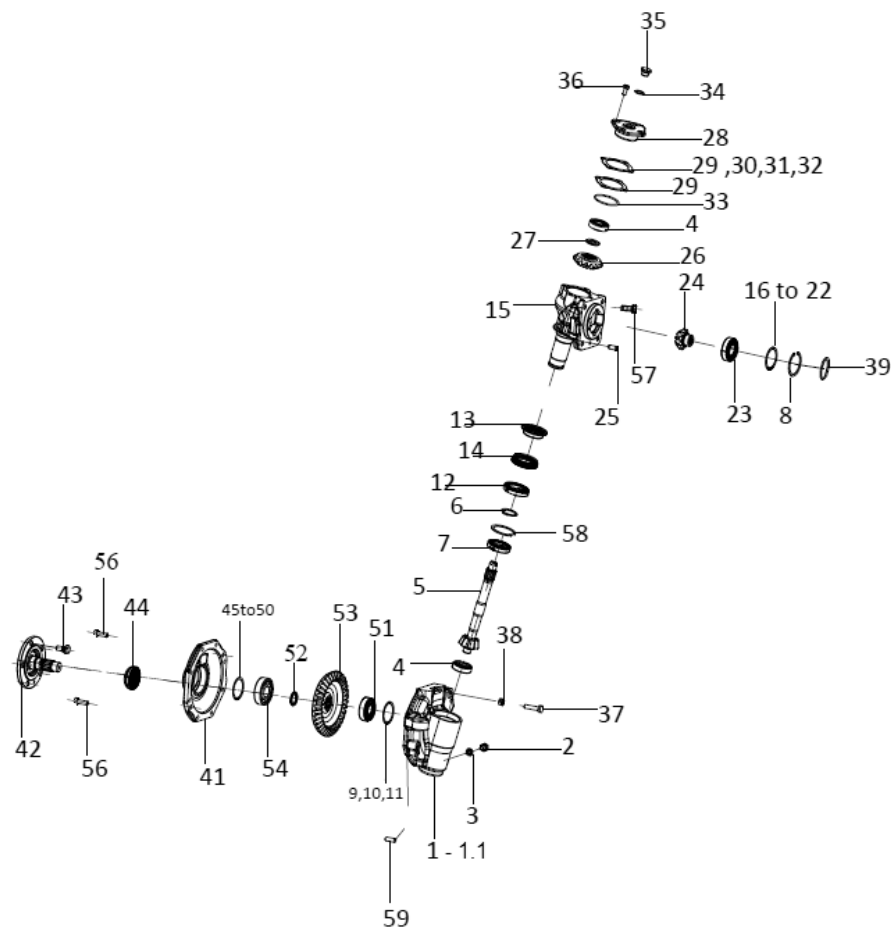



HOUSING SWIVEL FRONT AXLE LH / RH)


P-130 A

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
30	ALL MODELS	PM1003085	SHIM COVER KNUCKLE (0.125 MM)	2	
31	ALL MODELS	PM1003086	SHIM COVER KNUCKLE (0.2285 MM)	2	
32	ALL MODELS	PM1003087	SHIM COVER KNUCKLE (0.4065 MM)	2	
33	ALL MODELS	PM1003121	SEAL O RING 2.62X62.00	2	
34	ALL MODELS	H031001	WASHER M18 FLAT COPPER	2	
35	ALL MODELS	PM1003123	PLUG M18X1.5X12-6.8 HEX HEAD	2	
36	ALL MODELS	H002038	BOLT M8X1.25X20-8.8 HEX HEAD	8	
37	ALL MODELS	H002030	BOLT M10X1.50X45-8.8 HEX HEAD ROUNDED TOP	2	
38	ALL MODELS	H001024	NUT M10X1.50 NYLOCK HEX	2	
39	ALL MODELS	PM1003124	SEAL O RING 2.62X95.0	2	
40	ALL MODELS	*	LOCTITE 574	AR	
41	ALL MODELS	PM1003060	HOUSING WHEEL FRONT AXLE	2	
42	ALL MODELS	PM1003097	SHAFT FRONT AXLE WHEEL	2	
43	ALL MODELS	PM1003089	BOLT M12X1.5 FRONT WHEEL HUB	10	
44	ALL MODELS	PM1003125	SEAL OIL 35X60X14.5 PTO OUTPUT SHAFT	2	
45	ALL MODELS	PM1003105	SHIM REAR AXLE SHAFT (0.075 MM)	2	
46	ALL MODELS	PM1003106	SHIM REAR AXLE SHAFT (0.125 MM)	2	
47	ALL MODELS	PM1003107	SHIM REAR AXLE SHAFT (0.2285 MM)	2	
48	ALL MODELS	PM1003108	SHIM REAR AXLE SHAFT (0.4065 MM)	2	
49	ALL MODELS	PM1003109	SHIM REAR AXLE SHAFT (0.5335 MM)	2	
50	ALL MODELS	PM1003110	SHIM REAR AXLE SHAFT (0.7875 MM)	2	
51	ALL MODELS	H026023	BEARING BALL 6305	2	
52	ALL MODELS	PM1003118	WASHER SPLIT WHEEL END	4	
53	ALL MODELS	PM1003094	GEAR DRIVEN BEVEL WHEEL Z-37	2	
54	ALL MODELS	H026008	BEARING BALL 6306	2	
55	ALL MODELS	*	LOCTITE 574	4	
56	ALL MODELS	H003121	BOLT M10X1.50X30-10.9 HEX HEAD	16	
57	ALL MODELS	H004058	SCREW M12X1.75X35-10.9	8	
58	ALL MODELS	H018014	CIRCLIP B62X2.0 N	2	
59	ALL MODELS	PM1003116	DOWEL POSITIONING 10X25	2	



RETAINER AND BEVEL PINION SHAFT ASSY.


P-130 B

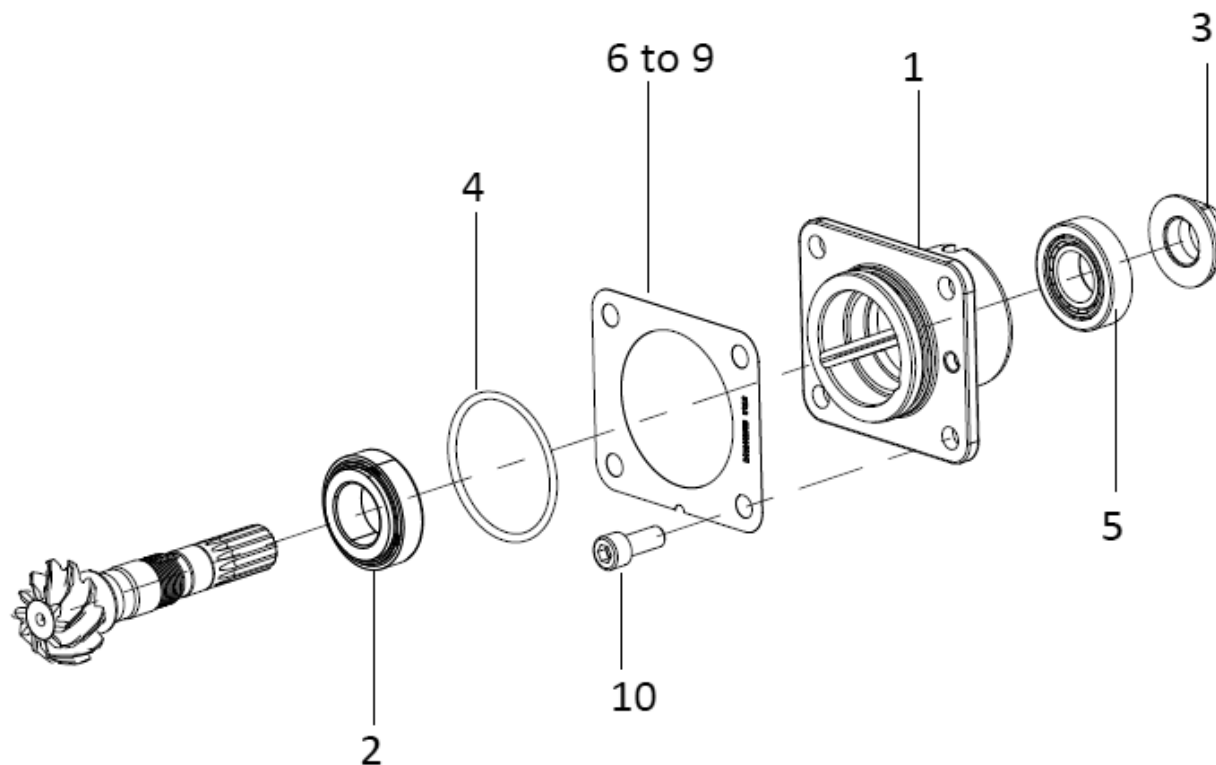


[illegible]



PILLOW BLOCK SUB-ASSEMBLY FRONT & REAR P-130 C

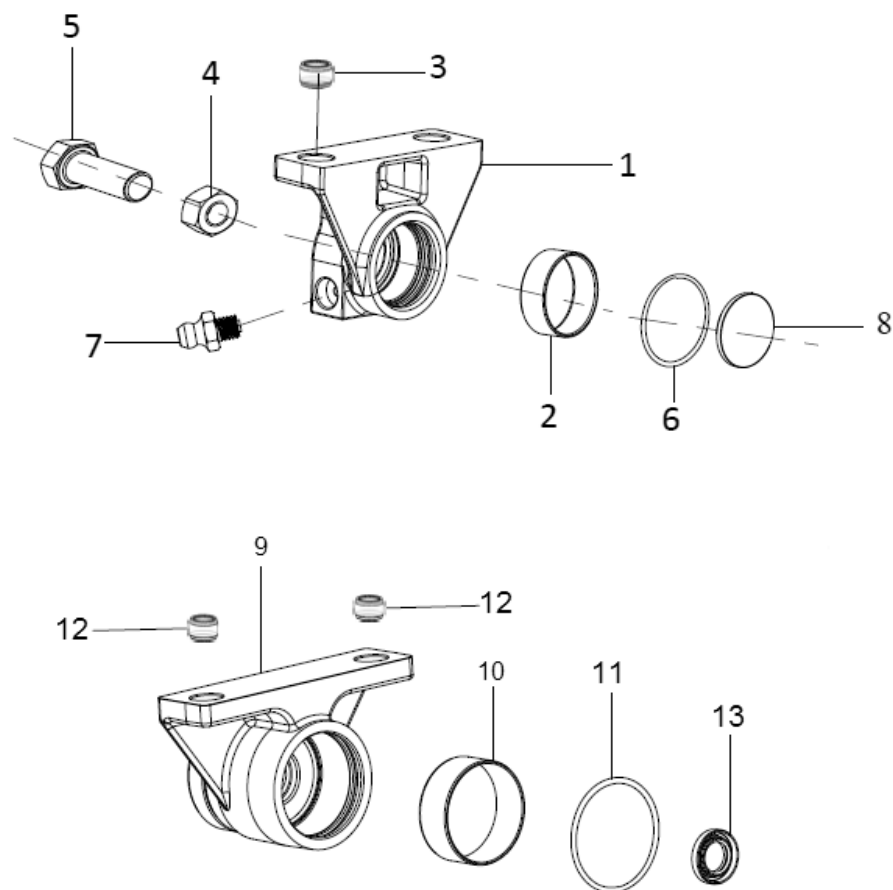

[illegible]

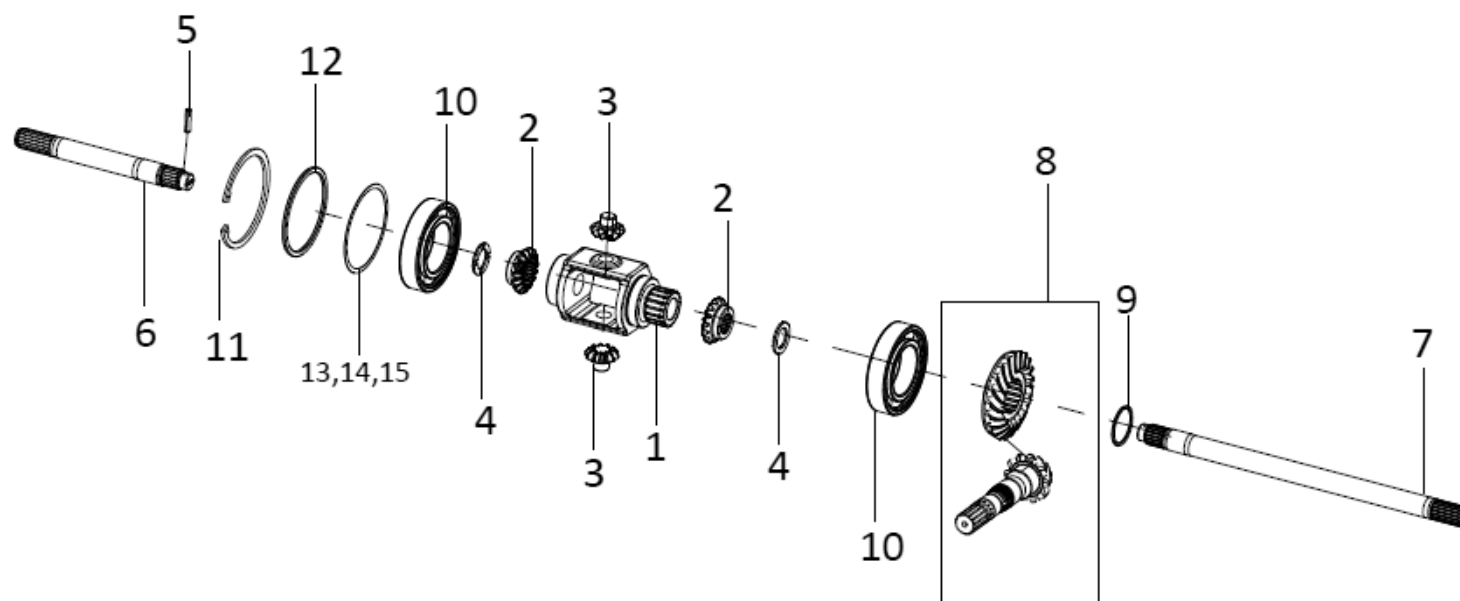


[illegible]




INDICATOR FRONT AXLE OIL LEVEL P – 130 E

P-130 E

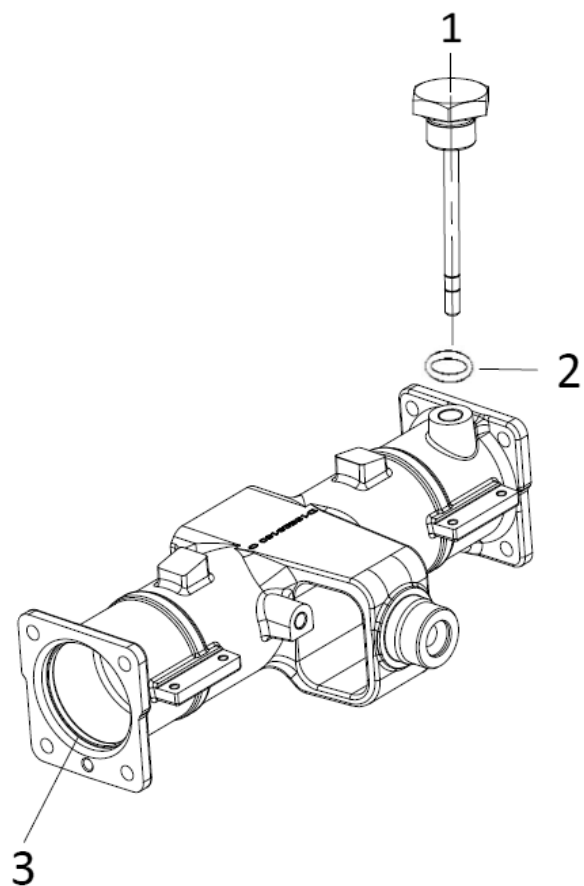

[illegible]

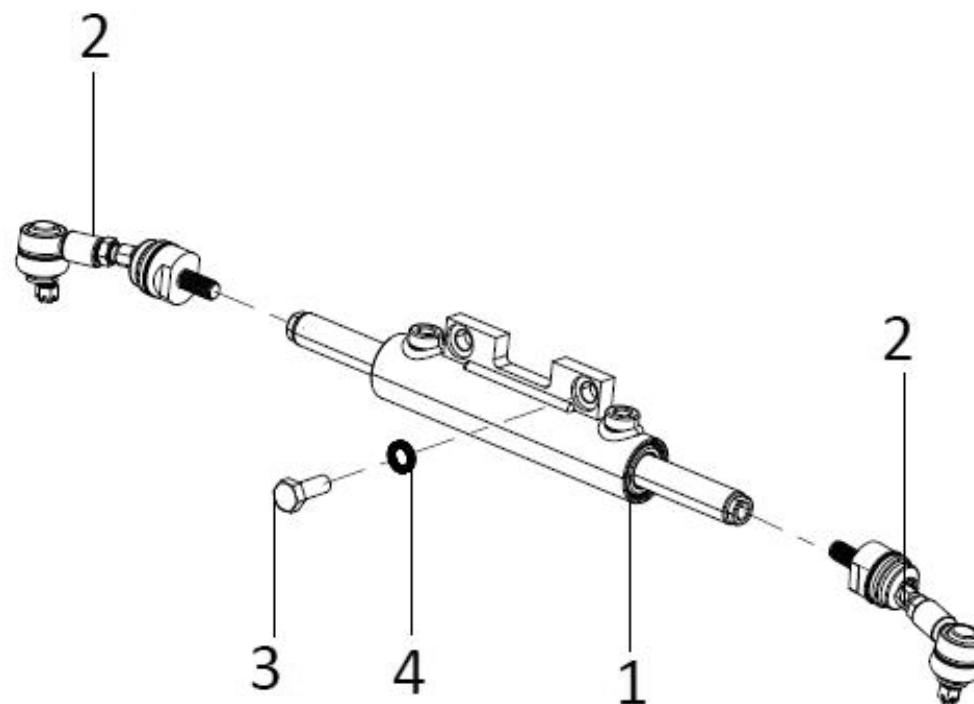




P-130 F

[illegible]



GUARD STEERING CYLINDER


P-130 G

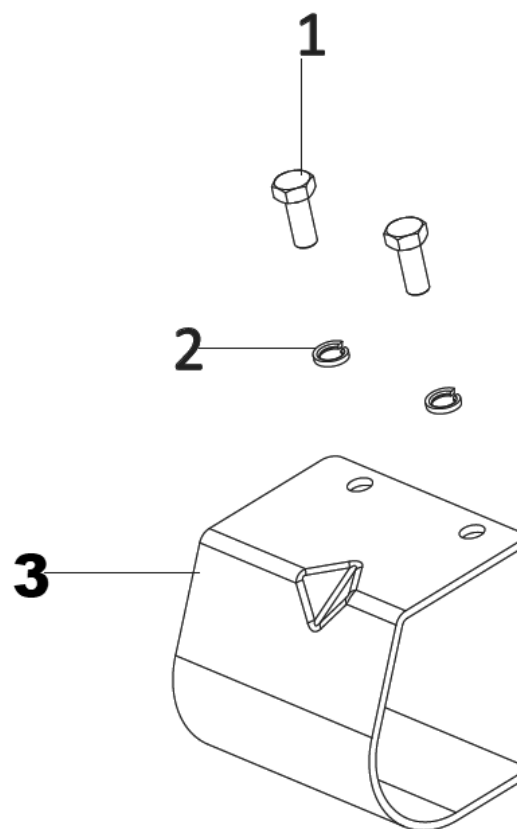



P-130 G

[illegible]

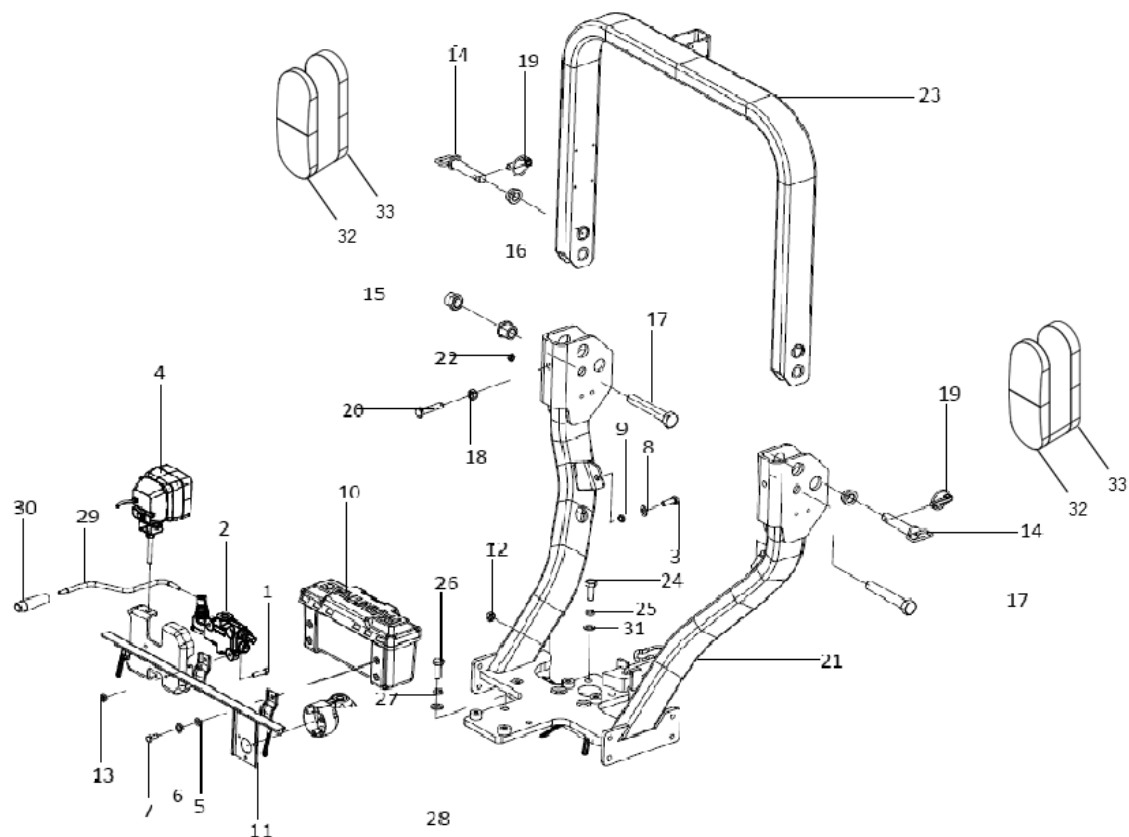




ROPS FOLDABLE SUBASSEMBLY COMPACT

P-131


S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	H048014	BOLT M8X1.25X30 HEX SOCKET HEAD	2	
2	ALL MODELS	PM0905003	VALVE ASSY HYD CONTROL SINGLE SPOOL	1	
3	ALL MODELS	H004007	BOLT M10X1.50X30-8.8 HEX HEAD	2	
4	ALL MODELS	PM1301051	COMPACT PLOUGH LAMP ASSY. (12V)	1	
5	ALL MODELS	H007004	WASHER M8 FLAT	2	
6	ALL MODELS	H006003	WASHER M8 SPRING LOCK	2	
7	ALL MODELS	H004006	BOLT M8X1.25X20-8.8 HEX HEAD	2	
8	ALL MODELS	H007001	WASHER M10 FLAT	2	
9	ALL MODELS	H006001	WASHER M10 SPRING LOCK	2	
10	ALL MODELS	PM1203027	COMPACT TOOL BOX ASSY	1	
11	ALL MODELS	PM2200031	BKT ASSEMBLY SUPPORT FENDER (WITH ROPS)	1	
12	ALL MODELS	H001001	NUT M10X1.50-8 HEX	2	
13	ALL MODELS	H001005	NUT M8X1.25-6 HEX	2	
14	ALL MODELS	PM1203078	PIN ROPS LOCKING	2	
15	ALL MODELS	H039011	NUT M20X2.50 HEX NYLOCK	2	
16	ALL MODELS	PM1203079	BUSH COLLAR ROPS FRAME	2	
17	ALL MODELS	H002070	BOLT M20X2.5X115-8.8 HEX HEAD	2	
18	ALL MODELS	H001004	NUT M12X1.75 HEX	2	
19	ALL MODELS	H035002	PIN AND RING ASSY LOWER LIFT LINK LYNCH	2	
20	ALL MODELS	H002024	BOLT M12X1.75X55-10.9 HEX HEAD	2	
21	ALL MODELS	PM2200029	BASE ASSEMBLY ROPS	1	
22	ALL MODELS	H001005	NUT M8X1.25-8 HEX	4	
23	ALL MODELS	PM2200030	ROPS TOP U	1	
24	ALL MODELS	H005019	BOLT M14X2.00X35-10.9 HEX HEAD LOCK	4	
25	ALL MODELS	H006009	WASHER M14 SPRING LOCK	4	
26	ALL MODELS	H002015	BOLT M12X35-10.9 HEX HEAD	2	
27	ALL MODELS	H006004	WASHER M12 SPRING LOCK	2	
28	ALL MODELS	H008003	WASHER M12 FLAT	2	
29	ALL MODELS	PM1203082	LEVER SPOOL VALVE	1	
30	ALL MODELS	PM1203092	KNOB SPOOL VALVE	1	

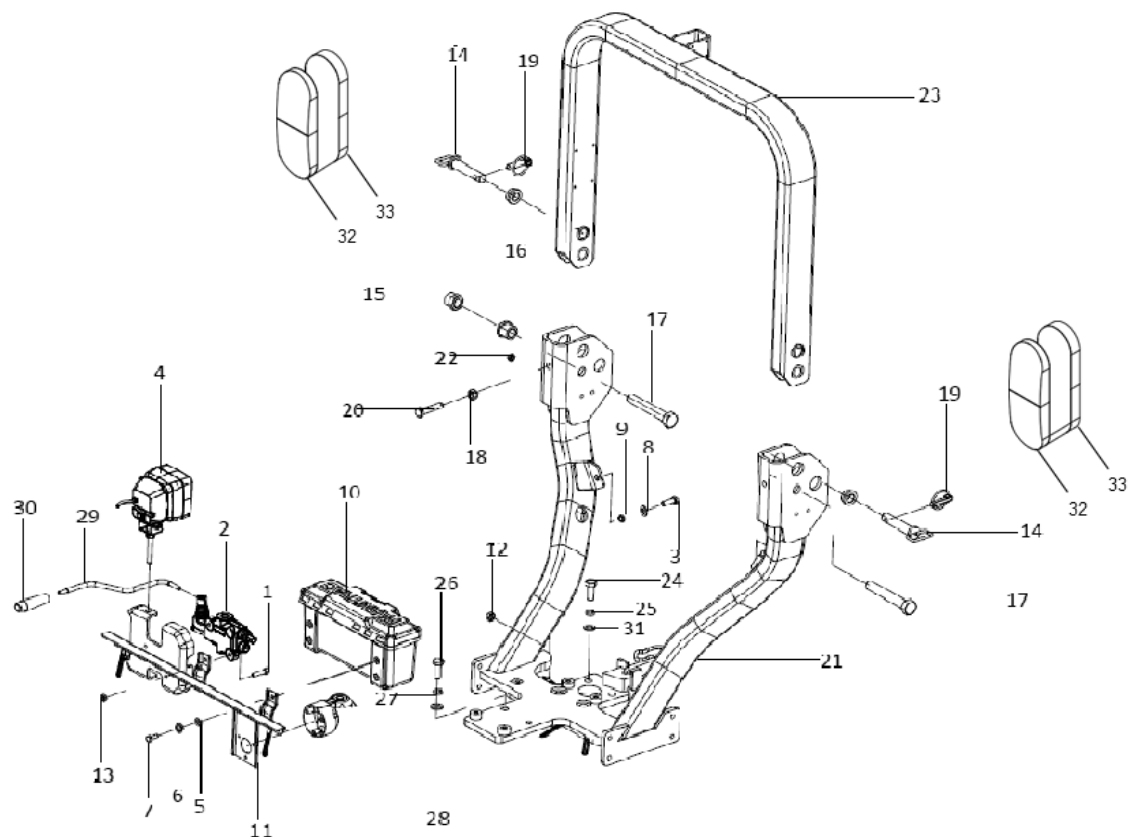



P-131

[illegible]

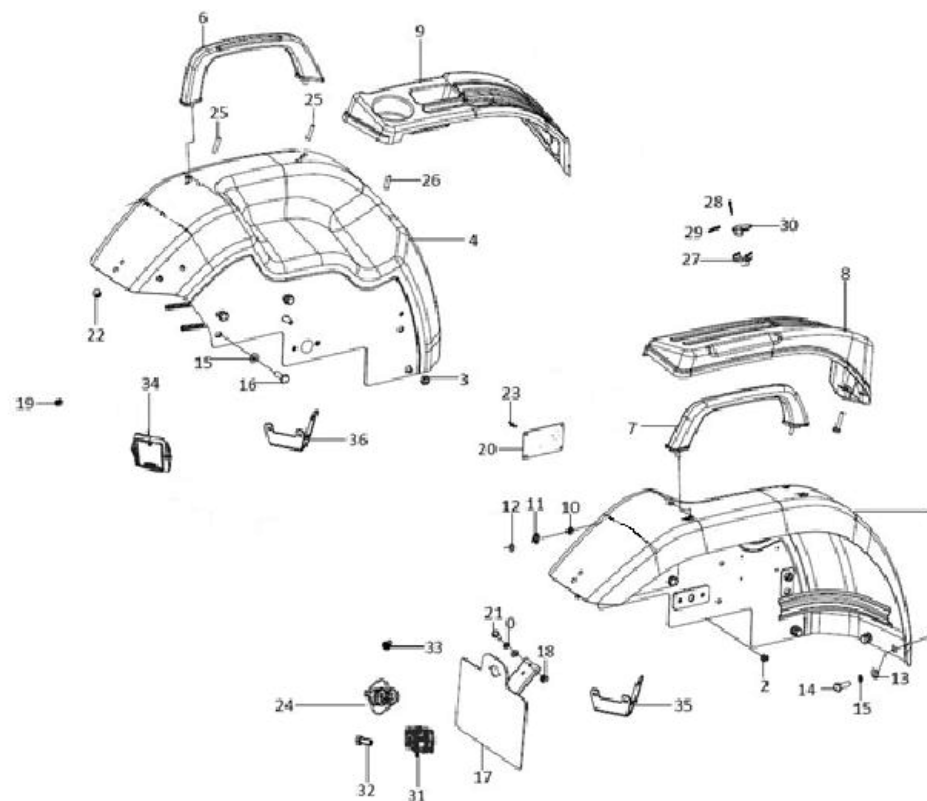



FENDERS SUB ASSEMBLY


P-132

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	PM1203050	FENDER ASSEMBLY RH	1	
2	ALL MODELS	H001022	NUT M8X1.25-6 LOCK	2	
3	ALL MODELS	H039002	NUT M10X1.50 NYLOCK HEX	18	
4	ALL MODELS	PM1203049	FENDER ASSEMBLY LH	1	
6	ALL MODELS	PM1203084	HANDLE FENDER ASSEMBLY LH	1	
7	ALL MODELS	PM1203085	HANDLE FENDER ASSEMBLY RH	1	
8	ALL MODELS	PM1203076	CONSOLE RH GEAR SHIFT LEVER	1	
9	ALL MODELS	PM1203075	CONSOLE LH RANGE LEVER	1	
10	ALL MODELS	H001005	NUT M8X1.25-8 HEX	8	
11	ALL MODELS	H006003	WASHER M8 SPRING LOCK	10	
12	ALL MODELS	H007004	WASHER M8 FLAT	10	
13	ALL MODELS	H007001	WASHER M10 FLAT	14	
14	ALL MODELS	H004048	BOLT M10X1.50X30-6.6 HEX HEAD	14	
15	ALL MODELS	H006001	WASHER M10 SPRING LOCK	6	
17	ALL MODELS	PM1203081	BKT ASSY REGISTRATION PLATE MOUNTING	1	
18	ALL MODELS	H001005	NUT M8X1.25-6 HEX	2	
19	ALL MODELS	H001005	NUT M5X0.80-6 PLATED	2	
20	ALL MODELS	PM2001058	PLATE DATA STATUTORY	1	
21	ALL MODELS	H004002	BOLT M8X1.25X16-8.8 HEX HEAD	2	
22	ALL MODELS	PM1203080	PLUG FENDER DIA 11.0	2	
23	ALL MODELS	P0401031	RIVET 4X6.0MM (CLINCH TYPE)	4	
24	ALL MODELS	PM1203083	PLUG M10X1.5 SQUARE HEAD	6	
25	ALL MODELS	H012004	STUD B M8X1.25X60-8.8	2	
26	ALL MODELS	H012023	STUD B M8X1.25X42-8.8	4	
27	ALL MODELS	PM1701376	PAD ASSY HYD LIFT CONTROL LEVER LOWER	1	
28	ALL MODELS	PM0601187	KNOB HYDRAULIC LIFT CONTROL LEVER STOP	2	
29	ALL MODELS	H043024	PIN 1.6x12 COTTER	2	
30	ALL MODELS	PM1701377	PAD HYDRAULIC LIFT CONTROL LEVER UPPER	2	



FENDERS SUB ASSEMBLY


P-133

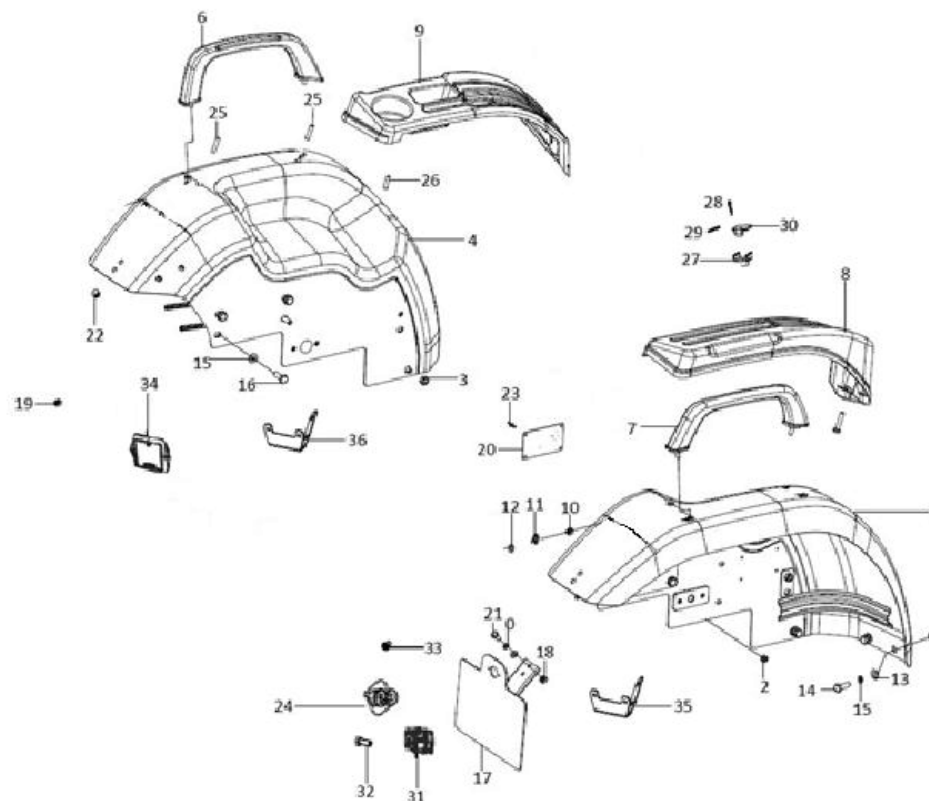



P-133

[illegible]

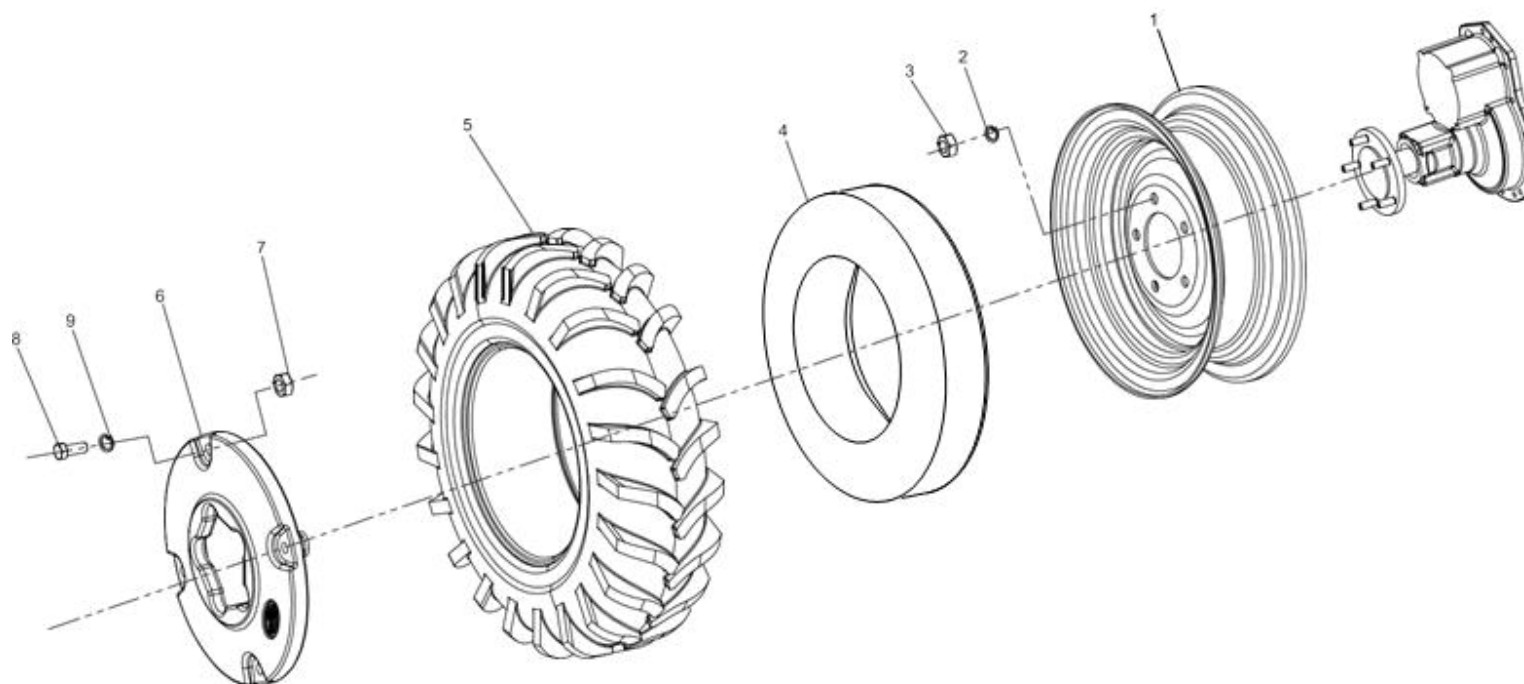




P-134

[illegible]



FUEL TANK ASSY & RELATED PARTS

P-135

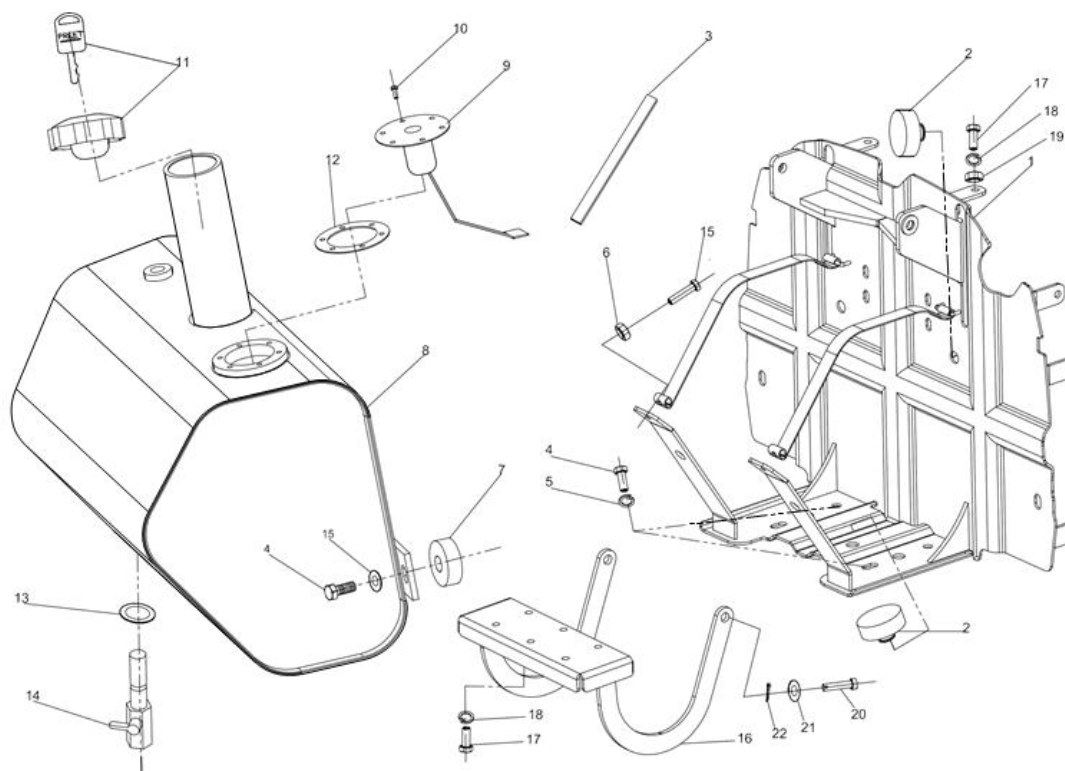




P-135

[illegible]



BONNET ASSY. & RELATED PARTS

P-136

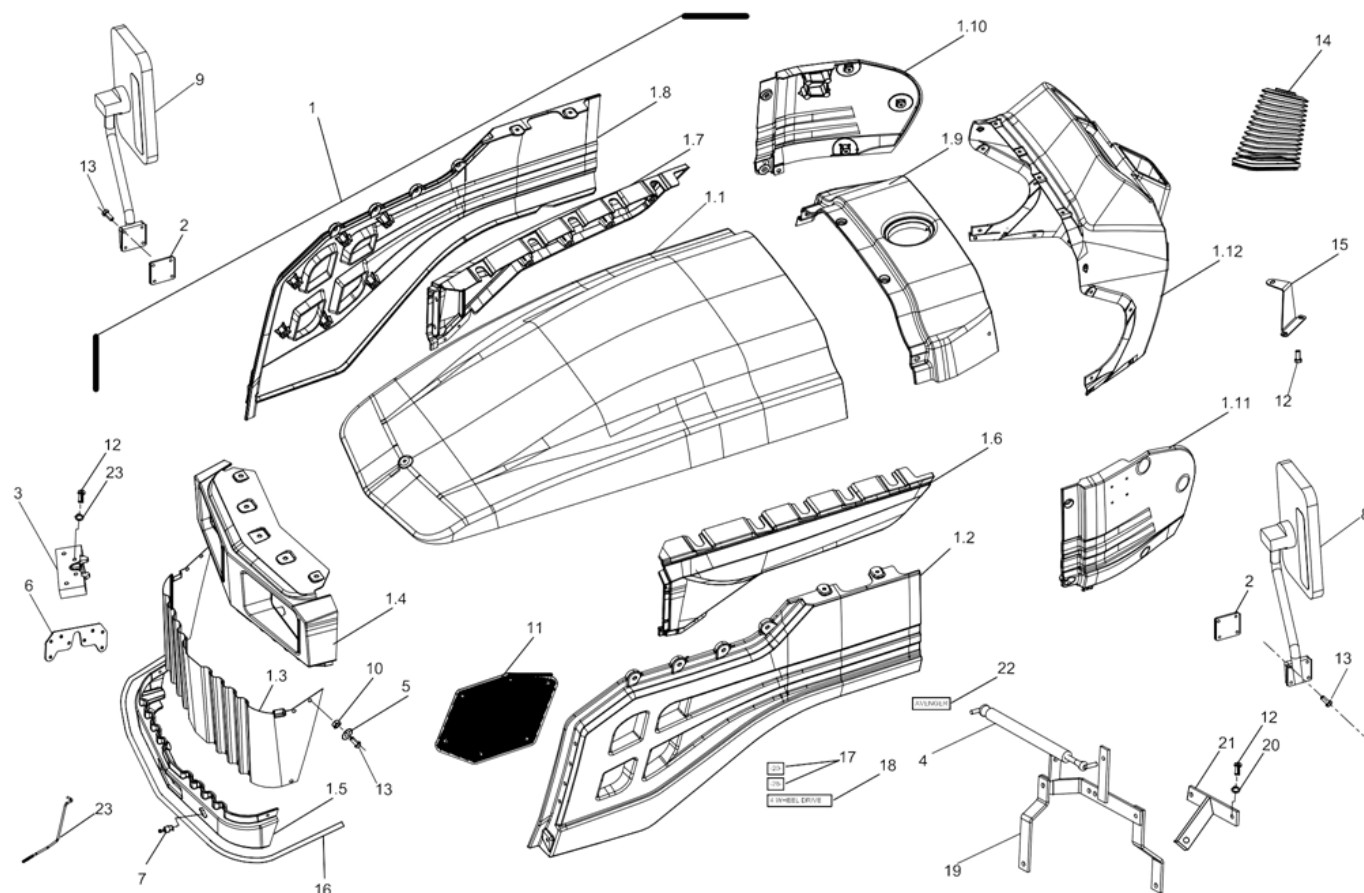



BONNET ASSY. & RELATED PARTS


P-136

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	PM1201026	Bonnet & Dash Board Assy -Mech NB	1	
1.1	ALL MODELS	PM1201010	Top Panel-MECH.	1	
1.2	ALL MODELS	PM1201011	Hood Side Panel LH- MECH.	1	
1.3	ALL MODELS	PM1201008	Front Mesh Assy.	1	
1.4	ALL MODELS	PM1201009	Head Lamp Bezel	1	
1.5	ALL MODELS	PM1201007	Hood Front Lower Part	1	
1.6	ALL MODELS	PM1201005	Light Extension Panel LH	1	
1.7	ALL MODELS	PM1201006	Light Extension Panel RH	1	
1.8	ALL MODELS	PM1201012	Hood Side Panel RH- MECH.	1	
1.9	ALL MODELS	PM1202003	Dashboard Panel Top	1	
1.1	ALL MODELS	PM1202005	Dashboard Panel RH	1	
1.11	ALL MODELS	PM1202004	Dashboard Panel LH	1	
1.12	ALL MODELS	PM1202002	Dashboard	1	
2	ALL MODELS	PM1202037	Mirror Mounting BKT	2	
3	ALL MODELS	P120120700	Bonnet Lock	1	
4	ALL MODELS	PM1201030	Gas Spring	1	
5	ALL MODELS	H01002	Plain Washer M6	99	
6	ALL MODELS	P120403500	Bonnet Lock Strip	1	
7	ALL MODELS	P120120800	Bonnet Lock With Key	1	
8	ALL MODELS	PM1202029	Rear View Mirror (LH)	1	
9	ALL MODELS	P1202004	Rear View Mirror (RH)	1	
10	ALL MODELS	H001007	Hex. Nut M6	22	
11	ALL MODELS	PM1201025	Side Mesh NB	1	
12	ALL MODELS	H042009	Flanged Head Screw M6X20	20	
13	ALL MODELS	H056001	Mushroom Head Cross Recess Screw M6X20	127	
14	ALL MODELS	PM1202032	Rubber Boot A26/A20 (Steering Column)	1	
15	ALL MODELS	PM1301038	Bkt. Instrument Cluster Holding	2	
16	ALL MODELS	PM1201031	Bonnet Bottom Beading	1	



BONNET ASSY. & RELATED PARTS

P-136

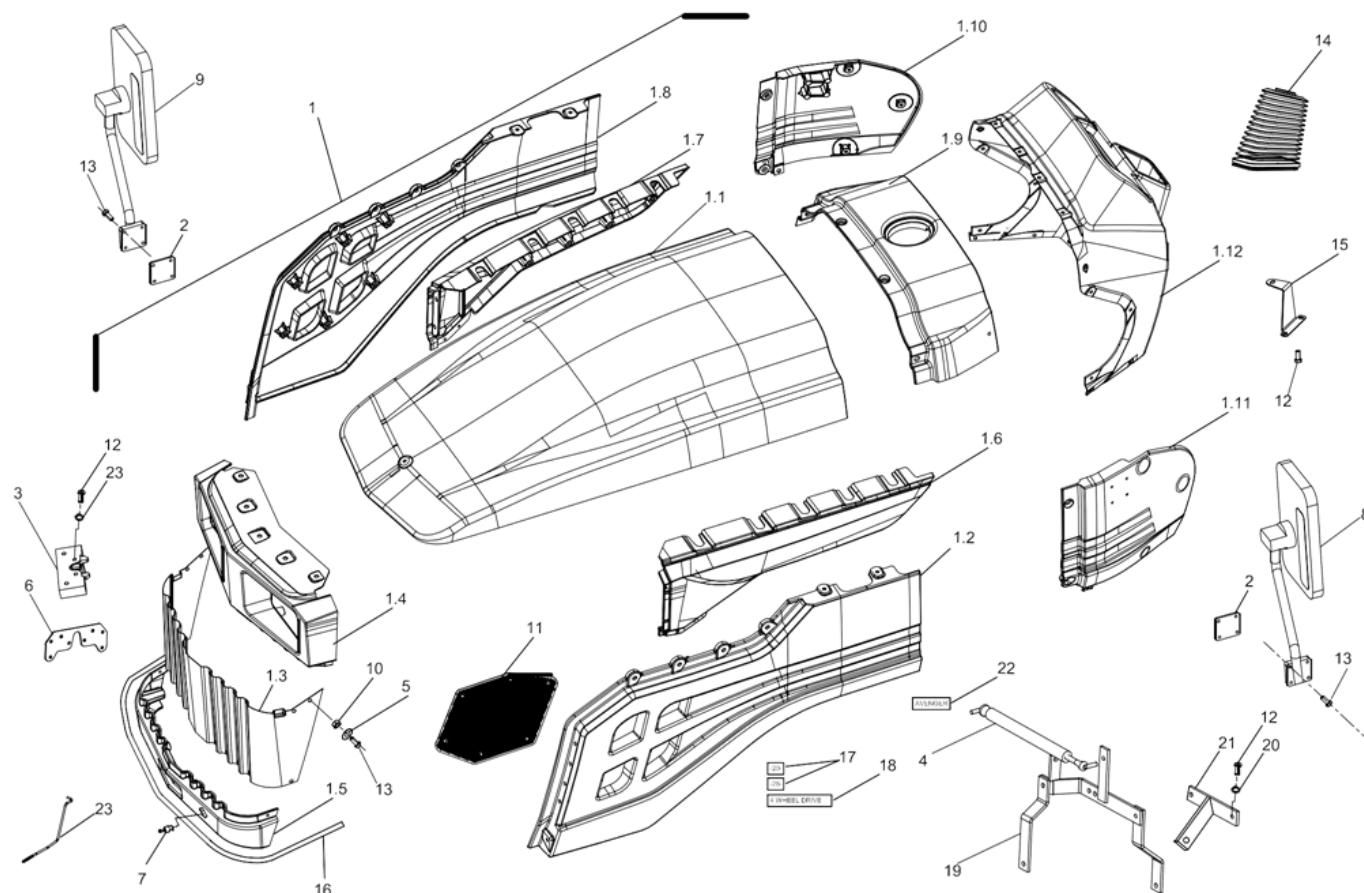




P-136

[illegible]




DRIVER SEAT & RELATED PARTS

P-137

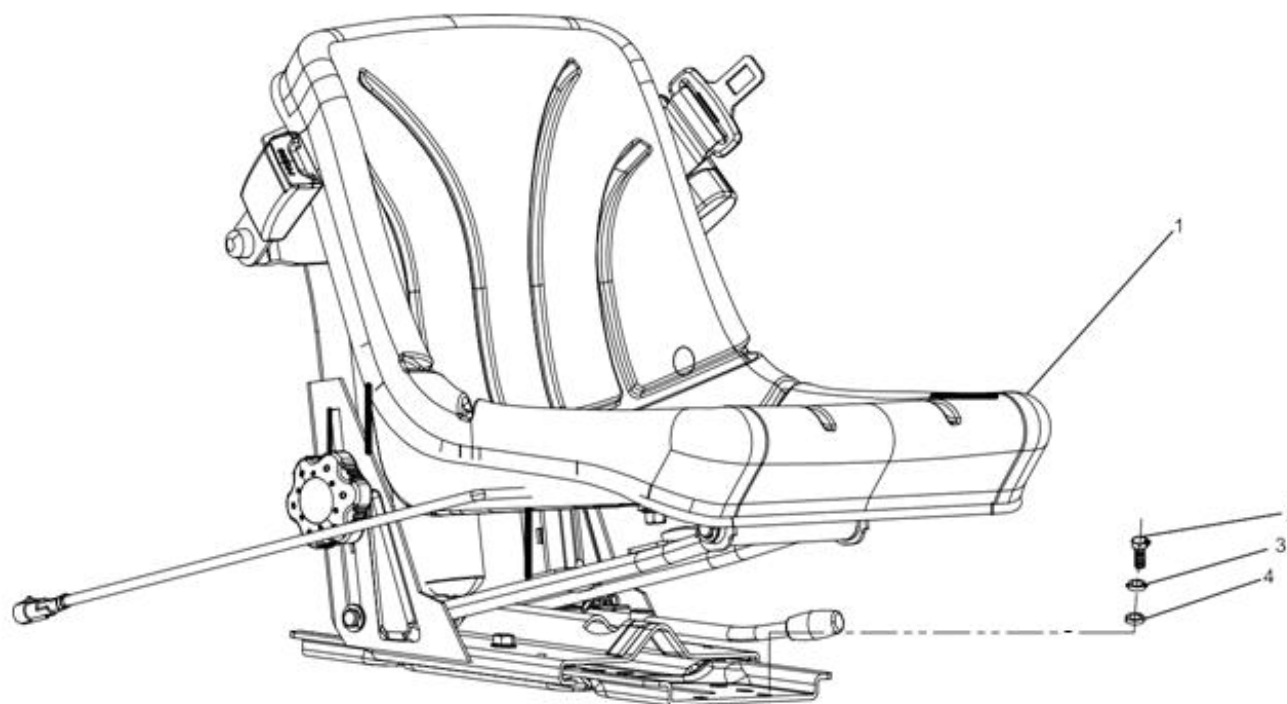

[illegible]

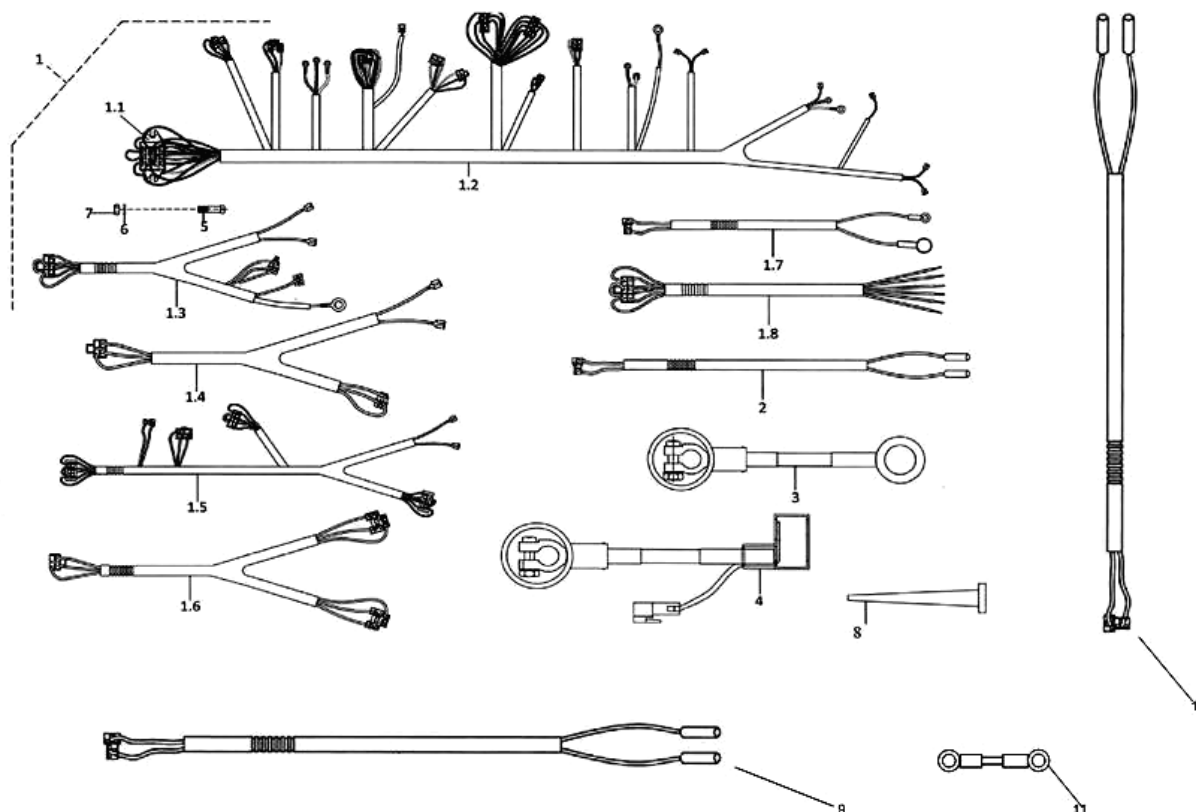




P-138

[illegible]



LIGHT , SWITCHES & RELATED PARTS

P-139

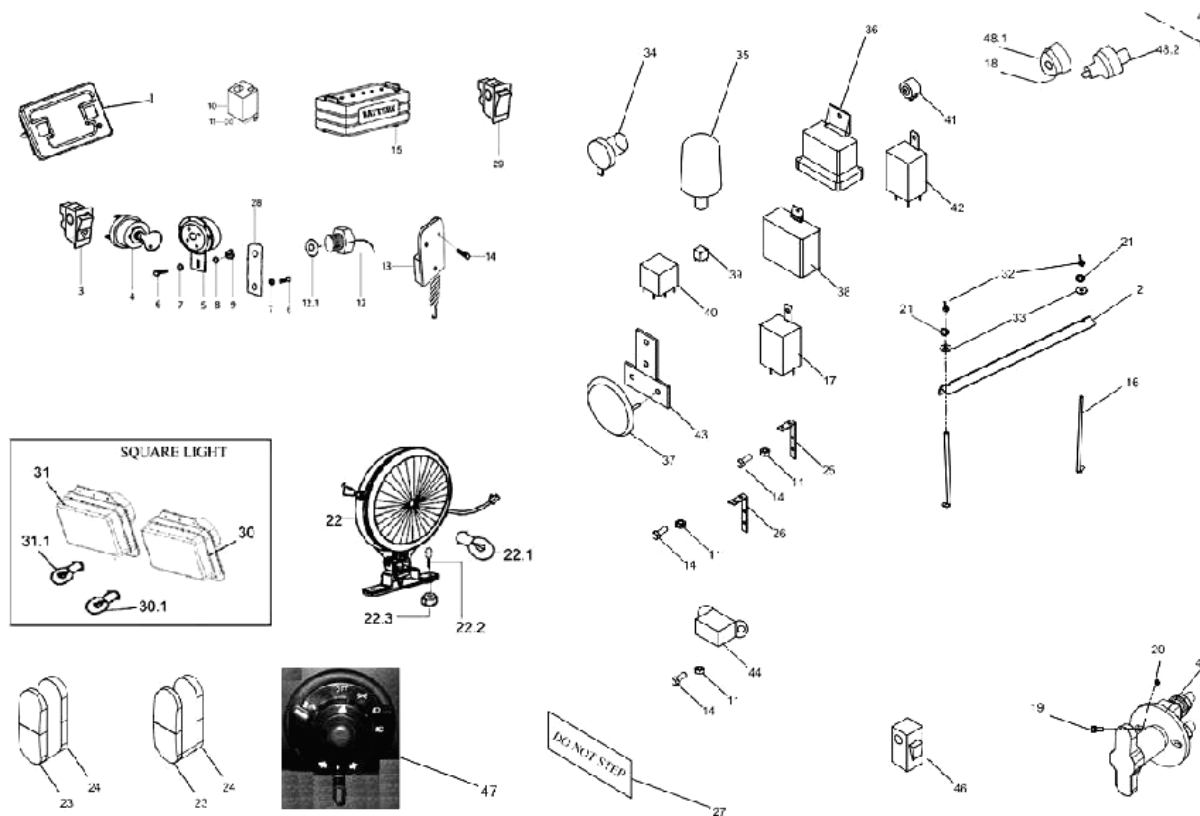



LIGHT , SWITCHES & RELATED PARTS


P-139

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	PM1301040	Digital Cluster Assy.A20/A26	1	
2	ALL MODELS	PM1301036	Battery Holding Bkt-NB	1	
3	ALL MODELS	P130108800	Hazard Switch	1	
4	ALL MODELS	P130101200	Starting Switch	1	
5	ALL MODELS	P130100800	Horn Assy.	1	
6	ALL MODELS	H042004	Flange Head Hex. Screw M8x20	1	
7	ALL MODELS	H007004	M/C Washer M8	1	
8	ALL MODELS	H006003	Spring Washer M8	1	
9	ALL MODELS	H039005	Nyloc Nut M8	1	
10	ALL MODELS	P130101300	Flasher Unit Assy.	1	
11	ALL MODELS	H001007	Hex. Nut M6	11	
12	ALL MODELS	PM0101080	Oil Pressure Switch	1	
12	ALL MODELS	PM0107024	Oil Pressure Switch	1	
12.1	ALL MODELS	H032006	Al. Washer	1	
13	ALL MODELS	P130101100	Brake Light Switch	1	
14	ALL MODELS	H042002	Flange Head Hex. Screw M6x16	12	
15	ALL MODELS	PM1301027	Battery 65 Ah	1	
16	ALL MODELS	PM1301037	Battery Holding Tie-Rod-NB	2	
17	ALL MODELS	PM1301020	Flasher Unit for OPC	1	
18	ALL MODELS	H015004	Cheese Head Screw M6x30	3	
19	ALL MODELS	H005013	Hex Screw M6x25	2	
20	ALL MODELS	H001007	Hex. Nut M6	2	
21	ALL MODELS	H006003	Spring Washer M8	2	
22	ALL MODELS	P130112600	Plough Lamp Assy.	1	
23	ALL MODELS	PM1301005	Led Front Fender Light	2	
24	ALL MODELS	PM1301006	Led Rear Fender Light	2	
25	ALL MODELS	PM1301021	Mtg. Brkt. Fuse Box	1	
25	ALL MODELS	PM1301030	Mtg. Brkt. Fuse Box	1	



LIGHT , SWITCHES & RELATED PARTS

P-139

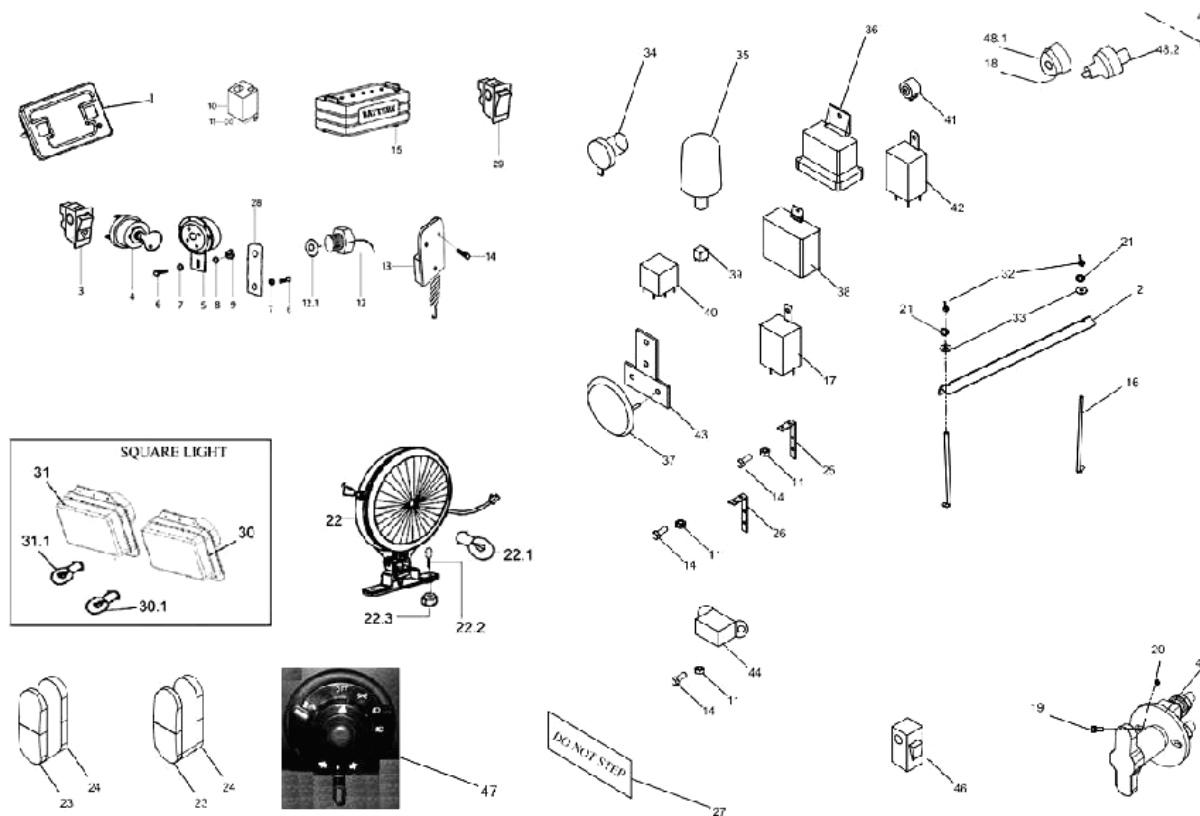



LIGHT , SWITCHES & RELATED PARTS


P-139

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
26	ALL MODELS	PM1301016	Mtg. Brkt. Main Relay	1	
26	ALL MODELS	PM1301029	Mtg. Brkt. Main Relay	1	
27	ALL MODELS	P120111300	Sticker: Do Not Step	1	
28	ALL MODELS	P130108200	Horn Mtg Bracket	1	
29	ALL MODELS	P130109500	Work Light Switch With Illumination	1	
30	ALL MODELS	P130111800	Head Light Square (L.H)	1	
30.1	ALL MODELS	P130117000	Bulb - Hb3-12V 60W	2	
31	ALL MODELS	P130111800	Head Light Square (R.H)	1	
31.1	ALL MODELS	P130117000	Bulb - Hb3-12V 60W	2	
32	ALL MODELS	H001005	Butterfly Nut M8 for Battery Holder	2	
33	ALL MODELS	H010003	Plain Washer M8	2	
34	ALL MODELS	P130108900	Charging Socket (12V)	1	
35	ALL MODELS	PM1301013	Revolving Light	1	
36	ALL MODELS	PM1301014	Glow Plug Control Unit	1	
37	ALL MODELS	PM1301008	Reflex Reflector (Round Red)	2	
38	ALL MODELS	PM1301017	Safety Controller For Engine Shut-Off	1	
39	ALL MODELS	PM1301018	Relay Small	1	
40	ALL MODELS	PM1301010	Main Relay CRDI-75	5	
41	ALL MODELS	PM1301012	Buzzer Assy. (Continues Beeping)	1	
42	ALL MODELS	PM1301009	Flasher EU (For LED Light)	1	
43	ALL MODELS	PM1301024	Mtg. Brkt. Reflex Reflector	2	
44	ALL MODELS	PM1301033	Registration Light	1	
45	ALL MODELS	PM1301043	Battery Cut Switch (Red Knob)	1	
46	ALL MODELS	PM1301031	Revolving Light Switch	1	
47	ALL MODELS	PM1301063	Combination Switch	1	
48	ALL MODELS	P1301050	Seven Pin Socket Assy.	1	
48.1	ALL MODELS	P1301035	Seven Pin Socket	1	
48.2	ALL MODELS	P1301036	Adaptor for Seven Pin Socket	2	



DECAL MODEL IDENTIFICATION

P-140

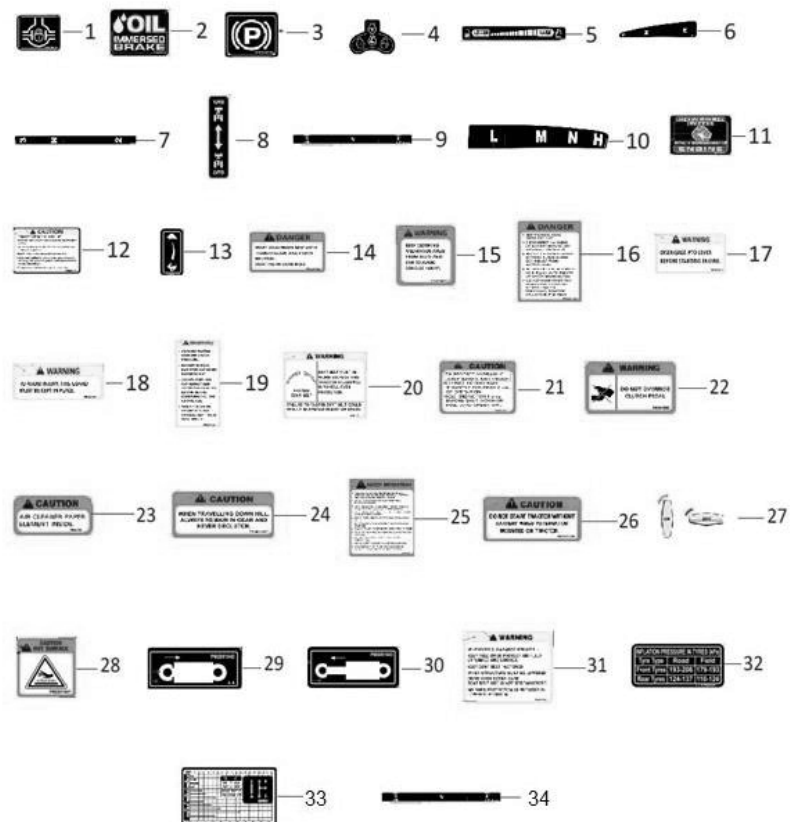



DECAL MODEL IDENTIFICATION


P-140

S. No.	MODEL NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
1	ALL MODELS	PM2001014	DECAL DIFFERENTIAL LOCK	1	
2	ALL MODELS	PM2001015	DECAL OIL IMMERSSED BRAKE (RED)	1	
3	ALL MODELS	PM2001016	DECAL PARKING BRAKE	1	
4	ALL MODELS	PM2001017	DECAL STARTING SWITCH BLUE	1	
5	ALL MODELS	PM2001018	DECAL POSITION LEVER	1	
6	ALL MODELS	PM2001019	DECAL GEAR SHIFTER LEVER 1-N-R	1	
7	ALL MODELS	PM2001020	DECAL GEAR SHIFTER LEVER 3-N-2	1	
8	ALL MODELS	PM2001021	DECAL 4WD ENGAGE DISENGAGE	1	
9	ALL MODELS	PM2001022	DECAL PTO SPEED 540-N-540E	1	
10	ALL MODELS	PM2001023	DECAL RANGE	1	
11	ALL MODELS	PM2001024	DECAL POWERED WITH MITSUBISHI ENGINE	1	
12	ALL MODELS	PM2001025	DECAL HYD LIFT OPERATION INSTRUCTION	1	
13	ALL MODELS	PM2001026	DECAL HAND ACCELERATOR	1	
14	ALL MODELS	PM2001027	DECAL DANGER GEAR	1	
15	ALL MODELS	PM2001028	DECAL BELT AND FAN WARNING	1	
16	ALL MODELS	PM2001029	DECAL DANGER BATTERY	1	
17	ALL MODELS	PM2001030	DECAL PTO WARNING	1	
18	ALL MODELS	PM2001031	DECAL PTO GUARD WARNING	1	
19	ALL MODELS	PM2001032	DECAL RADIATOR CAP WARNING	1	
20	ALL MODELS	PM2001033	DECAL SEAT BELT WARNING	1	
21	ALL MODELS	PM2001034	DECAL CAUTION HYDRAULIC AND ENGINE	1	
22	ALL MODELS	PM2001035	DECAL CLUTCH PEDAL WARNING	1	
23	ALL MODELS	PM2001036	DECAL CAUTION AIR CLEANER	1	
24	ALL MODELS	PM2001037	DECAL CAUTION DOWN HILL	1	
25	ALL MODELS	PM2001038	DECAL TRACTOR SAFETY INSTRUCTIONS	1	
26	ALL MODELS	PM2001039	DECAL CAUTION ALTERNATOR	1	
27	ALL MODELS	PM2001040	DECAL ISOLATOR ASSEMBLY BATTERY	1	
28	ALL MODELS	PM2001041	DECAL HOT SURFACE WARNING	1	
29	ALL MODELS	PM2001042	DECAL QRC CYLINDER CLOSED	1	
30	ALL MODELS	PM2001043	DECAL QRC CYLINDER OPEN	1	



DECAL MODEL IDENTIFICATION

P-140

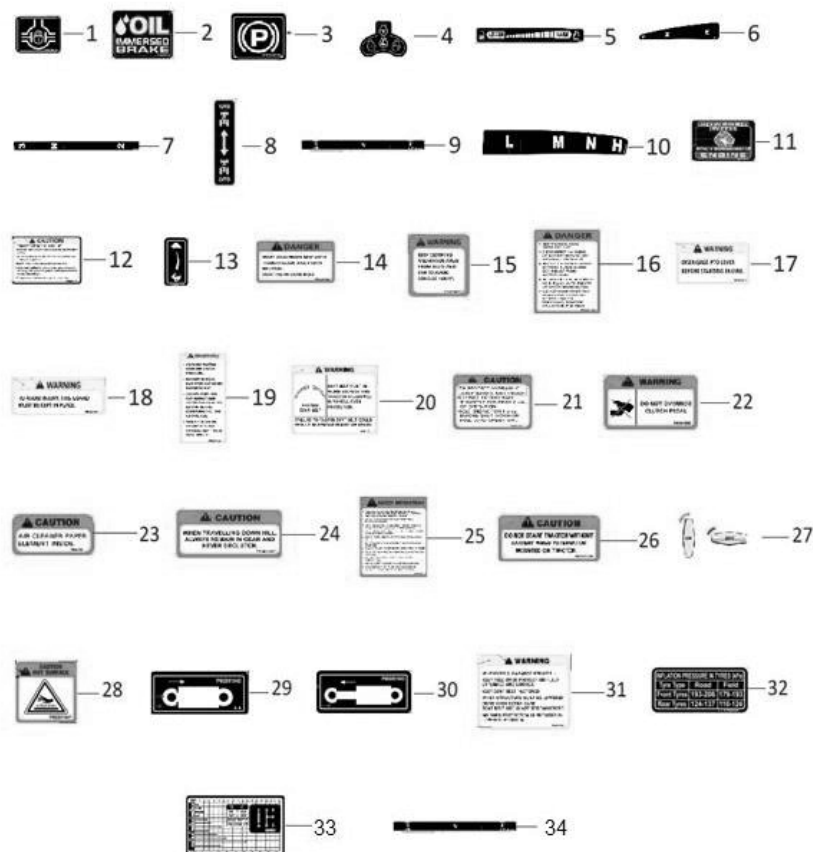




P-140

[illegible]



PROPELLER SHAFT ASSEMBLY

P-141

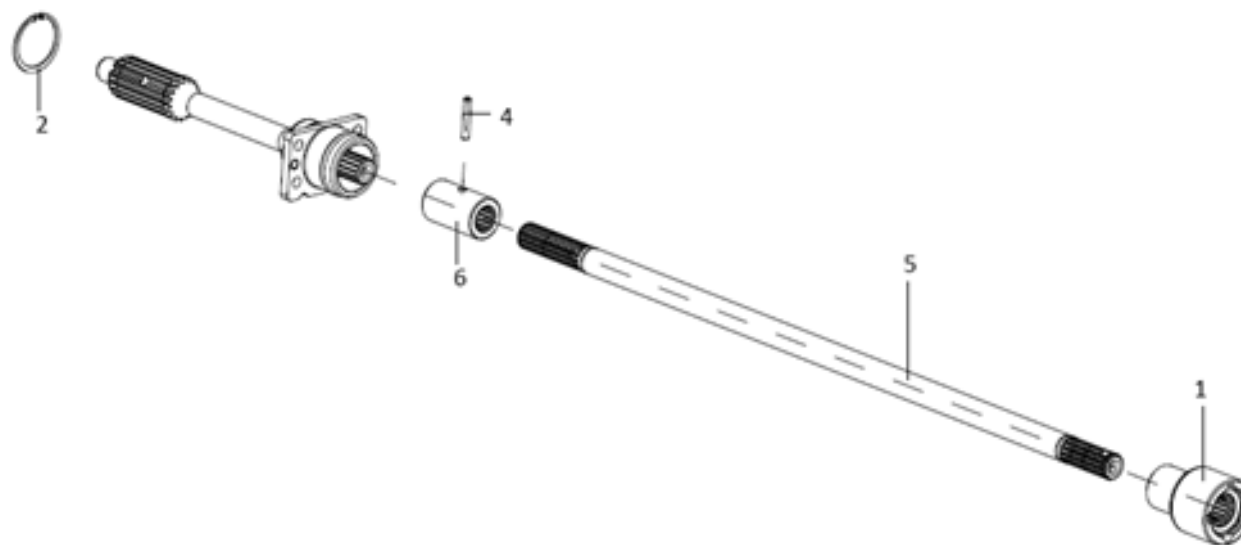




P-141

[illegible]



GUARD ASSEMBLY PROPELLER SHAFT


P-142

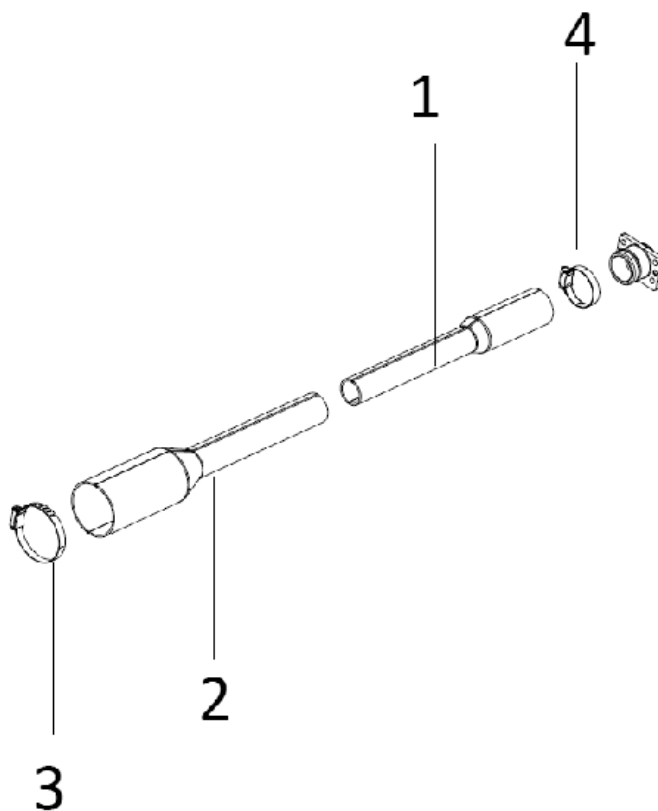



P-142


[illegible]

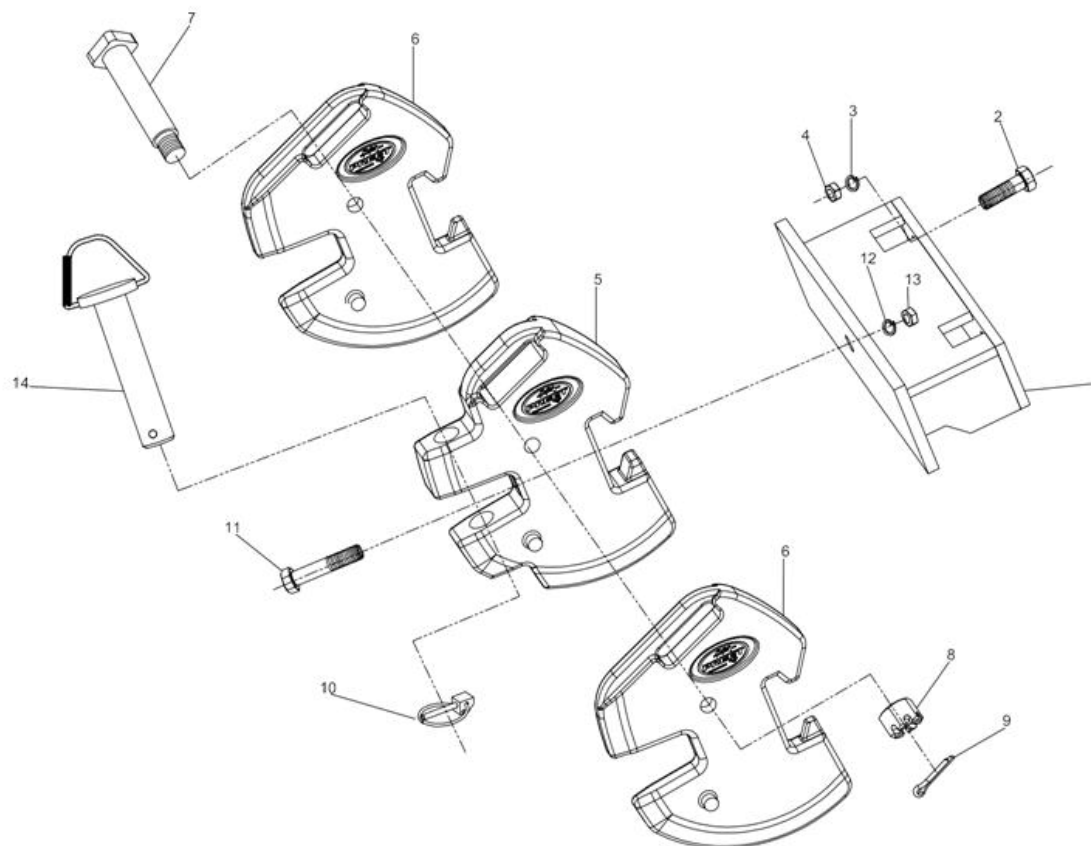



P-143

[illegible]

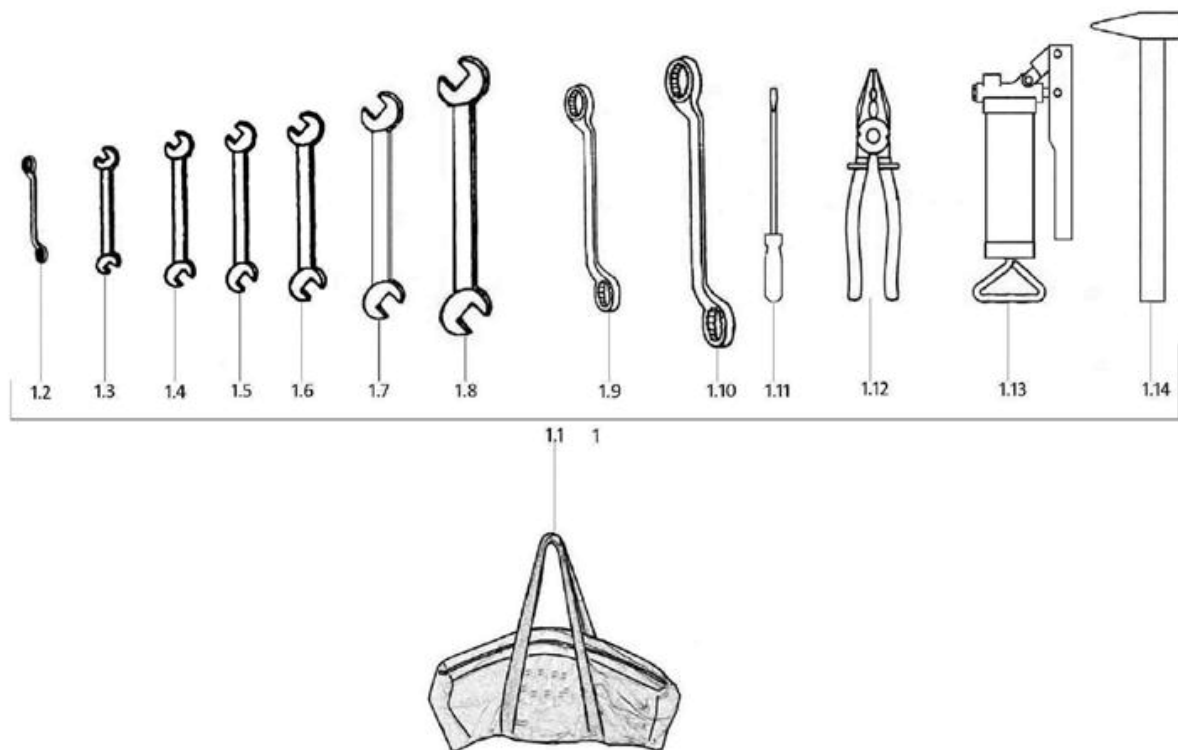



P-144

[illegible]



PREET TRACTORS PVT. LTD.

P.O. Box No. 28, Patiala Road, Nabha – 147 201 (Pb) India.

Ph. : 91-1765-220400, 222609, 229800

E-mail : info@preet.co Visit us : www.preet.co